



Epson® SureColor® T3170M/T5170M User's Guide

Contents

Epson SureColor T3170M/T5170M User's Guide	11
Introduction to Your Printer	12
Printer Features	12
Optional Equipment and Replacement Parts (US/Canada)	13
Optional Equipment and Replacement Parts (Latin America)	14
Notations Used in the Documentation	14
Printer Part Locations	
Product Parts - Front	15
Product Parts - Top/Inside	16
Product Parts - Scanner	17
Product Parts - Rear	18
Control Panel Parts	19
Using the Control Panel	20
Changing the LCD Screen Language	20
Selecting the Date and Time	21
Setting a Password and Locking the Control Panel	22
Using AirPrint	24
Assembling the Printer Stand and Paper Basket	24
Wi-Fi or Wired Networking	39
Network Security Recommendations	39
Wi-Fi Infrastructure Mode Setup	40
Selecting Wireless Network Settings from the Control Panel	41
Wi-Fi Direct Mode Setup	43
Enabling Wi-Fi Direct Mode	43
Wi-Fi Protected Setup (WPS)	45
Using WPS to Connect to a Network	45
Printing a Network Status Sheet	46
Printing a Network Connection Report	47
Network Connection Report Codes and Messages	49
Changing or Updating Network Connections	54

Accessing the Web Config Utility	54
Changing a USB Connection to a Wi-Fi Connection	55
Changing a Wi-Fi Connection to a Wired Network Connection	55
Connecting to a New Wi-Fi Router	56
Disabling Wi-Fi Features	57
Media Handling	59
Roll Paper Handling	59
Loading Roll Paper	59
Cutting Roll Paper	63
Cutting Roll Paper Manually	63
Removing Roll Paper	64
Cut Sheet Handling	66
Loading Single Cut Sheets	67
Loading Paper in the Auto Sheet Feeder	69
Removing Paper from the Auto Sheet Feeder	73
Creating Custom Paper Configurations	76
Selecting Custom Paper Configurations	77
Compatible Epson Papers	77
Paper or Media Type Settings - Printing Software	79
Selecting the Paper Settings for Each Source - Control Panel	80
Paper Type Settings - Control Panel	81
Printing from a Computer	83
Printing with Windows	83
Selecting Basic Print Settings - Windows	84
Document Size Options - Windows	86
Paper Source Options - Windows	86
Print Mode Options - Windows	87
Color Mode Options - Windows	87
Level Options - Windows	89
Using Layout Manager - Windows	
Selecting Print Layout Options - Windows	95
Page Layout Options - Windows	96
Selecting Advanced Settings - Windows	97

Roll Paper Options - Windows	98
Selecting Additional Settings - Windows	99
Printing Your Document or Photo - Windows	100
Checking Print Status - Windows	101
Saving, Sharing, and Customizing the Printer Settings	101
Saving and Sharing Print Settings - Windows	101
Editing Print Setting Displays - Windows	103
Selecting Default Print Settings - Windows	104
Changing the Language of the Printer Software Screens	105
Changing Automatic Update Options	106
Printing with the Built-in Epson Driver - Windows 10 S	107
Selecting Print Settings - Windows 10 S	108
Printing on a Mac	
Selecting Basic Print Settings - Mac	110
Paper Size Options - Mac	115
Paper Source Options - Mac	116
Print Mode Options - Mac	116
Color Mode Options - Mac	116
Level Options - Mac	118
Selecting Print Layout Options - Mac	
Selecting Advanced Settings - Mac	119
Managing Color - Mac	120
Color Matching Options - Mac	121
Sizing Printed Images - Mac	
Selecting Printing Preferences - Mac	122
Printing Preferences - Mac	122
Printing Your Document or Photo - Mac	123
Checking Print Status - Mac	124
Printing CAD Drawings	125
Printing CAD Drawings from the Printer Driver	125
Printing CAD Drawings in HP-GL/2 or HP RTL Mode	
Printing from a Shared Folder	128
Setting Up a Shared Folder	130

	Network Folder Settings	130
	Printing from a Web Browser	133
Pri	nting from a USB Memory Device	135
	USB Memory Device Requirements	135
	Connecting and Printing from a USB Memory Device	135
	Memory Device Settings Menu	136
Usi	ing the Integrated Scanner	140
	Supported Document Sizes and Types	140
	Loading Originals	141
	Using a Carrier Sheet	143
	Copying Documents or Photos	145
	Copy Settings	146
	Creating Scanning Contacts	149
	Creating a Shared Network Folder	149
	Registering Contacts for Email, Network, or FTP Scanning - Control Panel	
	Registering Contacts for Email, Network Folder, or FTP Scanning - Web Config	152
	Scanning to a Network Folder or FTP Server	154
	Scan to Network Folder/FTP Settings	156
	Scanning to Email	158
	Scan to Email Settings	160
	Scanning to a Memory Device	
	Scan to Memory Device Settings	163
Usi	ing the Control Panel Menus	166
	Accessing the Printer's Menus	166
	Paper Setting Menu	167
	Basic Settings Menu	170
	Printer Settings Menu	171
	Scan Settings Menu	179
	Network Settings Menu	180
	System Administration Settings Menu	181
	Maintenance Menu	184
	Printer Status/Print Menu	185

Replacing Ink Cartridges and Maintenance Boxes	187
Check Cartridge and Maintenance Box Status	187
Checking Ink Cartridge and Maintenance Box Status on the LCD Screen	187
Checking Ink Cartridge and Maintenance Box Status with Windows	188
Checking Cartridge and Maintenance Box Status - Mac	189
Purchase Epson Ink Cartridges and Maintenance Box	190
Ink Cartridge and Maintenance Box Part Numbers	191
Removing and Installing Ink Cartridges	191
Replacing the Maintenance Box	195
Adjusting Print Quality	197
Print Head Maintenance	197
Print Head Nozzle Check	197
Checking the Nozzles Using the Product Control Panel	198
Checking the Nozzles Using a Computer Utility	199
Print Head Cleaning	201
Cleaning the Print Head Using the Product Control Panel	202
Cleaning the Print Head Using a Computer Utility	203
Using the Powerful Cleaning Utility	205
Adjusting Print Quality Using the Product Control Panel	207
Cleaning the Auto Sheet Feeder	209
Cleaning the Roll Paper Feeder	210
Maintenance and Transportation	211
Replacing the Cutter	211
Cleaning the Integrated Scanner	214
Moving or Transporting Your Product	218
Discharging Ink	220
Solving Problems	223
Checking for Software Updates	223
Product Status Messages	224
Resetting Control Panel Defaults	
Solving Printer Problems	
Printer Does Not Turn On	226
LCD Screen Shuts Off	226

	Solving Network Problems	226
	Product Cannot Connect to a Wireless Router or Access Point	227
	Network Software Cannot Find Product on a Network	228
	Product Does Not Appear in Mac Printer Window	229
	Cannot Print Over a Network	230
	Solving Printing Problems	231
	Nothing Prints	231
	Print Head Moves But Nothing Prints	232
	Solving Paper Problems	232
	Paper Feeding Problems	233
	Printout Quality Problems	234
	Paper Does Not Collect in the Basket or is Creased	234
	Roll Paper Jam Problems	235
	Cut Sheet Paper Jam Problems	237
	Solving Print Quality Problems	238
	Overall Print Quality is Poor	238
	Lines Are Misaligned	
	Prints are Scuffed or Smeared	
	Prints are Not Positioned Properly	240
	Solving Scanning Problems	
	Cannot Feed Originals Correctly	241
	Removing a Jammed Original	242
	Scanned Image is Misaligned	
	Adjusting Scanned Image Stitching	
	Lines Appear on Scanned or Copied Documents	
	Scanned Image Size Does Not Match Print Size	
	Uninstall Your Product Software	
	Uninstalling Product Software - Windows	
	Uninstalling Product Software - Mac	248
	Where to Get Help (U.S. and Canada)	248
	Where to Get Help (Latin America)	249
Tec	chnical Specifications	252
	Windows System Requirements	252

	Mac System Requirements	253
	Paper Specifications	253
	Printable Area Specifications	255
	Ink Cartridge Specifications	257
	Dimension Specifications	258
	Electrical Specifications	259
	Environmental Specifications	260
	Interface Specifications	260
	Network Interface Specifications	260
	Scanning Specifications	261
	Safety and Approvals Specifications	262
Noti	ces	264
	Important Safety Instructions	264
	General Product Safety Instructions	264
	Ink Cartridge Safety Instructions	267
	LCD Screen Safety Instructions	268
	Wireless Connection Safety Instructions	
	FCC Compliance Statement	268
	Binding Arbitration and Class Waiver	269
	Trademarks	272
	Copyright Notice	273
	A Note Concerning Responsible Use of Copyrighted Materials	274
	Default Delay Times for Power Management for Epson Products	274
	Copyright Attribution	274

Epson SureColor T3170M/T5170M User's Guide

Welcome to the Epson SureColor T3170M/T5170M *User's Guide*. For a printable PDF copy of this guide, click here.

Introduction to Your Printer

Refer to these sections to learn more about your printer and this manual.

Note: The SureColor T3170 is shown in some illustrations in this manual, but the instructions are the same unless noted otherwise.

Printer Features
Notations Used in the Documentation
Printer Part Locations
Using the Control Panel
Using AirPrint
Assembling the Printer Stand and Paper Basket

Printer Features

The Epson SureColor T3170M and T5170M printers include these special features:

High productivity

- Print accurate A1/D-size prints in 31 seconds (SureColor T5170M) or 34 seconds (SureColor T3170M)
- Available 50-ml color or 80-ml black high-capacity ink cartridges with next generation UltraChrome XD2, 4-color, all-pigment ink
- HP-GL2 support for CAD software
- Wirelessly print from computers, tablets, or smartphones
- · Direct printing from USB devices
- · Printing files from shared folders
- Uploading print files through a web interface
- Integrated 36" scanner (SureColor T5170M) or 24" scanner (SureColor T3170M)
- Scanning to shared network folders, FTP locations, memory devices, or email addresses

Reliability

- Improved anti-dust design for reduced print head nozzle maintenance
- PrecisionCore Micro TFP print head offers Precision Droplet Control

Nozzle Verification Technology detects nozzle condition and adjusts print quality

High resolution

· Prints at resolutions up to 2400 dpi

Easy-to-use setup and operation

- Intuitive, easy-to-read, 4.3-inch, color LCD touchscreen
- Sleek, minimal design that easily fits on desktops
- Easy-to-use software
- Supports both roll and sheet paper up to 24 inches (609.6 mm) [SureColor T3170M] or 36 inches (914.4 mm) [SureColor T5170M]. The auto sheet feeder supports sheets up to 11 × 17 inches (279 × 432 mm).

Optional Equipment and Replacement Parts (US/Canada)
Optional Equipment and Replacement Parts (Latin America)

Parent topic: Introduction to Your Printer

Optional Equipment and Replacement Parts (US/Canada)

You can purchase genuine Epson ink, paper, and accessories from an Epson authorized reseller. To find the nearest reseller, visit proimaging.epson.com (U.S.) or proimaging.epson.ca (Canada), select your product series and product, and click the **Where to Buy** button. Or call 800-GO-EPSON (800-463-7766) in the U.S. or 800-807-7766 in Canada.

Option or part	Part number
Printer stand and paper basket (24") [SureColor T3170M]	C12C933151
Roll media spindle (24") [SureColor T3170M]	C12C935701
Roll media spindle (36") [SureColor T5170M]	C12C933131
Document carrier sheet (24") [SureColor T3170M]	C12C936101
Document carrier sheet (36") [SureColor T5170M]	C12C936461
Maintenance box	C13S210057
Replacement printer cutter blade	C13S210055
1-year extended Epson Preferred Plus service plan (SureColor T3170M)	EPPT3100MS1

Option or part	Part number
1-year extended Epson Preferred Plus service plan (SureColor T5170M)	EPPT5100MS1

Parent topic: Printer Features

Optional Equipment and Replacement Parts (Latin America)

You can purchase genuine Epson ink, paper, and accessories from an Epson authorized reseller. To find the nearest reseller, visit latin.epson.com or call your nearest Epson sales office.

Note: Availability of accessories varies by country.

Option or part	Part number
Printer stand and paper basket (24") [SureColor T3170M]	C12C933151
Roll media spindle (24") [SureColor T3170M]	C12C935701
Roll media spindle (36") [SureColor T5170M]	C12C933131
Document carrier sheet (24") [SureColor T3170M]	C12C936101
Document carrier sheet (36") [SureColor T5170M]	C12C936461
Maintenance box	C13S210057
Replacement printer cutter blade	C13S210055

Parent topic: Printer Features

Notations Used in the Documentation

Follow the guidelines in these notations as you read your documentation:

- Warnings must be followed carefully to avoid bodily injury.
- Cautions must be observed to avoid damage to your equipment.
- Notes contain important information about your printer.
- **Tips** contain additional printing information.

Parent topic: Introduction to Your Printer

Printer Part Locations

Check the printer part illustrations to learn about the parts on your printer.

Product Parts - Front

Product Parts - Top/Inside


Product Parts - Scanner

Product Parts - Rear

Control Panel Parts

Parent topic: Introduction to Your Printer


Product Parts - Front

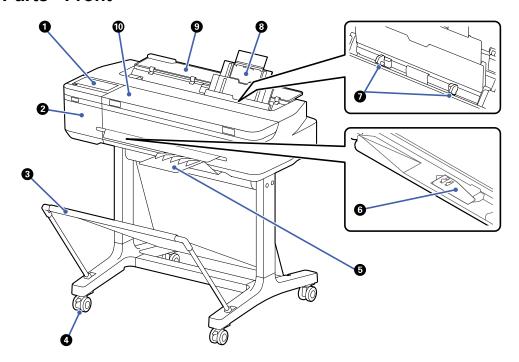

- 1 Control panel
- 2 Cutter cover
- 3 Stand and paper basket (included with optional stand)

- 4 Casters (included with optional stand)
- 5 Output tray
- 6 B1-size paper support (available only on SureColor T5170M)
- 7 Edge guides
- 8 Auto sheet feeder
- 9 Cut sheet cover
- 10 Front cover (scanner unit)


Product Parts - Top/Inside

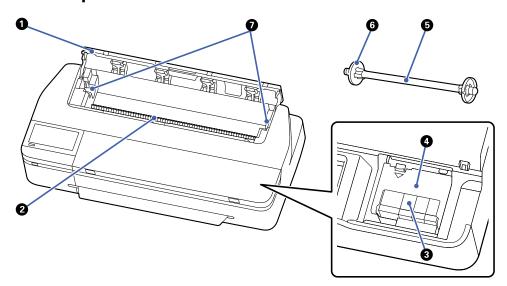

- 1 Roll paper cover
- 2 Paper feeder
- 3 Ink cartridges
- 4 Ink cartridge cover


- 5 Roll paper spindle
- 6 2-inch core paper stop (left side is removable)
- 7 Roll paper spindle holders

Product Parts - Scanner

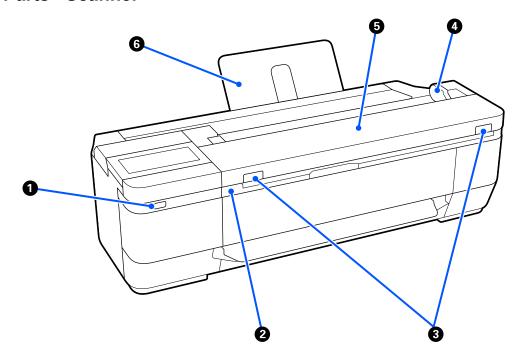

- 1 USB port
- 2 Scanner unit
- 3 Scanner lock levers (press both levers to open scanner unit)
- 4 Document guide (edge guide)
- 5 Scanner cover
- 6 Document support


Product Parts - Rear

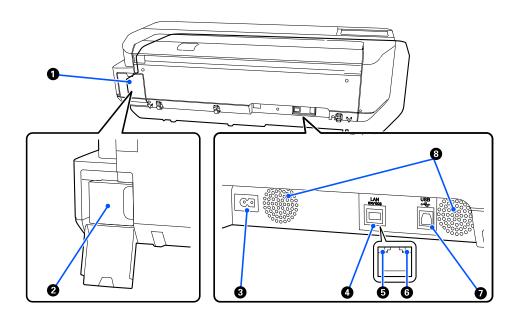

- 1 Maintenance box cover
- 2 Maintenance box
- 3 AC inlet
- 4 Ethernet **LAN** port
- 5 Status light
- 6 Data light
- 7 **USB** port
- 8 Airflow vents


Caution: Do not block the airflow vents shown above.

Control Panel Parts

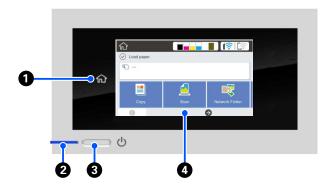

- 1 nhome button
- 2 Upower light
- 3 Opower button
- 4 LCD touchscreen

LCD Screen Display

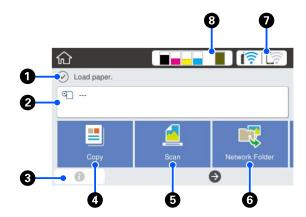

- 1 Status messages
- 2 Roll paper information

When roll paper is not loaded, - - - is displayed.

- 3 Information icon (displays notifications or warnings)
- 4 Copy menu
- 5 Scan menu
- 6 **Network Folder** menu
- 7 Network Connection Settings
 - : No Ethernet connection
 - : Ethernet connection established
 - R: No Wi-Fi connection
 - : Wi-Fi network error or the product is searching for a connection
 - : Wi-Fi connection established; the number of bars indicates signal strength
 - : No Wi-Fi Direct connection
 - : Wi-Fi Direct connection established
- 8 **Supply Status** (displays remaining ink cartridge and maintenance box levels)

Parent topic: Printer Part Locations

Using the Control Panel

See these sections to learn about the control panel and select control panel settings.

Changing the LCD Screen Language

Selecting the Date and Time

Setting a Password and Locking the Control Panel

Parent topic: Introduction to Your Printer

Changing the LCD Screen Language

You can change the language used on the LCD screen.

- 1. Press the \(\hat{\psi} \) home button, if necessary.
- 2. Select **Settings > Language**.

You see this screen:



- 3. Select a language.
- 4. Press the nhome button to exit.

Parent topic: Using the Control Panel


Selecting the Date and Time

Before using your product, select the current date, time, and daylight saving phase in your area, and choose your preferred date and time format.

Note: This setting can be locked by an administrator. If you cannot access or change this setting, contact your administrator for assistance.

- 1. Press the \(\hat{\alpha} \) home button, if necessary.
- 2. Select Settings > General Settings > Basic Settings > Date/Time Settings.

You see this screen:

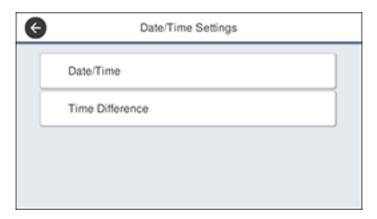

- 3. Select Date/Time.
- 4. Select the date format you want to use.
- 5. Use the on-screen keyboard to enter the current date and select **OK**.
- 6. Select the time format you want to use.
- 7. Use the on-screen keyboard to enter the current time and select **OK**.
- 8. Press the nhome button to exit.

Parent topic: Using the Control Panel

Setting a Password and Locking the Control Panel

You can set an administrator password to lock the following settings and prevent them from being changed:


- Network settings
- Certain Printer Settings
- · Certain Maintenance Settings
- System Administration settings
- Web Config settings
- EpsonNet Config settings

Note: This setting can be locked by an administrator. If you cannot access or change this setting, contact your administrator for assistance.

Note: For more information on administration settings, see the *Administrator's Guide*.

- 1. Press the nhome button, if necessary.
- 2. Select Settings > General Settings > System Administration > Security Settings > Admin Settings.

You see a screen like this:

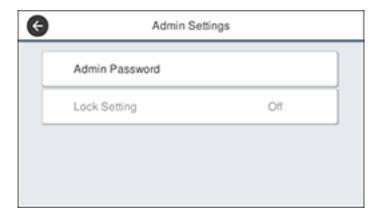

- 3. Select Admin Password.
- 4. Select **Register**.
- 5. Use the on-screen keyboard to enter a password and select **OK**.
- 6. Enter the password again to confirm and select **OK**.

Note: Keep a copy of your password in a safe place.

- 7. Select **OK**.
- 8. Select **Lock Setting > On** to lock settings.

A prompt appears confirming that you want to enable locked settings. Select **Yes** to enable the setting and return to the home screen.

You must enter the admin password to access any of the locked settings.

Note: If you forget your password, contact Epson for assistance.

Parent topic: Using the Control Panel

Using AirPrint

AirPrint enables instant wireless printing from iPhone, iPad, iPod touch, and Mac without the need to install drivers or download software.



- 1. Load paper in your product.
- 2. Set up your product for wireless printing. See the link below.
- 3. Connect your Apple device to the same wireless network that your product is using.
- 4. Print from your device to your product.

Note: For details, see the AirPrint page on the Apple website.

Parent topic: Introduction to Your Printer

Related topics


Wi-Fi or Wired Networking

Assembling the Printer Stand and Paper Basket

Follow these steps to assemble the printer stand and paper basket for the SureColor T5170M printer.

Note: You can purchase an optional printer stand and paper basket for the SureColor T3170M printer.


Before you begin, make sure you have enough space to set up the printer as shown here.

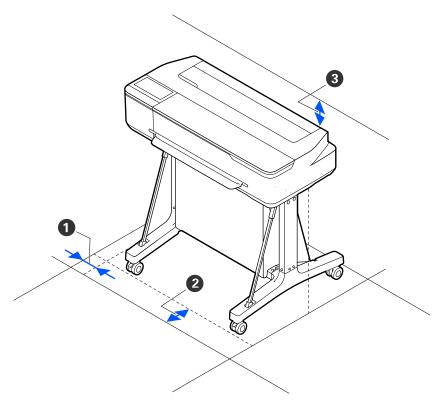

- 1 2 inches (50 mm)
- 2 12 inches (310 mm)
- 3 6 inches (150 mm)


Note: At least two people are required to lift the printer onto the stand after it is assembled.

1. Make sure you have all of these items for assembly:

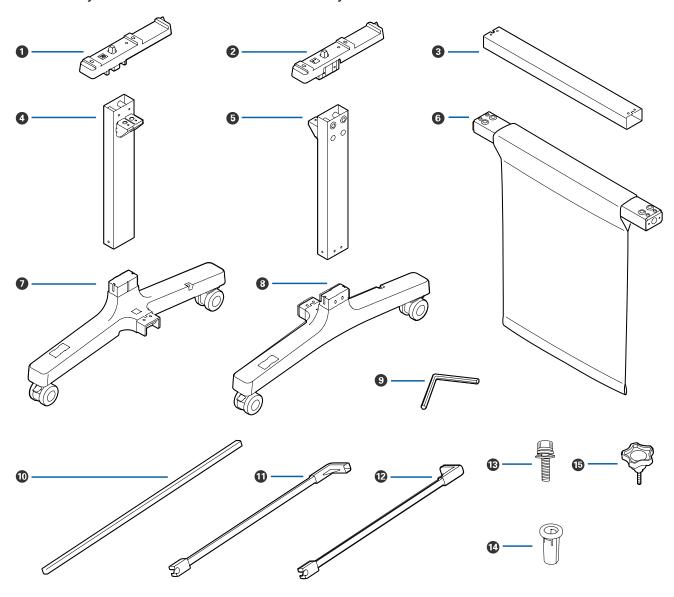


1 Left mounting bracket


- 2 Right mounting bracket
- 3 Support brace
- 4 Left leg
- 5 Right leg
- 6 Paper basket bar
- 7 Left leg base (square hole is the front side)
- 8 Right leg base (square hole is the front side)
- 9 Allen wrench
- 10 Paper basket rod
- 11 Left paper basket support rod
- 12 Right paper basket support rod
- 13 Screws (28; 24 if thumbscrews are included)
- 14 Screw holders (4)
- 15 Thumbscrews (4; not included with all stands)
- 2. Attach the support brace to the left leg base and the right leg base.

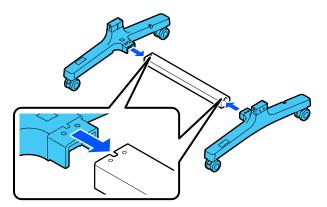


3. Use the Allen wrench to insert 8 screws (four on each side) into the holes on the support brace and leg bases.

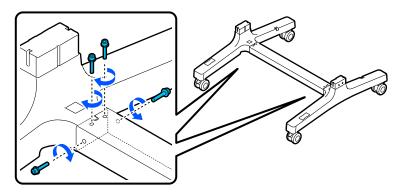


4. Attach the legs to the bases.

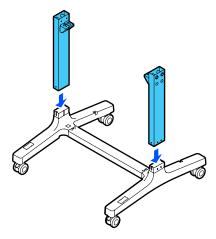


5. Insert 8 screws (4 on each side) into the holes in the legs.

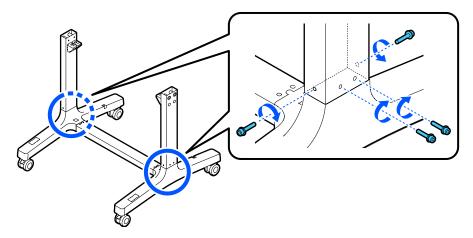


6. Push in the cloth on the paper basket bar so it does not get caught between the bar and the legs, and attach the bar to the legs.

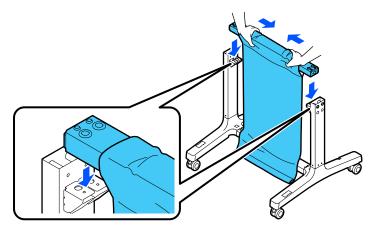


Note: Make sure the L and R stickers on the paper basket bar are correctly oriented with the L and R stickers on the leg bases.

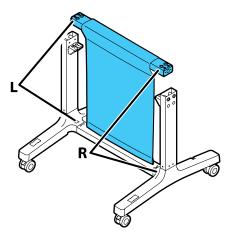


7. Insert 4 screws (2 on each side) into the holes on the paper basket bar to secure it to the legs.

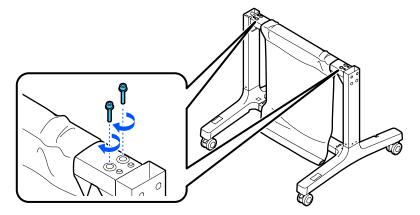


8. Make sure the L and R stickers on the mounting brackets are correctly oriented with the left and right legs and attach them as shown.

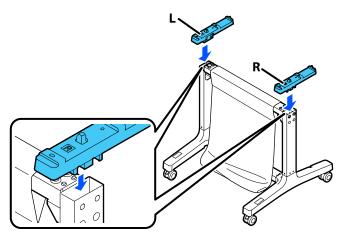


9. Insert 4 screws into 4 screw holders (2 on each side) and insert them into the holes on the legs to secure the mounting brackets.

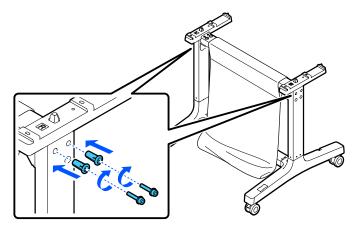


10. Slide the paper basket rod into the pocket on the end of the paper basket cloth.

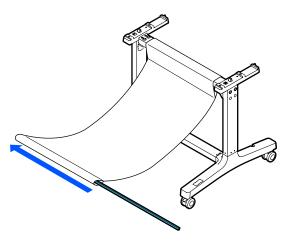


11. Insert the top of the paper basket support rods through the loops on the paper basket cloth and attach them to the paper basket rods.

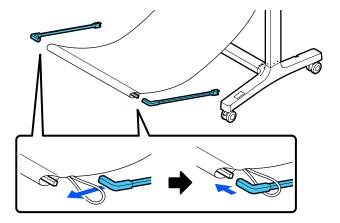


12. Insert the ends of the paper basket support rods into the holes on the leg bases.

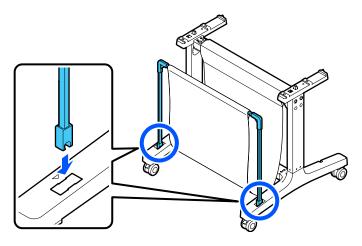


13. Close the paper basket as shown.

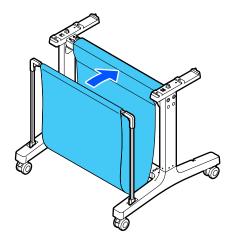


14. On the back of the paper basket and stand, attach the loops on the paper basket cloth to the hooks on the leg bases as shown.

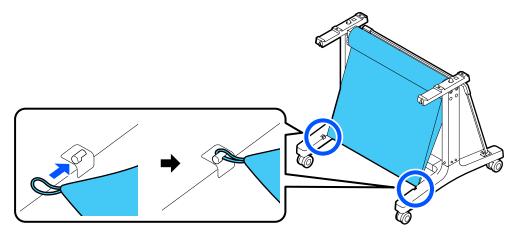


15. If necessary, connect the grounding wire as shown.

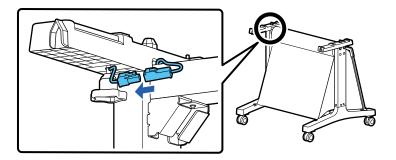


16. On the front of the stand, lock the casters.

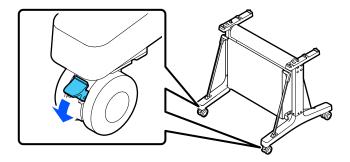


17. Have at least two people lift the printer using the indented areas as shown.

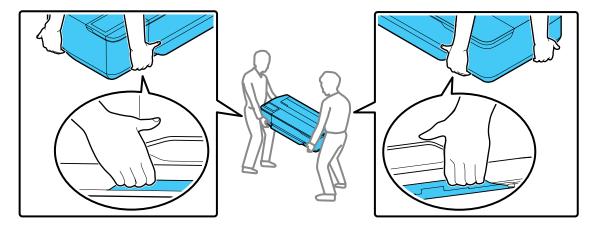

Caution: Do not hold the printer by the paper support. You may damage it.

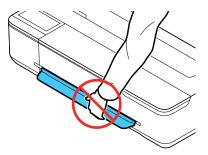


18. Align the notches on the printer with the notches on the back of the stand as shown and place the printer on the stand.

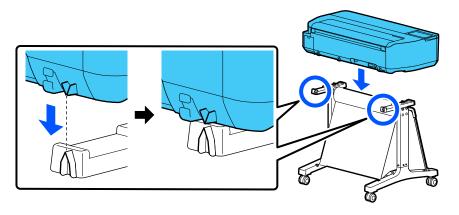


19. Do one of the following:

• If your stand does not include thumbscrews, insert 4 screws (2 on each side) into the bottom of the mounting brackets to secure the printer to the stand. On the left rear side, insert the screw through the wired loop on the printer as shown.

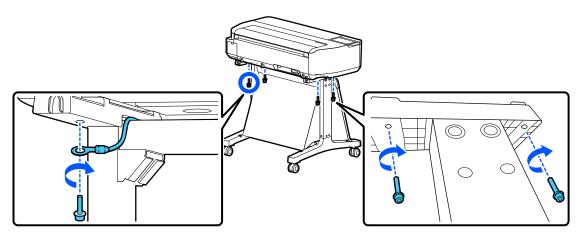

• If your stand includes thumbscrews, insert 4 thumbscrews (2 on each side) into the bottom of the mounting brackets to secure the printer to the stand. On the left rear side, insert the thumbscrew through the wired loop on the printer as shown.

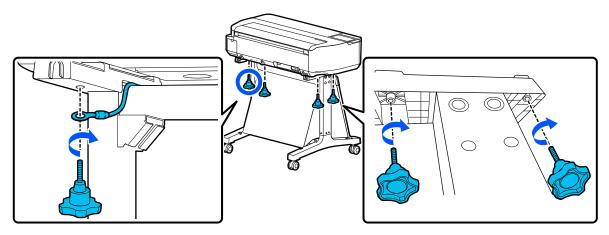

Parent topic: Introduction to Your Printer

Related references

Optional Equipment and Replacement Parts (US/Canada)
Optional Equipment and Replacement Parts (Latin America)

Wi-Fi or Wired Networking

See these sections to use your product on a Wi-Fi or wired network.

Network Security Recommendations

Wi-Fi Infrastructure Mode Setup

Wi-Fi Direct Mode Setup

Wi-Fi Protected Setup (WPS)

Printing a Network Status Sheet

Printing a Network Connection Report

Changing or Updating Network Connections

Network Security Recommendations

To help deter unauthorized access to your product over a network, you should protect your network environment using appropriate security measures.

Security measures such as these can help deter threats such as loss of user data, use of telephone and fax lines, and other intrusions:

Enable security on your wireless LAN

Enable the appropriate security on the wireless LAN you plan to use with your product. Network security such as a network password can deter interception of traffic over the wireless LAN. Your router may already have a default password enabled by your Internet service provider (ISP). See your ISP and router documentation for instructions on how to change the default password and better secure your network.

· Connect your product only to a network protected by a firewall

Connecting your product directly to the Internet may leave it vulnerable to security threats. Instead, connect it to a router or other network connection protected by a firewall. Your router may already have a firewall set up by your Internet service provider; check with your ISP for confirmation. For best results, set up and use a private IP address for your network connection.

Change the default administrator password on your product


If your product has an option to set an administrator password, change the default administrator password to deter access by unauthorized users to personal data stored on your product, such as IDs, passwords, and contact lists.

Parent topic: Wi-Fi or Wired Networking

Wi-Fi Infrastructure Mode Setup

You can set up your product to communicate with your computer using a wireless router or access point. The wireless router or access point can be connected to your computer over a wireless or wired network.

Note: You cannot connect to a wired and wireless network at the same time.

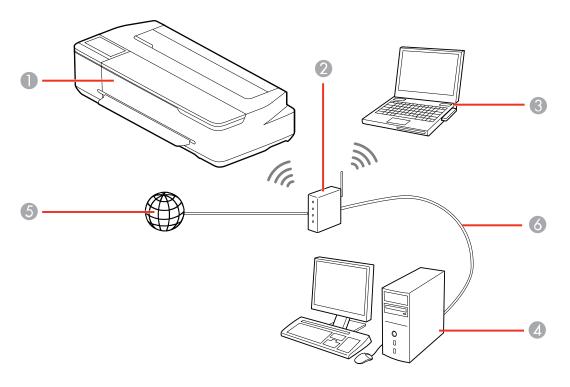

- 1 Epson product
- 2 Wireless router or access point
- 3 Computer with a wireless interface
- 4 Computer
- 5 Internet
- 6 Ethernet cable (used only for wired connection to the wireless router or access point)

Selecting Wireless Network Settings from the Control Panel

Parent topic: Wi-Fi or Wired Networking

Selecting Wireless Network Settings from the Control Panel


You can select or change wireless network settings using your product control panel.

To install your product on a wireless network, install the necessary software by downloading it from the Epson website. The installer program guides you through network setup.

Note: This setting can be locked by an administrator. If you cannot access or change this setting, contact your administrator for assistance.

- 1. Press the nhome button, if necessary.
- 2. Select the icon.

You see a screen like this:

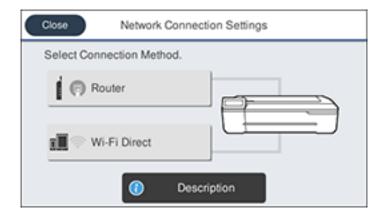

- 3. Select Router > Start Setup or Change Settings > Wi-Fi Setup Wizard.
- 4. Select the name of your wireless network or select **Enter Manually** to enter the name manually. Use the on-screen keyboard to enter your network name.

5. Select the **Enter Password** field and enter your wireless password using the on-screen keyboard.



Note: The network name and password are case sensitive. Be sure to correctly enter uppercase and lowercase letters, and numeric or special characters.

- To move the cursor, press the left or right arrows.
- To enter numbers or symbols, select 123#.
- To change the case of letters, select
- To delete the previous character, select
- To enter a space, select Space.
- 6. Select **OK** when you finish entering your password.
- 7. Confirm the displayed network settings and select **Start Setup** to save them.
- 8. If you want to print a network setup report, select **Print Check Report**. (Otherwise, select **OK**.)
- 9. Press the nhome button to exit.


You see the ricon on the LCD screen and should be able to connect to your product directly from your computer or device, and then print. If you are printing from a computer, make sure you installed the network software from the Epson website.

Note: If you don't see the ricon, you may have selected the wrong network name or entered the password incorrectly. Repeat these steps to try again.

Parent topic: Wi-Fi Infrastructure Mode Setup

Wi-Fi Direct Mode Setup

You can set up your product to communicate directly with your computer or another device without requiring a wireless router or access point. In Wi-Fi Direct Mode, the product itself acts as a network access point for up to 4 devices.

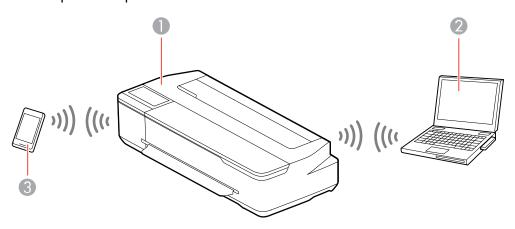

- 1 Epson product
- 2 Computer with a wireless interface
- 3 Other wireless device

Enabling Wi-Fi Direct Mode

Parent topic: Wi-Fi or Wired Networking


Enabling Wi-Fi Direct Mode

You can enable Wi-Fi Direct mode to allow direct communication between your product and computer or other devices without a wireless router or access point.

Note: This setting can be locked by an administrator. If you cannot access or change this setting, contact your administrator for assistance.

- 1. Press the \(\hat{\psi} \) home button, if necessary.
- 2. Select the ion.

You see a screen like this:

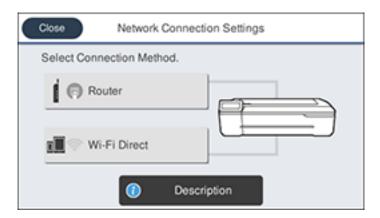

3. Select Wi-Fi Direct > Start Setup > Start Setup.

You see a screen like this:



- 4. Use your computer or wireless device to select the Wi-Fi network name (SSID) displayed on the LCD screen, then enter the password shown.
- 5. Press the 1 home button to exit.

You see the picon on the LCD screen and should be able to connect to your product directly from your computer or device, and then print. If you are printing from a computer, make sure you installed the network software from the Epson website.

Note: If you don't see the icon on the LCD screen, you may have selected the wrong network name or entered the password incorrectly. Repeat these steps to try again.

Parent topic: Wi-Fi Direct Mode Setup

Wi-Fi Protected Setup (WPS)

If your network uses a WPS-enabled wireless router or access point, you can quickly connect your product to the network using Wi-Fi Protected Setup (WPS).

Note: To check if your router is WPS-enabled, look for a button labeled **WPS** on your router or access point. If there is no hardware button, there may be a virtual WPS button in the software for the device. Check your network product documentation for details.

Using WPS to Connect to a Network


Parent topic: Wi-Fi or Wired Networking

Using WPS to Connect to a Network

If you have a WPS-enabled wireless router or access point, you can use Wi-Fi Protected Setup (WPS) to connect your product to the network.

Note: This setting can be locked by an administrator. If you cannot access or change this setting, contact your administrator for assistance.

- 1. Press the nhome button, if necessary.
- 2. Select the icon.

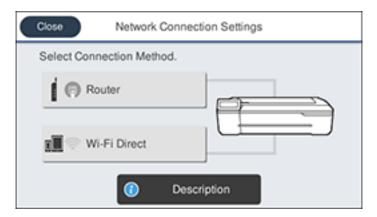

- 3. Select Router > Start Setup or Change Settings > Push Button Setup (WPS).
- 4. Follow the instructions on the LCD screen to complete WPS setup.
- 5. Press the $\widehat{\mathbf{w}}$ home button to exit.

You see the ricon on the LCD screen and should be able to connect to your product directly from your computer or device, and then print. If you are printing from a computer, make sure you installed the network software from the Epson website.

Note: If you don't see the ricon, repeat these steps to try again.


Parent topic: Wi-Fi Protected Setup (WPS)

Printing a Network Status Sheet

You can print a network status sheet to help you determine the causes of any problems you may have using your product on a network.

Before you begin, make sure paper is loaded in the product.

- 1. Press the nhome button, if necessary.
- 2. Select Settings > General Settings > Network Settings > Network Status.

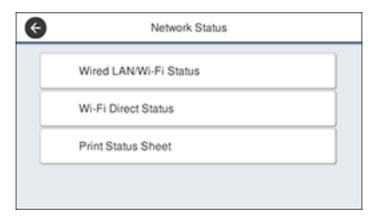

3. Select Print Status Sheet > Print.


Examine the settings shown on the network status sheet to diagnose any problems you have.

Parent topic: Wi-Fi or Wired Networking

Printing a Network Connection Report

You can print a network connection report to view solutions to any problems you may have using your product on a network.

- 1. Press the nhome button, if necessary.
- 2. Select **Settings**.
- 3. Select **General Settings**.

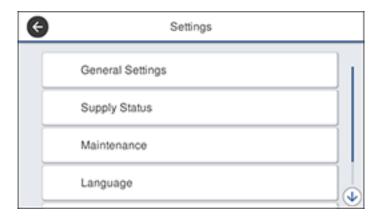

- 4. Select Network Settings.
- 5. Select Connection Check.
- 6. Select Print Check Report.
- 7. Select **Print**.


Examine the error codes and solutions shown on the network connection report.

Network Connection Report Codes and Messages

Parent topic: Wi-Fi or Wired Networking

Network Connection Report Codes and Messages

Check the error codes and messages on the network connection report to solve problems you may encounter with network connections. The tables here list solutions to problems based on the error codes and messages that may appear on the top of the report.

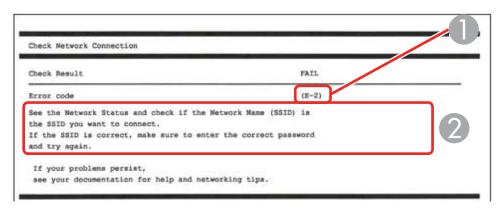

- 1 Error code
- 2 Message

Note: Error codes and messages listed here may not all apply to your product.

Error Codes and Messages

Error code and message	Solution
E-1 Confirm that the network cable is connected and network devices such as hub, router, or access point are turned on.	Make sure your router, access point, and/or hub are turned on, and the network cable is securely connected to your device and to your product. If you are trying to set up Wi-Fi, remove the network cable and set up Wi-Fi again. Ethernet and Wi-Fi cannot be connected at the same time.

Error code and message	Solution
E-2, E-3, or E-7	Check the following:
No wireless network names (SSID) found. Confirm that the router/access point is turned on and the wireless network (SSID) is set up correctly. Contact your network administrator for assistance. No wireless network names (SSID) found. Confirm that the wireless network name (SSID) of the PC you wish to connect is set up correctly. Contact your network administrator for assistance. Entered security key/password does not match the one set for your router/access point. Confirm security key/password. Contact your network administrator for assistance.	Make sure your router or access point is turned on, and is correctly connected to your computer or network device.
	Turn off the router or access point, wait about 10 seconds, and turn it on again.
	Move your product closer to your router or access point, and remove any obstacles between them. Also move your product away from devices such as wireless phones or microwaves.
	Confirm that the SSID shown on the network connection report matches the label on your router or access point. Also make sure your SSID uses only ASCII characters and symbols, or your product cannot display the SSID correctly.
	If you are trying to connect using the WPS push button method, make sure your router or access point supports it.
	If you are using a network password, check the label on your router or access point to confirm that you are using the correct password, or check with your network administrator or router/access point documentation.
	If you are connecting to a smart device that generates an SSID, check the device documentation for the SSID and password you should use.
	If your wireless connection suddenly disconnects, and another smart device was added to the network using a WPS push button method or your network was set up using a non-WPS push button method, try downloading and installing your product software again.

Error code and message	Solution
E-5 Security mode (e.g. WEP, WPA) does not match the current setting of the printer. Confirm security mode. Contact your network administrator for assistance.	If the security on your router or access point is not one of the following types, change the type of security on your router or access point and reset your product's network settings. • WEP-64 bit (40 bit)
	• WEP-128 bit (104 bit)
	WPA PSK (TKIP/AES); also known as WPA Personal
	WPA2 PSK (TKIP/AES); also known as WPA2 Personal
	WPA (TKIP/AES)
	WPA2 (TKIP/AES)
E-6 MAC address of your printer may be filtered. Check whether your router/access point has restrictions such as MAC address filtering. See the documentation of the router/access point or contact your network administrator for assistance.	If your router or access point has MAC address filtering enabled, register your product's MAC address so it is not filtered. Locate the MAC address on the network connection report and check your router or access point documentation for instructions.
	If your router or access point is using shared authentication with WEP security, confirm that you are using the correct authentication key and index.
	If your router or access point limits the number of connected devices, raise the connection limit. See your router or access point documentation for instructions.
E-8 Incorrect IP address is assigned to the printer. Confirm IP address setup of the network device (hub, router, or access point). Contact your network administrator for assistance.	If your product's Obtain IP Address setting is set to Auto , enable DHCP on your router or access point. If it is set to Manual , the IP address may be out of range or on a different network segment; set a valid IP address using your product control panel or the Web Config utility.
	You can also try turning off your product and the router or access point, waiting about 10 seconds, and turning them on again.

Error code and message	Solution
E-9 Confirm the connection and network setup of the PC or other device. Connection using the EpsonNet Setup is available. Contact your network administrator for assistance.	Make sure your computer or network device are turned on. Also make sure that you can access the Internet and other devices on the same network from the devices you are trying to connect to your product.
	If you still cannot connect to your product, turn off your router or access point, wait about 10 seconds, and turn it on again. Download and install your product software again to reset your network settings.
E-10 Confirm IP address, subnet mask, and default gateway setup. Connection using the EpsonNet Setup is available. Contact your network administrator for assistance.	Make sure other devices on the network are turned on and do the following:
	If your product's Obtain IP Address setting is set to Manual , check the IP address, subnet mask, and default gateway addresses on the network connection report to see if they are correct. If not, correct the settings.
	If DHCP is enabled, set your product's Obtain IP Address setting to Auto . If you want to use the DHCP-assigned address as a static address, set the Obtain IP Address setting to Manual , enter the product's IP address as listed on the network connection report, and set the subnet mask to 255.255.255.0.
	If you still cannot connect to your product, turn off your router or access point, wait about 10 seconds, and turn it on again.
E-11 Setup is incomplete. Confirm default gateway setup. Connection using the EpsonNet Setup is available. Contact your network administrator for assistance.	If you set your product's TCP/IP Setup setting to Manual , check that the default gateway address listed on the network connection report is correct. Also turn on the device that is set as the default gateway.

Error code and message	Solution
E-12	Make sure other devices on the network are turned on and
Confirm the following:	do the following:
-Entered security key/password is correct	Make sure the IP address, subnet mask, and default gateway addresses are correct, if you are entering them
-Index of the security key/password is set to	manually.
the first number	Confirm that the subnet mask and default gateway
-IP address, subnet mask, or default	addresses for other devices are the same.
gateway setup is correct	Make sure the IP address does not conflict with other devices.
Contact your network administrator for assistance.	
	If you still cannot connect to your product, do the following:
	Turn off your router or access point, wait about 10 seconds, and turn it on again.
	Download and install your product software again to reset your network settings.
	 If your router or access point uses WEP security with several registered passwords, make sure that the first registered password is set on your product.
E-13	Make sure your router, access point, and/or hub are
Confirm the following:	turned on. Also make sure the TCP/IP setup on your
-Entered security key/password is correct	router, access point, and/or hub is not set manually; this may cause your product's network settings to differ from
-Index of the security key/password is set to	the manually set up devices.
the first number	If you still cannot connect to your product, do the
-Connection and network setup of the PC	following:
or other device is correct	Turn off your router or access point, wait about 10
Contact your network administrator for	seconds, and turn it on again.
assistance.	 Download and install your product software again to reset your network settings.
	If your router or access point uses WEP security with several registered passwords, make sure that the first registered password is set on your product.

Network Environment Messages

Message	Solution
*Multiple network names (SSID) that match your entered network name (SSID) have been detected. Confirm network name (SSID).	Check the settings on your router and other access points to make sure each one uses a different SSID.
The Wi-Fi environment needs to be improved. Turn the wireless router off and then turn it on. If the connection does not improve, see the documentation for the wireless router.	Move your product closer to your router or access point, and remove any obstacles between them. Then turn off your router or access point, wait about 10 seconds, and turn it back on again. If you still cannot connect to your product, check the documentation that came with your router or access point for solutions.
*No more devices can be connected. Disconnect one of the connected devices if you want to add another one.	You can connect up to 4 computers or other devices to your product using a Wi-Fi Direct (Simple AP) connection. If you want to add another device, disconnect an existing connected device first.

Parent topic: Printing a Network Connection Report

Changing or Updating Network Connections

See these sections to change or update how your product connects to a network.

Accessing the Web Config Utility

Changing a USB Connection to a Wi-Fi Connection

Changing a Wi-Fi Connection to a Wired Network Connection

Connecting to a New Wi-Fi Router

Disabling Wi-Fi Features

Parent topic: Wi-Fi or Wired Networking

Accessing the Web Config Utility

You can select your product's network settings and confirm its operating status using a web browser. You do this by accessing your product's built-in Web Config utility from a computer or other device that is connected to the same network as your product.

Note: For more information on the Web Config utility, see the Administrator's Guide.

- 1. Print a network status sheet.
- 2. Locate the IP address for your product that is listed on the network status sheet.
- 3. On a computer or other device connected to the same network as your product, open a web browser.
- 4. Enter your product's IP address into the address bar.

You see the available Web Config utility options.

Parent topic: Changing or Updating Network Connections

Related tasks

Printing a Network Status Sheet

Changing a USB Connection to a Wi-Fi Connection

If you have already connected your product to your computer using a USB connection, you can change to a Wi-Fi connection.

- 1. Disconnect the USB cable from your product.
- 2. Uninstall your product software.
- 3. Download and install your product software from the Epson website using the instructions on the *Start Here* sheet.

Parent topic: Changing or Updating Network Connections


Related concepts

Uninstall Your Product Software

Changing a Wi-Fi Connection to a Wired Network Connection

If you have already connected your product to your computer wirelessly, you can change to a wired network connection if necessary.

- 1. Press the nhome button, if necessary.
- 2. Select the icon.

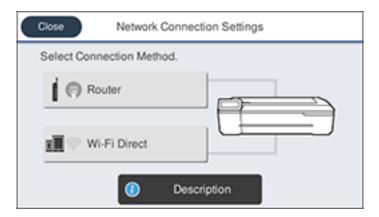

3. Select Description > Wired LAN Connection Method > Start Setup.

The Wi-Fi connection is disabled. Select **OK**.

- 4. Connect one end of an Ethernet network cable to the product's **LAN** port.
- 5. Connect the other end to any available LAN port on your router or access point.

Parent topic: Changing or Updating Network Connections

Connecting to a New Wi-Fi Router

If you change the wireless router you have been using on your network, you need to update your product's Wi-Fi connection to the new router.

Note for Latin America: If you are using a 5 GHz wireless router, set the router to operate in dual band (2.4 GHz and 5 GHz) mode. If your router uses a single network name (SSID) for both the 2.4 GHz and 5 GHz band, give each band its own network name (SSID) instead, such as Home Network 2.4 GHz and Home Network 5 GHz. See your router documentation or contact your internet service provider for instructions.

- 1. Do one of the following:
 - Windows: Uninstall your product software.
 - Mac: Go to the next step.

2. Download and install your product software from the Epson website using the instructions on the *Start Here* sheet.

Parent topic: Changing or Updating Network Connections

Related concepts

Uninstall Your Product Software

Disabling Wi-Fi Features


You may need to disable your product's Wi-Fi features if you change your network connection type or need to solve a problem with your network connection.

Note: Before disabling Wi-Fi features, make a note of your product's SSID (network name) and password.

Note: This setting can be locked by an administrator. If you cannot access or change this setting, contact your administrator for assistance.

- 1. Press the nhome button, if necessary.
- 2. Select the icon.

You see a screen like this:

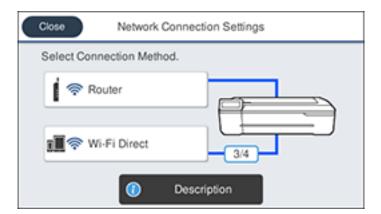

- 3. Select Router > Start Setup or Change Settings > Others > Disable Wi-Fi.
- 4. Select **Yes** to disable Wi-Fi.

Parent topic: Changing or Updating Network Connections

Media Handling

See these sections to load and handle media on your product.

Note: Some illustrations show the SureColor T3170, but the instructions are the same unless otherwise noted.

Roll Paper Handling
Cut Sheet Handling
Creating Custom Paper Configurations
Compatible Epson Papers
Paper or Media Type Settings - Printing Software
Selecting the Paper Settings for Each Source - Control Panel

Roll Paper Handling

See these sections to load, cut, and remove roll paper in your product.

Loading Roll Paper Cutting Roll Paper Removing Roll Paper

Parent topic: Media Handling

Loading Roll Paper

Load roll paper onto the spindle before loading the roll paper in the printer. The weight of the roll should not exceed 9.3 lbs (4.2 kg) for the SureColor T3170M, or 13 lbs (5.9 kg) for the SureColor T5170M.


Note: To prevent dust from accumulating inside the printer, always keep the roll paper cover and cut sheet cover closed unless you are loading or unloading media.

Note: This product does not support 3-inch core diameter media.


1. Remove any tape and protective paper from the end of the roll. Make sure the paper is cut straight across to avoid paper feeding problems.

Note: Avoid touching the surface of your paper or leaving it on a dusty area.


- 2. Make sure **Load paper** is displayed on the home screen.
- 3. Open the cut sheet cover.

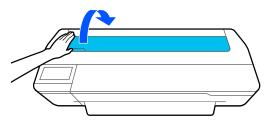

4. Release the central lock and open the roll paper cover.




5. Remove the spindle.




6. Remove the transparent paper stop from the spindle.




7. Insert the spindle into the roll paper core as shown, with the lead edge of the roll paper facing towards you.




8. Push the fixed paper stop against the roll paper until there is no gap between the paper stop and the roll paper.




9. Attach the transparent paper stop to the spindle and press it in until there is no gap between the paper stop and the roll paper.



10. Place the roll paper into the printer with the black end of the spindle on the right.

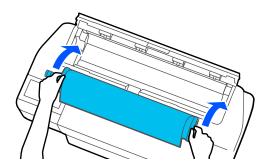


11. Insert the leading edge of the roll paper into the paper feeder until you hear a beep.

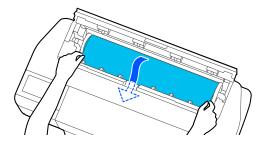

Note: Make sure the leading edge of the roll paper is not bent or skewed, or a paper jam or skew error may occur.

12. Close the roll paper cover and the cut sheet cover.

Note: When you load B1 (27.8×39.4 inches [707×1000 mm]) paper in the SureColor T5170M, raise the B1 width paper support as shown or the printout may be scuffed or soiled. Lower the support when printing on any other paper size.

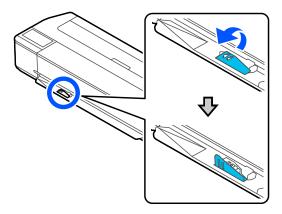

13. Select the paper type you loaded on the LCD screen and set the remaining amount, if necessary. If your printer includes a stand and paper basket, make sure the paper basket is open to catch printouts.

Parent topic: Roll Paper Handling

Related references

Compatible Epson Papers
Roll Paper Options - Windows
Paper Specifications

Related tasks

Removing Roll Paper Selecting Advanced Settings - Mac

Cutting Roll Paper

The printer has a built-in cutter that can automatically cut most paper types. When Auto Cut is turned on, paper is automatically cut after each page prints, or if the roll paper leading edge is not straight.

Caution: Use of the built-in cutter is not recommended for commercially available canvas or synthetic paper, as it may dull the blade and require more frequent blade replacement. When you print on this paper type, disable the **Auto Cut** setting and cut the print off the roll manually.

To switch between automatic or manual cutting methods, adjust the **Auto Cut** settings in the printer driver. The setting selected in the printer driver overrides the control panel setting.

Cutting Roll Paper Manually

Parent topic: Roll Paper Handling

Related references

Roll Paper Options - Windows

Related tasks

Selecting Advanced Settings - Mac


Cutting Roll Paper Manually

You can keep your prints on the roll until you manually cut them.

- 1. Turn off the **Auto Cut** setting in the printer driver or the control panel, depending on the situation:
 - If you want to cut the paper manually, turn off the setting in the printer driver. Select Advanced > Roll Paper Option > Auto Cut.

Note: The **Auto Cut** setting in the printer driver takes priority over the setting in the control panel. The printer driver setting returns to automatic cutting when you close the application.

- If you are using a paper type that cannot be cut with the built-in cutter, turn off the setting in the
 control panel. From the roll paper information area, select Advanced Media Setting > Auto Cut >
 Off.
- 2. Print your document.
- 3. From the roll paper information area, select Feed/Cut Paper.
- 4. To move the paper into a cutting position, press and hold **∀ Forward** or **↑ Backward** until the position you want to cut appears at the dotted line as shown.




- 5. To cut the paper, select \ll Cut.
 - If the auto cut setting is turned off only in the printer driver, the paper is cut and the paper leading edge returns to the print wait position.
 - If the auto cut setting is turned off in the control panel, select **Cut** to manually cut the paper with scissors or select **Print Cutting Guideline** to print a line on the paper to guide with manual cutting.

Parent topic: Cutting Roll Paper


Removing Roll Paper

When you finish printing on roll paper, you should remove it from the printer to avoid indenting or creasing the lead edge of the paper.

1. Open the cut sheet cover.

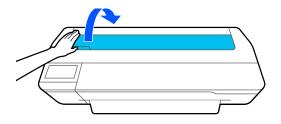


2. Release the central lock and open the roll paper cover.




3. Select **Remove** on the LCD screen. The roll paper rewinds and ejects automatically.

Note: Make sure the roll paper is rewound completely before removing it from the printer.


4. Hold both ends of the spindle and lift it up from the spindle holder.



5. Remove the transparent paper stop from the spindle.




6. Remove the spindle from the roll paper.




7. Place the roll paper in its original package.

Note: Store roll paper on its end or horizontally (if the packaging end-caps are installed). Never store roll paper on its edge, as a flat spot can develop and lead to imaging artifacts on the prints. Do not store roll paper in dusty areas. Print head maintenance and cleanings increase if dust accumulates on the paper.

8. Reattach the transparent paper stop to the spindle.



9. Place the spindle back into the printer.

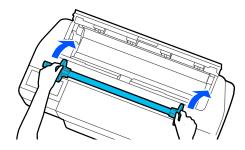

10. Close the roll paper cover and the cut sheet cover.

Note: To prevent dust from accumulating inside the printer, always keep the roll paper cover and cut sheet cover closed unless you are loading or unloading media.

Parent topic: Roll Paper Handling

Cut Sheet Handling

You can load a variety of types and sizes of cut sheet paper in your product.

Loading Single Cut Sheets
Loading Paper in the Auto Sheet Feeder
Removing Paper from the Auto Sheet Feeder


Parent topic: Media Handling

Loading Single Cut Sheets


You can print on a variety of cut sheet paper types and sizes up to 24 inches (61 cm) [SureColor T3170M] or 36 inches (91 cm) [SureColor T5170M] wide and 0.1 inch (0.27 mm) thick. You can load and print on one sheet at a time.

Before printing on cut sheets, remove any loaded roll paper, close the auto sheet feeder, and remove the output tray.


- 1. Make sure **Load paper** is displayed on the home screen.
- 2. Select Paper Setting > Cut Sheet (1 sheet) on the LCD screen
- 3. Open the cut sheet cover.

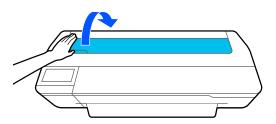

4. Load one sheet of paper, printable side up in portrait orientation. Align the right edge of the paper with the right mark line and plastic ledge on the printer and the left mark line for the paper size you are using.

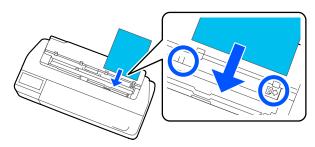


5. Insert the paper into the paper feeder until you hear a beep.

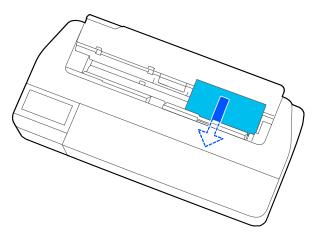

Note: Make sure the leading edge of the paper is straight to prevent a skew error or paper jam.

6. Select the paper type and size you loaded on the LCD screen.

Note: When you load B1 (27.8 × 39.4 inches [707 × 1000 mm]) paper in the SureColor T5170M, raise the B1 width paper support as shown or the printout may be scuffed or soiled. Lower the support when printing on any other paper size.

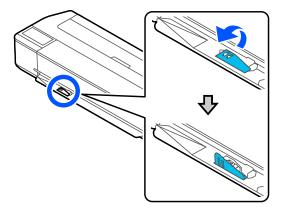

Note: If your printer includes a stand and paper basket, make sure the paper basket is open to catch the printout.

To remove a loaded cut sheet without printing, select **Paper Setting > Cut Sheet (1 sheet) > Remove**. The paper is ejected.

Parent topic: Cut Sheet Handling

Related references


Compatible Epson Papers Paper Specifications

Loading Paper in the Auto Sheet Feeder


You can load up to 50 sheets of plain paper up to 0.1 inch (0.27 mm) thick in the auto sheet feeder in the following sizes: A3 (11.7 \times 16.5 inches [297 \times 420 mm]), A4 (8.3 \times 11.7 inches [210 \times 297 mm]), Letter (8.5 \times 11 inches [216 \times 279 mm]), or Legal (8.5 \times 14 inches [216 \times 356 mm]). When using specialty paper, you can load up to five sheets of paper.

Note: Roll paper can remain loaded when using the auto sheet feeder. Switch between paper sources in the printer driver.


1. Attach the output tray by inserting its hooks into the holes in the front of the printer.

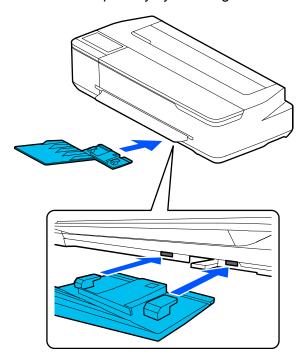


- 2. Make sure **Load paper** is displayed on the home screen.
- 3. Open the cut sheet cover.

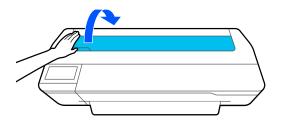


4. Tilt back the auto sheet feeder and pull the paper support extensions all the way out and upward.

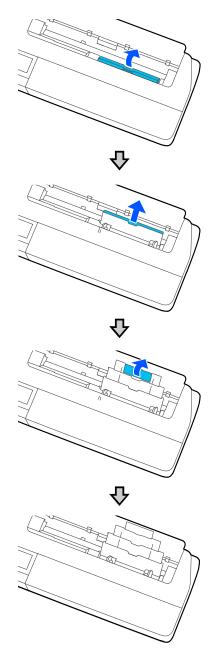


5. Slide the edge guides out.

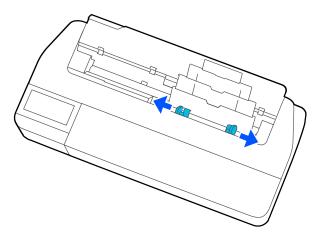

6. Load paper, printable side up, into the auto sheet feeder.

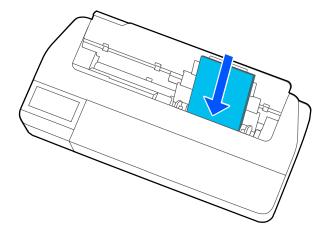

7. Adjust the edge guides to fit the paper width.

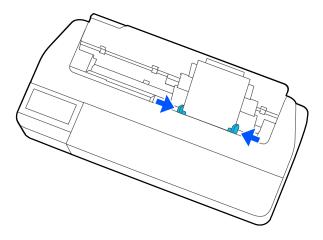

8. Select the paper type and size you loaded on the LCD screen.

Parent topic: Cut Sheet Handling

Related references

Compatible Epson Papers


Paper Specifications

Removing Paper from the Auto Sheet Feeder


Remove paper from the auto sheet feeder when you finish printing.

Note: To prevent dust from accumulating inside the printer, always remove any paper from the auto sheet feeder and keep the auto sheet feeder closed unless you are loading or unloading media.

1. Slide out the edge guides and remove the paper from the auto sheet feeder.

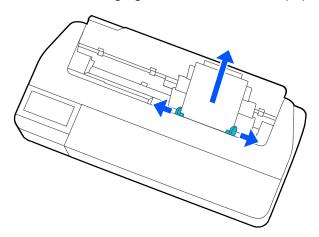

2. Fold down and push in the paper support extensions and close the auto sheet feeder.

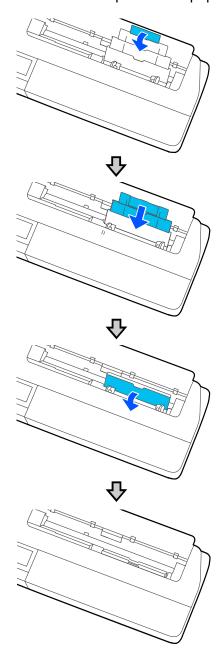

Close the cut sheet cover.

4. Remove the output tray.

Note: Remove the output tray when printing on roll paper or cut sheets so the paper can eject smoothly.

Parent topic: Cut Sheet Handling

Creating Custom Paper Configurations

You can create and store up to 10 custom paper configurations for use if printing on non-Epson paper or paper that is not supported by the Epson printer driver.

- 1. Load the type of paper that you want to configure in the printer.
- 2. Press the nhome button, if necessary.
- 3. Select Settings > General Settings > Printer Settings > Custom Paper Setting.
- 4. Select a number for the custom paper configuration.
- 5. Select **Change Name** and enter a name.
- 6. Select **OK** when you are done.
- 7. Select Change Reference Paper.
- 8. Select a paper type that is similar to the paper that you want to use.
- 9. Select Advanced Media Setting.
- 10. Select any additional settings as necessary.
- 11. When you finish changing the custom paper configuration settings, press the left arrow button to return to exit the menu.

For best results when printing on a custom paper, select the paper type on the home screen, then select **Media Adjust** and follow the on-screen directions. The settings will be automatically applied when the custom paper is selected.

Selecting Custom Paper Configurations

Parent topic: Media Handling

Related tasks

Adjusting Print Quality Using the Product Control Panel

Selecting Custom Paper Configurations

Once you have created a custom paper configuration, you can select the configuration whenever you print on the associated media.

- 1. Press the \(\hat{\alpha} \) home button, if necessary.
- 2. Select Paper Setting.
- 3. Select the paper type you are printing on.
- 4. Select Change Paper Type or Change Paper Type/Paper Size.
- 5. Select Paper Type > Others > Custom Paper.
- 6. Select the custom paper configuration you want to use.
- 7. Press the left arrow button to exit the menu.

Parent topic: Creating Custom Paper Configurations

Compatible Epson Papers

U.S. and Canada

You can purchase genuine Epson ink, paper, and accessories from an Epson authorized reseller. To find the nearest reseller, visit proimaging.epson.com (U.S.) or proimaging.epson.ca (Canada), select your product series and product, and click the **Where to Buy** button. Or call 800-GO-EPSON (800-463-7766) in the U.S. or 800-807-7766 in Canada.

Note: For the most updated list of supported Epson papers, visit proimaging.epson.com (U.S.) or proimaging.epson.ca (Canada).

Latin America

You can purchase genuine Epson ink, paper, and accessories from an Epson authorized reseller. To find the nearest reseller, visit latin.epson.com or call your nearest Epson sales office.

Note: For the most updated list of supported Epson papers, visit <u>latin.epson.com</u> or call your nearest Epson sales office.

Note: Paper/media availability varies by country.

Roll Paper

Paper Type	Size	Part number	Amount
Epson Singleweight Matte Paper	17 inches (432 mm) × 132 feet (40.2 m)	S041746	1 roll
	24 inches (610 mm) × 132 feet (40.2 m)	S041853	1 roll
	36 inches (914 mm) × 132 feet (40.2 m)	S041854	1 roll
Epson Doubleweight Matte Paper	24 inches (610 mm) × 132 feet (40.2 m)	S041385	1 roll
	36 inches (914 mm) × 132 feet (40.2 m)	S041386	1 roll
Epson Premium Luster Photo Paper (260)	24 inches (610 mm) × 100 feet (30.5 m)	S042081	1 roll
	36 inches (914 mm) × 100 feet (30.5 m)	S042082	1 roll
Epson Premium Semigloss Photo Paper (170)	24 inches (610 mm) × 100 feet (30.5 m)	S041393	1 roll
	36 inches (914 mm) × 100 feet (30.5 m)	S041394	1 roll
Epson Premium Glossy Photo Paper (170)	24 inches (610 mm) × 100 feet (30.5 m)	S041390	1 roll
	36 inches (914 mm) × 100 feet (30.5 m)	S041391	1 roll
Enhanced Adhesive Synthetic Paper	24 inches (610 mm) × 100 feet (30.5 m)	S041617	1 roll

Cut Sheets

Paper Type	Size	Part number	Amount
Epson Ultra Premium Photo Paper Luster	Letter (8.5 × 11 inches [216 × 279 mm])	S041405	50 sheets
Epson Premium Photo Paper Glossy	Letter (8.5 × 11 inches [216 × 279 mm])	S041667	50 sheets

Paper Type	Size	Part number	Amount
Epson Premium Photo Paper Semi-gloss	Letter (8.5 × 11 inches [216 × 279 mm])	S041331	20 sheets
Epson Premium Presentation Paper Matte	Letter (8.5 × 11 inches [216 × 279 mm])	S041257	50 sheets

Parent topic: Media Handling

Paper or Media Type Settings - Printing Software

For this paper	Select this Paper Type or Media Type setting
Plain paper 16 to 20 lb (60 to 75 g/m²)	Plain Paper
Epson Singleweight Matte Paper	Singleweight Matte Paper
Epson Doubleweight Matte Paper	Doubleweight Matte Paper
Epson Premium Presentation Paper Matte	Enhanced Matte Paper
	Archival Matte Paper
Epson High Quality Ink Jet Paper	Photo Quality Inkjet Paper
Coated paper (generic)	Coated Paper (Generic)
Epson Premium Glossy Photo Paper (170)	Premium Glossy Photo Paper (170)
Epson Premium Semigloss Photo Paper (170)	Premium Semigloss Photo Paper (170)
Epson Premium Photo Paper Glossy	Premium Glossy Photo Paper
	Photo Paper Glossy
Epson Premium Photo Paper Semi-gloss	Premium Semigloss Photo Paper
Epson Premium Luster Photo Paper (260)	Premium Luster Photo Paper
Epson Ultra Premium Photo Paper Luster	
Photo paper (generic)	Photo Paper (Generic)
Tracing paper/vellum paper	Tracing Paper
	Tracing Paper <low duty=""></low>
	Matte Film

For this paper	Select this Paper Type or Media Type setting
Enhanced Adhesive Synthetic Paper	Enhanced Adhesive Synthetic Paper
	Enhanced Low Adhesive Synthetic Paper
Polyester banner (generic)	Heavy Weight Polyester Banner

Note: The settings listed here are available only when printing from your computer; they do not apply to your product's control panel settings.


Parent topic: Media Handling

Selecting the Paper Settings for Each Source - Control Panel

You can change the default paper size and paper type for each source using the control panel on the product.


- 1. Press the nome button, if necessary.
- 2. Select Paper Setting.

You see a screen like this:

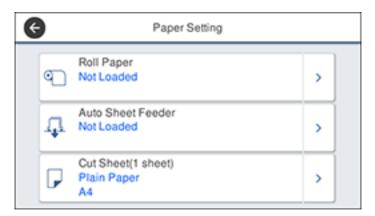

3. Select the paper source you want to select settings for.

You see a screen like this:

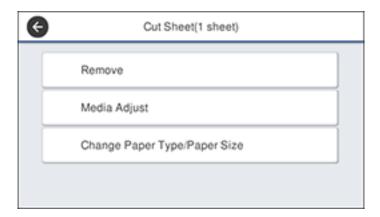

- 4. Select Change Paper Type/Paper Size.
- 5. Select Paper Type.
- 6. Select the paper type for the paper you loaded.
- 7. Select Paper Size.
- 8. Select the paper size you loaded.
- 9. Press the nh home button to exit.

Paper Type Settings - Control Panel

Parent topic: Media Handling

Paper Type Settings - Control Panel

Select a **Paper Type** setting that matches the paper you loaded. If you do not see your paper type listed, select **Others** in the menu.

Paper type loaded	Paper Type setting
Plain paper 16 to 20 lb (60 to 75 g/m²)	Plain Paper
Coated paper (generic)	Coated Paper (Generic)
Epson Doubleweight Matte Paper	Doubleweight Matte

Paper type loaded	Paper Type setting
Epson Premium Photo Paper Glossy	Premium Glossy Sheet
	Photo Paper
Epson Premium Presentation Paper Matte	Matte Paper
Tracing paper/vellum paper	CAD
Polyester banner (generic)	Heavyweight Polyester
Enhanced Adhesive Synthetic Paper	Enhanced Adhesive Syn.
	Enhanced Low Adh. Syn.

Parent topic: Selecting the Paper Settings for Each Source - Control Panel

Printing from a Computer

Before printing from your computer, make sure you have set up your product and installed its software as described on the *Start Here* sheet.

Note: If you have an Internet connection, it is a good idea to check for updates to your product software on Epson's support website. If you see a Software Update screen, select **Enable automatic checking** and click **OK**. The update scans your system to see if you have the latest product software. Follow the on-screen instructions.

Printing with Windows

Printing with the Built-in Epson Driver - Windows 10 S

Printing on a Mac

Printing CAD Drawings

Printing from a Shared Folder

Printing from a Web Browser

Printing with Windows

You can print with your product using any Windows application, as described in these sections.

Note: If you are using your Epson product with the Windows 10 S operating system, you cannot use the software described in this section. You also cannot download and install any Epson product software from the Epson website for use with Windows 10 S; you must obtain software only from the Windows Store.

Selecting Basic Print Settings - Windows

Selecting Print Layout Options - Windows

Selecting Advanced Settings - Windows

Selecting Additional Settings - Windows

Printing Your Document or Photo - Windows

Saving, Sharing, and Customizing the Printer Settings

Selecting Default Print Settings - Windows

Changing the Language of the Printer Software Screens

Changing Automatic Update Options

Parent topic: Printing from a Computer

Selecting Basic Print Settings - Windows

Select the basic settings for the document you want to print.


- 1. Open a document for printing.
- 2. Select the print command in your application.

Note: You may need to select a print icon on your screen, the **Print** option in the File menu, or another command. See your application's help utility for details.

3. If necessary, select your product name as the printer you want to use.

Note: You may also need to select **Preferences**, **Properties**, **Print Settings**, or **Printer Properties** to view your print settings.

You see the Printer Settings window:

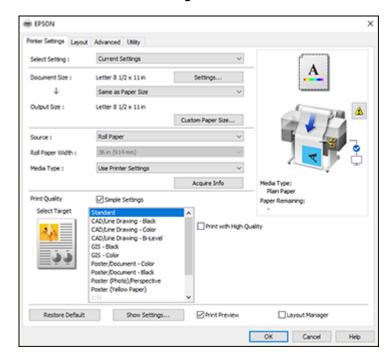

4. Select the Current Settings option or a custom setting.

- 5. Click **Settings** to select the **Document Size** setting that matches the size of the document you are printing.
- 6. If you want your printout to be a different size than the selected document size, select the **Output Size** setting.

Note: If you select **Fit to Output Size**, you can select a different output size. If you select **Same as Paper Size**, the **Document Size** and **Output Size** settings are the same.

Note: Select **Custom Paper Size** to set a user-defined output size.

7. Select the **Source** setting that matches the paper source you are using.

Note: If you select **Roll Paper**, select the width of the roll as the **Roll Paper Width** setting.

8. Select the **Media Type** setting that matches the paper you loaded.

Note: If you want to use paper settings that have been set in the printer's control panel, select **Use Printer Settings**.

Note: Click **Acquire Info** to refresh the settings if you loaded or changed paper after opening the print window.

9. Select the **Select Target** setting that matches the type of document you are printing.

Note: If you want the printer driver to determine print settings based on the document type, select the **Simple Settings** checkbox. Deselect the checkbox if you want to select your own color correction, print mode, or other settings.

- 10. If you want to prioritize quality over print speed, select the **Print with High Quality** checkbox.
- 11. If you deselect the **Simple Settings** checkbox, the following options are available:
 - Print Mode: choose a printout color
 - Color Mode: choose a color mode to fine-tune printout colors
 - Level: choose speed or quality as the printing priority
 - High Speed: select to speed up printing, but quality may be reduced
 - Finest Detail: select to smooth out jagged edges in low-resolution images

Note: The **Finest Detail** setting may reduce print speed, especially if the printer is connected wirelessly. Use a wired connection if you enable this setting.

Note: Available options depend on the selected **Select Target** setting. To choose a setting for each option, select **Custom** as the **Select Target** setting.

- 12. To see a preview of how your document will print, select **Print Preview**. (The preview appears after you click **Print** but before printing starts.)
- 13. To layout multiple print data or images for printing all at once, select Layout Manager.

Document Size Options - Windows

Paper Source Options - Windows

Print Mode Options - Windows

Color Mode Options - Windows

Level Options - Windows

Using Layout Manager - Windows

Parent topic: Printing with Windows

Related tasks

Printing Your Document or Photo - Windows

Document Size Options - Windows

You can select any of the Document Size options to size your printed image.

Same as Paper Size

Sizes your printed image to fit the selected paper size.

Fit to Roll Paper Width

Sizes your printed image to fit the width of the roll paper you loaded.

Fit to Output Size

Sizes your printed image to fit the selected output size.

Others

Sizes your printed image to a specified size.

Parent topic: Selecting Basic Print Settings - Windows

Paper Source Options - Windows

You can select any of the available options in the Source menu to print on the paper loaded in that source.

Roll Paper

Selects roll paper loaded in the roll paper holder.

Auto Sheet Feeder

Selects cut sheets loaded in the auto sheet feeder.

Sheet

Selects the cut sheet loaded in the paper feeder.

Parent topic: Selecting Basic Print Settings - Windows

Print Mode Options - Windows

You can select a Print Mode option to determine the color of your printouts.

Color

Select to print your document in color.

Black

Select to print your document in black and white (grayscale is supported).

Black (Bi-Level)

Select to print CAD drawings in black and white (grayscale is not supported).

Colored Paper (Yellow)

Select if you are printing your document on yellow paper. This option is used for some poster applications.

Parent topic: Selecting Basic Print Settings - Windows

Color Mode Options - Windows

You can adjust the **Color Mode** setting to fine-tune the colors in your printout or turn off color management in your printer software.

EPSON Standard (sRGB)

Optimizes the sRGB space and corrects the color.

Business Graphics

Performs color correction to optimize your images based on the sRGB space.

Line Drawing

Optimizes color correction for line drawings by processing the border between lines and the background as discontinuous.

GIS

Performs optimal printing for topographic maps and other geographic information system (GIS) data.

ICM

Automatically adjusts colors based on the printer's ICC profile and the selected **Media Type** setting, using the Image Color Matching system. Click the **Advanced** button to choose the input profile and other settings.


Note: In most cases, you get better results by applying color management in your application, rather than in the printer driver.

Off (No Color Adjustment)

Turns off color management in your printer software so you can manage color using only your application software.

Note: An ICC profile is required if color management is turned off.

Click **Settings** to open the **Color Controls** window, where you can specify values for adjusting brightness, contrast, saturation, and individual Cyan, Magenta, and Yellow color tones. You can choose from two Gamma settings, and use either a color circle or slide bar to adjust color.

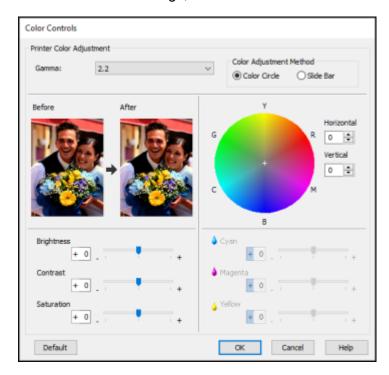

Parent topic: Selecting Basic Print Settings - Windows

Level Options - Windows

You can select a print speed or print quality priority for your printouts.

Speed

Select to prioritize print speed over print quality; quality may be reduced.

Quality

Select to prioritize print quality over print speed.

Max Quality

Select to use the maximum print quality; print speed may be slower.


Quality Options

Select print speed or print quality levels using a slider.


Parent topic: Selecting Basic Print Settings - Windows

Using Layout Manager - Windows

Layout Manager lets you include multiple pieces of print data created in different applications onto one sheet of paper for printing.

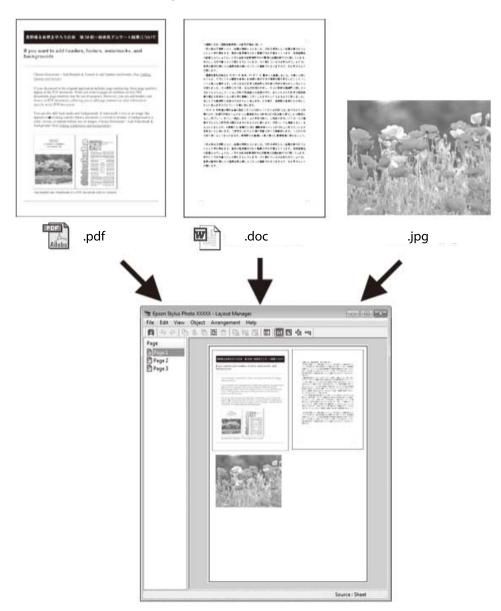


You can also place the same print data multiple times as shown here.

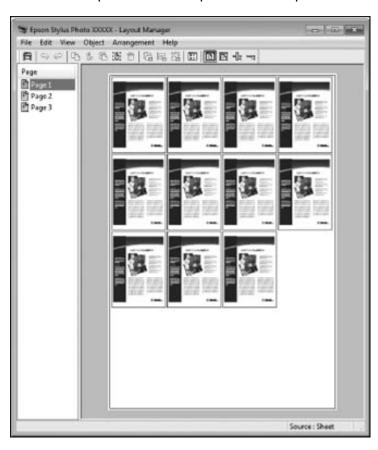

You can place print data in different sizes and orientations to maximize media usage, as shown here.




You can place print data on roll paper as shown here.

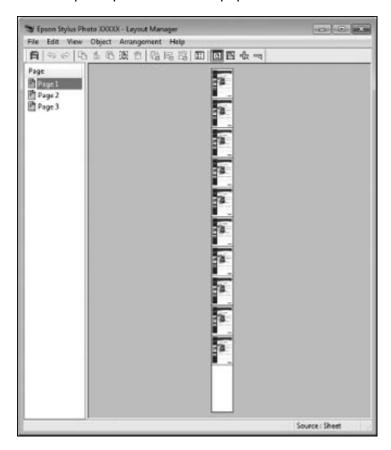

- 1. Open the file you want to print in your application.
- 2. Select the print command in your application.

3. Select the **Layout Manager** checkbox on the Printer Settings tab.

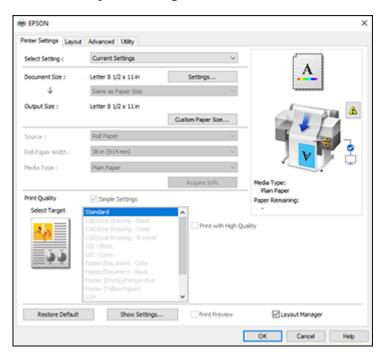

- 4. Choose an option for the **Document Size** setting that matches the size of the document in your application.
- 5. Click **OK** and then click **Print**, if necessary.

The Layout Manager screen opens and displays one page in the layout.

- 6. Leave the Layout Manager screen open and repeat steps 1 to 4 to arrange additional print data. The pages are added to the Layout Manager screen.
- 7. Do the following to arrange objects on the Layout Manager screen:
 - Drag pages to move and resize them.
 - Use the tool buttons and the Object menu to align and rotate pages.
 - Resize and replace whole pages in the Preference or Arrangement Settings screens.

Note: See the Layout Manager screen help for details.


- 8. Click **File > Properties** and select your print settings, including the size of the paper you are printing on.
- 9. Open the File menu on the Layout Manager screen and click Print.

Note: To save the current job to a file, open the **File** menu on the Layout Manager screen, save the file, and close the Layout Manager screen. To open the saved file later for editing or reprinting, right-click the printer icon in the Windows taskbar, click **Layout Manager**, and select the file.

Parent topic: Selecting Basic Print Settings - Windows

Selecting Print Layout Options - Windows

You can select a variety of layout options for your document on the Layout tab.

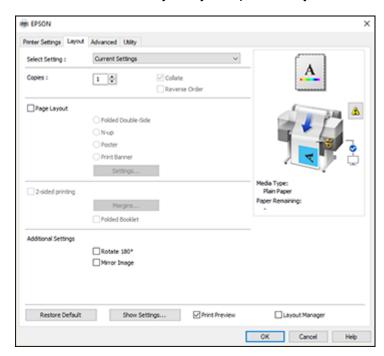

 To select multiple copies and their print order, select the Copies, Collate, and Reverse Order options.

- To print multiple pages on one sheet of paper, or print one image on multiple sheets of paper, select the **Page Layout** checkbox and select the option you want.
- To print on both sides of the paper, select the 2-sided Printing checkbox and select the options you
 want.
- To rotate or flip the printed image, select the **Rotate 180°** or **Mirror Image** checkbox.

Page Layout Options - Windows

Parent topic: Printing with Windows

Page Layout Options - Windows

You can select these Page Layout options to set up your multi-page print job.

Note: Available options depend on the Paper Source setting.

Folded Double-Side

Prints two consecutive pages on one sheet of paper. The second page is flipped and printed next to the first page, allowing the sheet to be folded to make a 2-sided document. Click **Settings** to select a binding edge option and set margins.

N-up

Prints 2 (**2-up**) or 4 (**4-up**) pages on one sheet of paper. Click **Settings** to choose the number of pages per sheet and set the page order.

Poster

Prints one image on multiple sheets of paper to create a large poster. Click the **Settings** button to select the layout and guideline options.


Print Banner

Select when using a Windows application designed for banners.

Parent topic: Selecting Print Layout Options - Windows

Selecting Advanced Settings - Windows

You can select advanced printing settings on the Advanced tab.

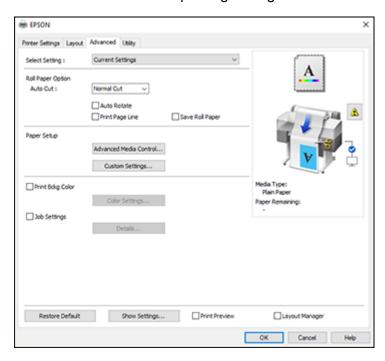

- To control how roll paper is cut after printing, select an **Auto Cut** option. Select other roll paper options as necessary.
- To print on cut sheet paper with 14 mm margins above and below your print, select Vertical Centering.
- To adjust the ink saturation level, select **Advanced Media Control**.
- To create or edit custom printing settings, select **Custom Settings**.
- To print a color background on the page, select the **Print Bckg Color** checkbox and click **Color Settings** to select the color you want to use.
- To print the time, date, and other information about your print job at the top or bottom of the page, select the **Job Settings** checkbox and click **Details** to select the settings you want to use.

Roll Paper Options - Windows

Parent topic: Printing with Windows


Roll Paper Options - Windows

Select any of the available roll paper options.

Note: Some settings may not be available, depending on the Roll Paper Option you selected for your paper size.

Auto Cut

- Off: Select this option to cut your prints manually.
- Normal Cut: Creates a margin at the top and bottom of your image and automatically cuts the paper. These margins vary by media type and may be changed from their defaults using custom media settings.

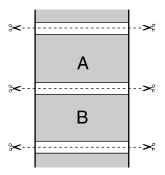

Auto Rotate

Automatically positions the image or print data to fit the roll paper.

Print Page Line

Prints lines between pages as a guide for manual cutting.


Save Roll Paper

When Auto Cut is enabled, the printer cuts the roll paper at the end of the image as positioned on the page.

Parent topic: Selecting Advanced Settings - Windows

Selecting Additional Settings - Windows

You can run maintenance utilities and select additional settings that apply to all your print jobs on the Utility tab.

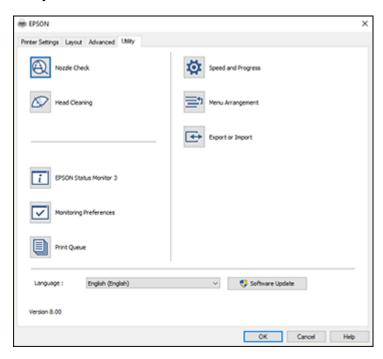

- Click **Nozzle Check** to print a nozzle check pattern to check whether the print head nozzles are clogged.
- Click **Head Cleaning** to clean the print head if you notice banding or gaps in your printouts.
- Click **Epson Status Monitor 3** to check the printer's status.
- Click **Monitoring Preferences** to select the error notifications displayed on the Epson Status Monitor 3 screen, or add a shortcut to the utility in the Windows taskbar.
- Click **Print Queue** to display a list of all waiting print jobs, view information on the data waiting to be printed, and delete or reprint the jobs.
- Click **Speed and Progress** to select various printing options.

- Click Menu Arrangement to arrange the Select Setting, Media Type, and Paper Size options by frequency of use.
- Click **Export or Import** to save the print settings to a file or import them from a file. This is useful when you want to select the same print settings on multiple computers.
- Select a **Language** option for the language you want to use for the printer software screens.

Parent topic: Printing with Windows

Related tasks


Checking the Nozzles Using a Computer Utility
Cleaning the Print Head Using a Computer Utility

Printing Your Document or Photo - Windows

Once you have selected your print settings, you are ready to save your settings and print.

1. Click **OK** to save your settings.

You see your application's Print window, such as this one:

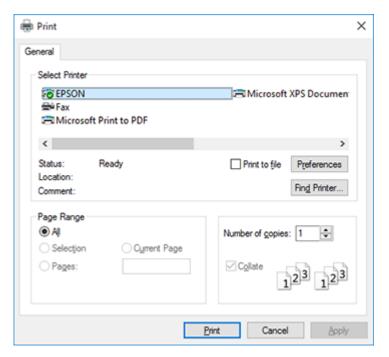


2. Click **OK** or **Print** to start printing.

Checking Print Status - Windows

Parent topic: Printing with Windows

Checking Print Status - Windows

During printing, you see this window showing the progress of your print job. It allows you to control printing and check ink cartridge status.

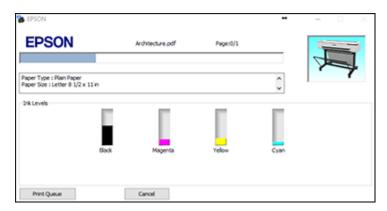

- To cancel printing, click Cancel.
- To see print jobs waiting to print, click Print Queue.

Parent topic: Printing Your Document or Photo - Windows

Saving, Sharing, and Customizing the Printer Settings

You can save groups of print settings or media settings so you can reuse them for future print jobs. You can export these settings as a file so you can share them with other users. You can also edit the settings displayed in the printer software screens.

Saving and Sharing Print Settings - Windows Editing Print Setting Displays - Windows


Parent topic: Printing with Windows

Saving and Sharing Print Settings - Windows

You can save your print settings so you can use them for future print jobs.

- 1. Make sure the selected settings on the Printer Settings, Layout, and Advanced tabs are set to what you want to save.
- 2. Under the Select Setting dropdown menu, select **Custom Settings**.

You see a window like this:

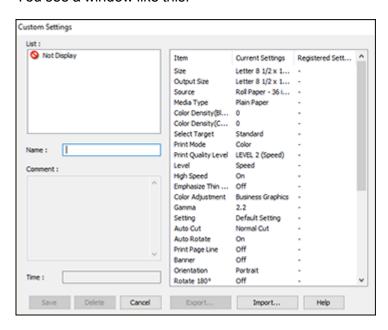

- 3. Verify that your settings are correct, enter a name for the group of settings in the **Name** field, and click **Save**.
- 4. Do the following as necessary:
 - If you need to delete a group of settings you have created, select the name of the group of settings from the list and click **Delete**.
 - To export the settings, select the name of the group of settings, click **Export**, select a location, and enter a file name.
 - To import a group of settings, click Import, select the file you want to use, and click Open. Then
 use the settings to print.

Once custom settings are saved, you can select the name of the group of settings from the Select Setting dropdown menu and use them to print.

Parent topic: Saving, Sharing, and Customizing the Printer Settings

Related tasks


Selecting Basic Print Settings - Windows Printing Your Document or Photo - Windows

Editing Print Setting Displays - Windows

You can arrange the displayed print settings so you can easily select the settings you use most often.

- 1. Click the **Utility** tab in the printer software.
- 2. Select Menu Arrangement.

You see this window:

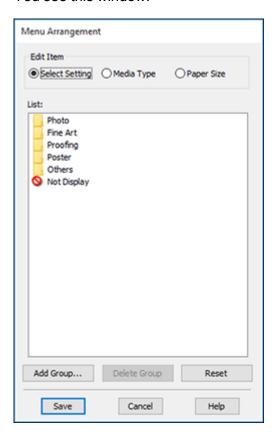

- 3. Select the item you want to edit.
- 4. Order or group items in the **List** box as follows:
 - To move and reorder items, drag and drop them in the list.
 - To add a new group (folder), click **Add Group**.
 - To delete a group (folder), select the group and click **Delete Group**.
 - To hide a group, drag and drop it to **Not Display**.

Note: If you delete a group, the group folder is deleted but the items within the folder remain.

5. Click Save.


Parent topic: Saving, Sharing, and Customizing the Printer Settings

Selecting Default Print Settings - Windows

When you change your print settings in a program, the changes apply only while you are printing in that program session. If you want to change the print settings you use in all your Windows programs, you can select new default print settings.

- 1. Access the Windows Desktop and right-click the licon for your product in the right side of the Windows taskbar, or click the up arrow and right-click lick license.
- 2. Select **Printer Settings**.

You see the printer settings window:

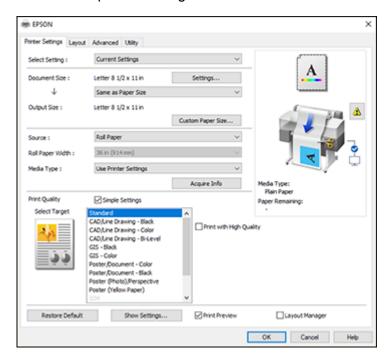

- 3. Select the print settings you want to use as defaults in all your Windows programs.
- 4. Click OK.

These settings are now the defaults selected for printing. You can still change them as needed for printing in any program session.

Parent topic: Printing with Windows

Related tasks

Selecting Basic Print Settings - Windows

Changing the Language of the Printer Software Screens

You can change the language used on the Windows printer software screens.


1. Access the Windows Desktop and right-click the icon for your product in the right side of the Windows taskbar, or click the up arrow and right-click.

2. Select Printer Settings.

You see the printer settings window.

3. Click the **Utility** tab.

You see these options:

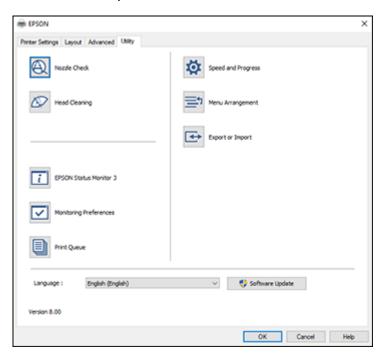

- 4. Select the language you want to use as the **Language** setting.
- 5. Click **OK** to close the printer software window.

The printer software screens appear in the language you selected the next time you access them.


Parent topic: Printing with Windows

Changing Automatic Update Options

Your printer software for Windows automatically checks for updates to the product software. You can change how often the software checks for updates or disable this feature.

- 1. Access the Windows Desktop and right-click the licon for your product in the right side of the Windows taskbar, or click the up arrow and right-click licon.
- 2. Select Software Update Settings.

You see this window:

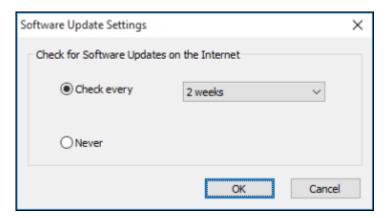

- 3. Do one of the following:
 - To change how often the software checks for updates, select a setting in the **Check every** menu.
 - To disable the automatic update feature, select the **Never** option.
- 4. Click **OK** to exit.

Note: If you choose to disable the automatic update feature, you can check for updates manually.

Parent topic: Printing with Windows

Printing with the Built-in Epson Driver - Windows 10 S

You can print with the built-in Epson printer driver using any printing program on Windows 10 S, as described in these sections.

Note: The built-in Epson driver in Windows 10 S does not include all the available print settings for your product. To print with additional settings, download and install the Epson Print and Scan utility from the Windows Store. You cannot download and install any Epson product software from the Epson website for use with Windows 10 S; you must obtain software only from the Windows Store.

Selecting Print Settings - Windows 10 S

Parent topic: Printing from a Computer

Selecting Print Settings - Windows 10 S

Select the settings for your print job in your Windows 10 S application.


- 1. Open a photo or document for printing.
- 2. Select the print command in your application.

Note: You may need to select a print icon on your screen, the **Print** option in the **File** menu, or another command. See your application's help utility for details.

3. If necessary, select your product name as the printer you want to use.

Note: You may also need to select **Properties** or **Preferences** to view your print settings.

You see a window like this:

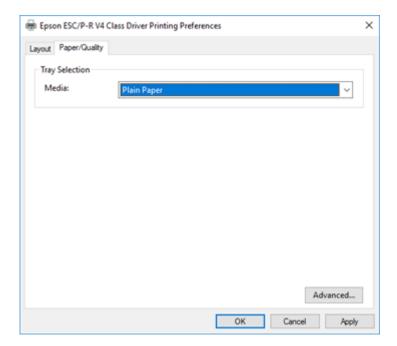


4. Select the type of paper you loaded as the **Media** setting.

Note: The setting may not exactly match the name of your paper. Check the paper type settings list for details.

5. Click the **Advanced** button.

You see a window like this:

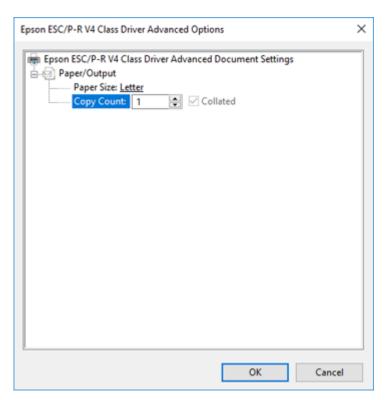

- 6. Select the size of the paper you loaded as the **Paper Size** setting.
- 7. To print multiple copies, select or enter the number as the **Copy Count** setting.
- 8. To print multiple copies of multi-page documents in sets, select the **Collated** checkbox.
- 9. Click OK.

You return to the printing preferences window.

- 10. Select the **Layout** tab.
- 11. Select the orientation of your document as the **Orientation** setting.
- 12. Click **OK** to save your settings.

You see your application's **Print** window.

13. Click **OK** or **Print** to start printing.

Parent topic: Printing with the Built-in Epson Driver - Windows 10 S

Printing on a Mac

You can print with your product using any Mac printing program, as described in these sections.

Note: If you have an Internet connection, it is a good idea to check for updates to your product software on Epson's support website or using Epson Software Updater.

Selecting Basic Print Settings - Mac Selecting Print Layout Options - Mac

Selecting Advanced Settings - Mac

Managing Color - Mac

Sizing Printed Images - Mac

Selecting Printing Preferences - Mac

Printing Your Document or Photo - Mac

Parent topic: Printing from a Computer


Selecting Basic Print Settings - Mac

Select the basic settings for the document you want to print.

- 1. Open a document for printing.
- 2. Select the print command in your application.


Note: You may need to select a print icon on your screen, the **Print** option in the File menu, or another command. See your application's help utility for details.

3. Select your product as the **Printer** setting.

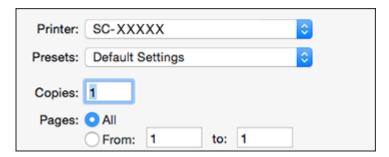

4. If necessary, click the arrow next to the Printer setting or the **Show Details** button to expand the print window.

You see the expanded printer settings window for your product:

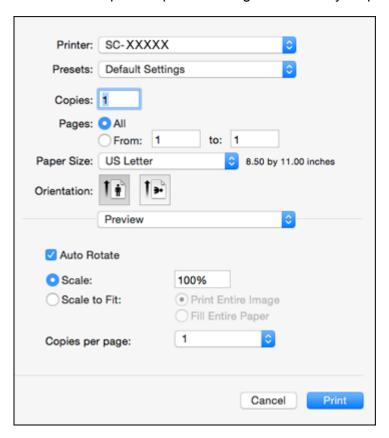

Note: The print window may look different, depending on the Mac OS version and the application you are using.

5. Select the **Copies** and **Pages** settings as necessary.

Note: If you do not see these settings in the print window, check for them in your application before printing. They may be accessible by selecting **Page Setup** from the File menu.

6. Select the size of the paper you loaded as the **Paper Size** setting.


Note: You can reduce or enlarge the size of the printed image by selecting **Paper Handling** from the pop-up menu and selecting a scaling option.

For each paper size, there are three entries in the list. In most cases, select the paper size as usual. If you wish to print a banner using banner printing software or print the image at full size without any adjustment for margins, select a paper size with (Roll Paper Banner) or (Retain Scale) in the name, such as A2 (Roll Paper Banner).

- 7. Choose portrait or landscape as the **Orientation** setting.
- 8. Select **Printer Settings** from the pop-up menu.

Note: In certain programs, you may need to select **Advanced** before you can select **Printer Settings**. For more information about printer settings, click the **?** button.

You see a screen like this:

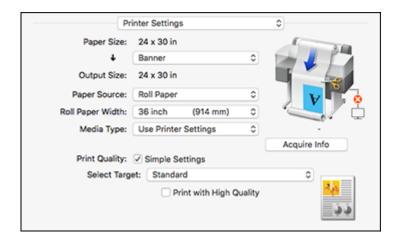

Note: Depending on the Mac OS version you are using, you may not see a **Printer Settings** option. If not, select **Printer Features** from the pop-up menu and scroll down to view all of the driver options.

9. If you want your printout to be a different size than the displayed Paper Size setting, select the **Output Size** setting in the dropdown menu.

Note: Select **Specify Size** to set a user-defined output size.

Select the Paper Source setting that matches the paper feeding method you are using.

Note: If you select Roll Paper, select the width of the roll as the Roll Paper Width setting.

11. Select the **Media Type** setting that matches the paper you loaded.

Note: If you want to use paper settings that have been set in the printer's control panel, select **Use Printer Settings**.

Note: Click **Acquire Info** to refresh the settings if you loaded or changed paper after opening the print window.

12. Select the **Select Target** setting that matches the document you are printing.

Note: If you want the printer driver to determine print settings based on the document type, select the **Simple Settings** checkbox. Deselect the checkbox if you want to select your own color correction, print mode, or other settings.

- 13. If you want to prioritize quality over print speed, select Print with High Quality .
- 14. If you deselect the **Simple Settings** checkbox, the following options are available:
 - Print Mode: choose a printout color
 - Color Mode: choose a color mode to fine-tune printout colors
 - Level: choose speed or quality as the printing priority
 - High Speed: select to speed up printing, but quality may be reduced
 - Emphasize Thin Lines: select to smooth out jagged edges in low-resolution images

Note: The **Emphasize Thin Lines** setting may reduce print speed, especially if the printer is connected wirelessly. If you enable this setting, use a wired connection.

Note: Available options depend on the selected **Select Target** setting.

15. To see a preview of how your document will print, select **Print Preview**. (The preview appears after you click **Print** but before printing starts.)

Paper Size Options - Mac
Paper Source Options - Mac
Print Mode Options - Mac

Color Mode Options - Mac

Level Options - Mac

Parent topic: Printing on a Mac

Related tasks

Selecting Advanced Settings - Mac Printing Your Document or Photo - Mac

Paper Size Options - Mac

You can select any of the Paper Size options in the Printer Settings menu to size your printed image.

Same as Paper Size

Sizes your printed image to fit the selected paper size.

Fit to Roll Paper Width

Sizes your printed image to fit the width of the roll paper you loaded.

Output Size

Sizes your printed image to fit the selected output size.

Specify Size

Sizes your printed image to a specified size.

Retain Scale

Retains the size of the original image.

Banner

Select when using an application designed for banners.

Note: If you want to select **Retain Scale** or **Banner**, but they are not available, check the Paper Size list and select a paper size that has (**Retain Scale**) or (**Roll Paper Banner**) included in the paper name. For example, to print a banner on A2-width paper, select **A2** (**Roll Paper Banner**) as the **Paper Size** setting.

Parent topic: Selecting Basic Print Settings - Mac

Paper Source Options - Mac

You can select any of the available options in the Source menu to print on the paper loaded in that source.

Roll Paper

Selects roll paper loaded in the roll paper holder.

Auto Sheet Feeder

Selects cut sheets loaded in the auto sheet feeder.

Sheet

Selects the cut sheet loaded in the paper feeder.

Parent topic: Selecting Basic Print Settings - Mac

Print Mode Options - Mac

You can select a Print Mode option to determine the color of your printouts.

Color

Select to print your document in color.

Select to print your document in black and white (grayscale is supported).

Black (Bi-Level)

Select to print CAD drawings in black and white (grayscale is not supported).

Colored Paper (Yellow)

Select if you are printing your document on yellow paper. This option is used for some poster applications.

Parent topic: Selecting Basic Print Settings - Mac

Color Mode Options - Mac

You can adjust the **Color Mode** setting to fine-tune the colors in your printout or turn off color management in your printer software.

EPSON Standard (sRGB)

Optimizes the sRGB space and corrects the color.

Business Graphics

Performs color correction to optimize your images based on the sRGB space.

Line Drawing

Optimizes color correction for line drawings by processing the border between lines and the background as discontinuous.

GIS


Performs optimal printing for topographic maps and other geographic information system (GIS) data.

Off (No Color Adjustment)

Turns off color management in your printer software so you can manage color using only your application software.

Note: An ICC profile is required if color management is turned off.

Click **Settings** to open the **Color Controls** window, where you can specify values for adjusting brightness, contrast, saturation, and individual Cyan, Magenta, and Yellow color tones. You can choose from two Gamma settings, and use either a color circle or slide bar to adjust color.

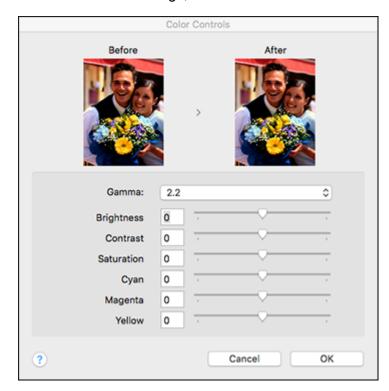

Parent topic: Selecting Basic Print Settings - Mac

Level Options - Mac

You can select a print speed or print quality priority for your printouts.

Speed

Select to prioritize print speed over print quality; quality may be reduced.

Quality

Select to prioritize print quality over print speed.

Max Quality

Select to use the maximum print quality; print speed may be slower.

Parent topic: Selecting Basic Print Settings - Mac

Selecting Print Layout Options - Mac

You can select a variety of layout options by selecting **Layout** from the pop-up menu on the print window.



- To print multiple pages on one sheet of paper, select the number of pages in the **Pages per Sheet** pop-up menu. To arrange the print order of the pages, select a **Layout Direction** setting.
- To print borders around each page on the sheet, select a line setting from the **Border** pop-up menu.
- To invert or flip the printed image, select the **Reverse page orientation** or **Flip horizontally** settings.


Parent topic: Printing on a Mac

Selecting Advanced Settings - Mac

You can select roll paper settings and adjust color density from the Advanced menu.


1. Select **Advanced** from the dropdown menu.

You see this window:

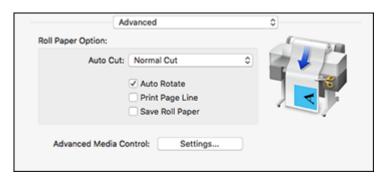


Note: Some settings may not be available, depending on the selected paper source and the Roll Paper option you selected for your paper size.

- 2. Select one of the following **Auto Cut** settings:
 - · Off: Select this option to cut your prints manually.
 - Normal Cut: Creates a margin at the top and bottom of your image and automatically cuts the
 paper. These margins vary by media type and may be changed from their defaults using custom
 media settings.

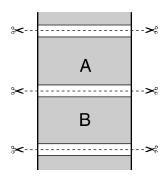

- 3. Select the following settings as necessary:
 - Select the **Auto Rotate** checkbox to automatically position the image or print data to fit the roll paper.
 - Select the **Print Page Line** checkbox to print lines between pages as a guide for manual cutting.
 - When **Auto Cut** is enabled, select the **Save Roll Paper** checkbox to have the printer cut the roll paper at the end of the image as positioned on the page.
- 4. If you want to adjust color density, click **Settings**, adjust the **Black** and **Color** settings, and click **OK**.

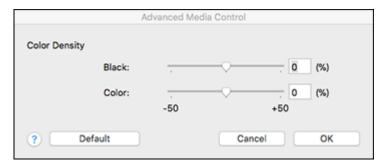

Parent topic: Printing on a Mac

Managing Color - Mac

You can adjust the Color Matching settings to fine-tune the colors in your printout, or turn off color management in your printer software.

1. Select **Color Matching** from the pop-up menu in the print window.



2. Select one of the available options.

Color Matching Options - Mac

Parent topic: Printing on a Mac

Color Matching Options - Mac

You can select from these settings on the **Color Matching** menu.

ColorSync

Prints using standard color profiles for your product and paper to help match image colors.


EPSON Color Controls

Lets you manage color using controls in your printer driver or turn off color management.

Parent topic: Managing Color - Mac

Sizing Printed Images - Mac

You can adjust the size of the image as you print it by selecting **Paper Handling** from the pop-up menu on the Print window.

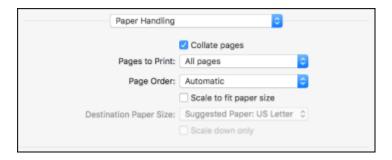

- To collate multiple copies into sets of documents, select the **Collate pages** checkbox.
- To print only selected pages in a multi-page document, select an option from the **Pages to Print** popup menu.
- To adjust the order in which pages are printed, select an option from the **Page Order** pop-up menu.
- To scale the image to fit on a specific paper size, select the **Scale to fit paper size** checkbox and select a paper size from the **Destination Paper Size** pop-up menu.
- To restrict scaling of the image to reduced sizing, select the **Scale down only** checkbox. (Deselect this checkbox when enlarging the image.)


Parent topic: Printing on a Mac

Selecting Printing Preferences - Mac

You can select printing preferences that apply to all the print jobs you send to your product.

- 1. In the Apple menu or the Dock, select **System Preferences**.
- 2. Select **Print & Fax**, **Print & Scan**, or **Printers & Scanners**, select your product, and select **Options & Supplies**.
- 3. Select Options.

You see a screen like this:

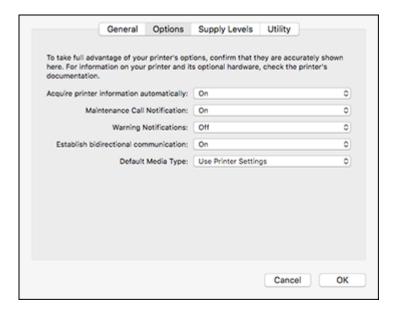

- 4. Select any of the available printing options.
- 5. Click OK.

Printing Preferences - Mac

Parent topic: Printing on a Mac

Printing Preferences - Mac

You can select from these settings on the **Options** tab.

Acquire printer information automatically

Ensures that the paper size and paper type settings are automatically updated if paper is loaded or changed after closing the print window.

Maintenance Call Notification

Alerts you if the maintenance box is nearing capacity or needs to be replaced.

Warning Notifications

Lets you choose whether or not to receive warning notifications from the printer software for various operating conditions.

Establish bidirectional communication

Allows the product to communicate with the computer. Do not change the default setting unless you experience issues when using a shared printing pool.

Default media type


Select the Media Type that you want to use as the default in the printer driver.

Parent topic: Selecting Printing Preferences - Mac

Printing Your Document or Photo - Mac

Once you have selected your print settings, you are ready to print.

Click **Print** at the bottom of the print window.

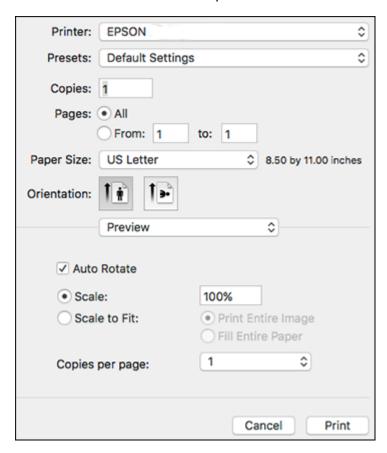

Checking Print Status - Mac


Parent topic: Printing on a Mac

Checking Print Status - Mac

During printing, you can view the progress of your print job, control printing, and check ink status.

1. Click the printer icon when it appears in the Dock.

You see the print status window:

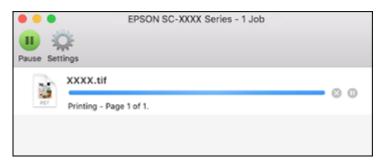

- 2. Select the following options as necessary for your Mac OS version:
 - To cancel printing, click the print job and click or **Delete**.
 - To pause a print job, click the print job and click up or **Hold**. To resume a print job, click the paused print job and click or **Resume**.
 - To pause printing for all queued print jobs, click Pause or Pause Printer.
 - To display other printer information, click **Settings** or **Supply Levels**.

Parent topic: Printing Your Document or Photo - Mac

Printing CAD Drawings

Your product can print CAD drawings from CAD software applications. You can print them from the printer driver or change settings in the product to emulate HP-GL/2 or HP RTL modes.

Note: Not all HP-GL/2 and HP RTL features are supported on the product.

Printing CAD Drawings from the Printer Driver
Printing CAD Drawings in HP-GL/2 or HP RTL Mode

Parent topic: Printing from a Computer


Printing CAD Drawings from the Printer Driver

You can print CAD drawings using your printer driver. This printing method is best for high quality views and drawings.

Note: If lines in your drawing are not printed properly, print the drawing using HP-GL/2 or HP RTL mode using the product control panel.

- 1. Open the file you want to print in your CAD software.
- 2. Click **Plot** and select your product as the printer.
- 3. Click Properties.
- 4. On the **Device and Document Settings** tab, click **Custom Properties**.

You see the printer driver window:

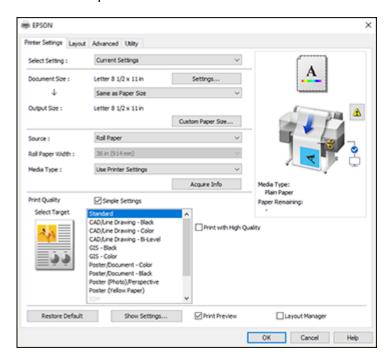

- 5. Select the **Document Size** and **Output Size** settings as necessary.
- 6. Select the **Source** setting.

Note: If you select Roll Paper, select the width of the roll as the Roll Paper Width setting.

7. Select the **Media Type** setting.

- 8. Choose one of the CAD/Line Drawing options as the **Select Target** setting.
- 9. Select any other printing settings as necessary and click **OK**.
- 10. Start printing your drawing from the CAD software.

Parent topic: Printing CAD Drawings


Printing CAD Drawings in HP-GL/2 or HP RTL Mode

You can change settings in your product's control panel to print CAD drawings using HP-GL/2 (compatible with the HP Designjet 750C) or HP RTL mode. This printing method is best for maps and blueprints, or when lines need to be emphasized.

Note: The product emulates HP-GL/2 or HP RTL commands. Not all HP-GL/2 and HP RTL features are supported on the product.

- 1. Press the $\widehat{\mathbf{m}}$ home button on your product, if necessary.
- 2. On the LCD screen, select Settings > General Settings > Printer Settings > Universal Print Settings.

You see this screen:

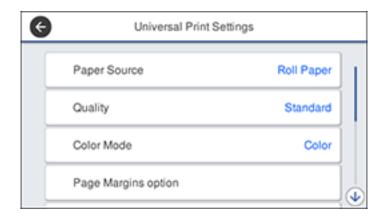


3. Make sure the **Paper Source** setting is set to **Roll Paper**.

Note: If roll paper is not selected when HP-GL2 or HP RTL print data is sent, an error occurs.

4. Select any other settings as necessary.

- 5. Select the left arrow to return to the previous screen.
- 6. Select HP-GL/2 Unique Settings.

You see this screen:

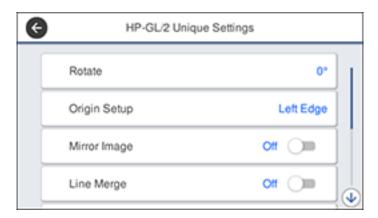

- 7. Change the settings as necessary.
- 8. Select the left arrow to return to the previous screen.
- 9. Select **Printing Language**.
 - If you are printing over USB, select **USB** and change the **Printing Language** setting to **HP-GL/2**.
 - If you are printing over a network, select **Network** and change the **Printing Language** setting to **HP-GL/2**.

Note: Make sure you return the **Printing Language** setting to **Auto** when you are done printing in HP-GL/2 mode.

- 10. Open the file you want to print in your CAD software.
- 11. Click **Plot** and select your product as the printer.
- 12. Start printing your drawing from the CAD software.


Parent topic: Printing CAD Drawings

Printing from a Shared Folder

You can select and print a file from a shared network folder.

- 1. Press the $\widehat{\mathbf{w}}$ home button on your product, if necessary.
- 2. On the LCD screen, select Network Folder.

You see this screen:

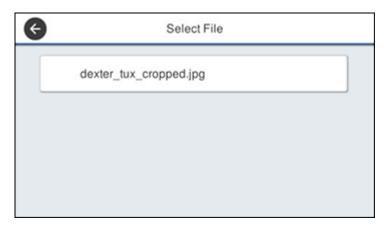

- 3. Select a single file to print.
- 4. Change the settings as necessary.
- 5. Select Print.

You can print the following file types from a shared folder:

- JPEG
- HP-GL/2
- TIFF
- PDF files scanned on the product

Your file starts printing.

Setting Up a Shared Folder Network Folder Settings

Parent topic: Printing from a Computer

Setting Up a Shared Folder

You must set up a shared network folder before printing from the folder. The folder must already exist on a networked computer accessible by the product.

- 1. Press the ŵ home button on your product, if necessary.
- 2. On the LCD screen, select **Settings > General Settings > Network Settings > Advanced > Shared Folder**.

You see this screen:



- 3. Enter the following information about the shared folder:
 - Folder Name: Enter the network path to the shared folder. You are limited to 255 characters.
 - User Name: Enter a user name for the computer.
 - Password: Enter the password for the computer.
- 4. Select **Proceed** to set up the shared folder.

Parent topic: Printing from a Shared Folder

Network Folder Settings

Basic Settings

Setting	Options	Description
Paper Source	Roll Paper	Selects the paper source
	Auto Sheet Feeder	
	Cut Sheet (1 sheet)	
Color Mode	Black/White	Selects the color mode to use when
	Color	printing

Advanced

Setting	Options	Description
Quality	Speed	Selects the print quality
	Fine	
	Super Fine	

Setting	Options	Description
Page Margins option	Clip by Margins	Subtracts the page margin value (B) from the output size selected in the Reduce/Enlarge settings (A). Any print object in the margin area is clipped and not printed.
	Oversize	Adds the page margin value (B) outside the output size selected in the Reduce/Enlarge settings (A).
Bidirectional	On Off	Select On to print in both directions, resulting in faster print speed but reduced accuracy

Setting	Options	Description
Color Mode	EPSON Standard (sRGB)	Optimizes the sRGB space and corrects the color
	Business Graphics	Performs color correction to optimize your images based on the sRGB space
	GIS	Performs color correction when printing topographical maps
	Line Drawing	Perform color correction when printing CAD drawings and other line drawings
	Off (No Color Management)	Turns off color management in the printer
Reduce/Enlarge		
Auto Fit Page	On Off	Select On to fit the short edge of the image to the width of the paper
		Note: This setting is not available if paper is not loaded into the printer.
Custom Size	Various settings	Select Actual Size to print using the image size or select a different output size

Parent topic: Printing from a Shared Folder

Printing from a Web Browser

You can upload and print files directly from the Web Config interface. This allows you to print from a computer without the printer driver for the product.

Note: Not all HP-GL/2 and HP RTL features are supported on the product.


1. Make sure paper is loaded into the product.

2. Access the Web Config interface via a web browser.

3. Select **Upload and Print** on the **Print** tab.

Note: If the Print tab is not present, check with your system administrator.

You see this screen:

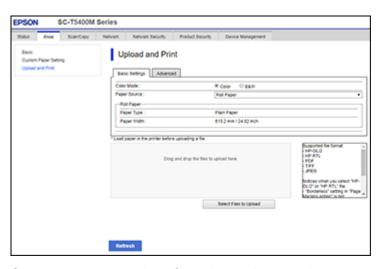

4. Select your print settings from the basic and advanced settings tab.

Note: As soon as you select a file to print, printing will begin. Make sure you select all necessary settings before selecting a file.

5. After you are done selecting print settings, drag and drop your file onto the appropriate area to start printing, or click **Select Files to Upload** and browse to the files you want to print.

You can print the following file types from the Web Config interface:

- JPEG
- HP-GL/2
- TIFF
- · PDF files scanned on the product

Parent topic: Printing from a Computer

Printing from a USB Memory Device

You can save JPG, TIFF, HP-GL/2, or PDF files on a USB memory device and then connect the device to the printer for printing.

Note: USB memory devices with security settings (such as password protection) are not supported. PDF files must be created using the scan function of an Epson inkjet printer, but cannot be created using Epson Scan or Epson Scan 2, and must not contain multiple pages with different orientations or sizes.

USB Memory Device Requirements
Connecting and Printing from a USB Memory Device

USB Memory Device Requirements

Make sure your USB memory device meets these requirements.

Note: Connections that use an extension cable, a USB hub, or a card reader cannot be guaranteed.

Format type: FAT32, FAT, or exFAT


• No security functions such as encryption or passwords

Parent topic: Printing from a USB Memory Device

Connecting and Printing from a USB Memory Device


You can print from a USB memory device connected to your printer.

1. Connect the USB memory device containing the saved data to the USB memory device port on the control panel.

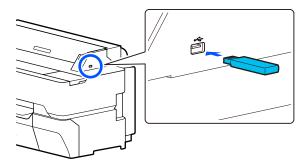

- 2. Press the nhome button, if necessary.
- 3. Select Memory Device.
- 4. Select the menu option that matches the format of the file you want to print.
- 5. Do one of the following to select a single image to print:
 - For **JPEG**: Select an image and select **Proceed to Print**. Select **Single View** to view each image individually.
 - For other options, select the file name.

You see a screen like this:

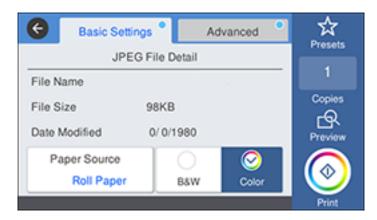

- 6. Select the paper source and either **B&W** or **Color**.
- 7. Select the **Advanced** tab and select any necessary settings.

Note: You can select **Presets** to use a previously saved group of settings.

- 8. Select the number of copies and use the on-screen keyboard to enter the amount, if necessary.
- 9. Select **Print** to begin printing.

Memory Device Settings Menu

Parent topic: Printing from a USB Memory Device

Memory Device Settings Menu

Basic Settings

Setting	Options	Description
Copies	1 to 99	Specifies the number of copies to print
Paper Source	Roll Paper	Selects the paper source
	Auto Sheet Feeder	
	Cut Sheet (1 sheet)	
Color Mode	B&W	Selects the color mode to use when printing
	Color	

Advanced

Setting	Options	Description
Quality	Standard	Specifies the print quality
	Speed	
	Fine	
	Super Fine	

Setting	Options	Description
Page Margins option	Clip By Margins	Subtracts the page margin value (B) from the output size selected in the Reduce/Enlarge settings (A). Any print object in the margin area is clipped and not printed.
	Oversize	Adds the page margin value (B) outside the output size selected in the Reduce/Enlarge settings (A).
Bidirectional	On Off	Select On to print in both directions, resulting in faster print speed but reduced accuracy

Setting	Options	Description
Color Mode	Poster(Photo)/Perspect ive	Prints posters and perspective drawings that use photos with natural colors
	Poster/Document	Prints posters with both text and illustrations with vivid colors
	GIS	Performs color correction when printing topographical maps
	CAD/Line Drawing	Perform color correction when printing CAD drawings and other line drawings
	Off (No Color Management)	Turns off color management in the printer
Reduce/Enlarge	Auto Fit Page	Select On to fit the short edge of the image to the width of the paper
		Note: This setting is not available if paper is not loaded into the printer.
	Custom Size	Select Actual Size to print using the image size or select a different output size

Parent topic: Connecting and Printing from a USB Memory Device

Using the Integrated Scanner

You can use the integrated scanner on your product to scan and copy originals.

Supported Document Sizes and Types

Loading Originals

Using a Carrier Sheet

Copying Documents or Photos

Creating Scanning Contacts

Scanning to a Network Folder or FTP Server

Scanning to Email

Scanning to a Memory Device

Supported Document Sizes and Types

You can load the following document types and sizes into the integrated scanner:

Document Size

SureColor T3170M:

Width: 5.8 to 24 inches (148 to 610 mm)

Length: 5.8 to 107.1 inches (148 to 2720 mm)

SureColor T5170M:

Width (SC-T5170M): 5.8 to 36 inches (148 to 915 mm)

Length: 5.8 to 107.1 inches (148 to 2720 mm)

Note: When scanning at 600 dpi or copying at Fine or Super Fine quality, the maximum length is 105.2 inches (2672 mm).

Paper thickness: 0.02 inches (0.5 mm) or less (0.01 inches [0.25 mm] with optional carrier sheet)

Supported Document Types

- Plain paper
- Recycled paper
- · Coated paper

- Tracing paper*
- Film
- Blueprints

* When tracing paper is loaded, the product cannot automatically detect the width of the paper. Make sure you set the **Original Size** setting on the **Copy** menu or the **Scan Size** setting on the **Scan** menu to the size of your original.

Caution: Do not load the following types of originals directly in the scanner, or they may cause paper jams or damage the scanner:

- · Originals that are bound
- · Originals that are bent
- · Originals with carbon backing
- · Originals with staples, paper clips, or glue
- Originals with many holes (such as loose-leaf paper)
- Irregularly shaped originals or originals that are not cut at right angles
- Originals with attached photos, stickers, or labels
- Transparent originals
- Glossy originals
- · Torn or deteriorated originals

Parent topic: Using the Integrated Scanner


Loading Originals

You can load an original that meets the document specifications in the input slot.


Caution: Do not load photos, valuable original documents, or artwork directly into the product. This may wrinkle or damage the original.

Note: If the original is curled or creased, straighten or smooth the irregularity before loading the document into the product. If the original is longer than 39 inches (1 meter), support the document with your hand or the document support during scanning.


1. Make sure the document guide is installed on the scanner.

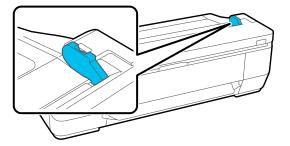

Note: Remove the document guide if you are using a carrier sheet.

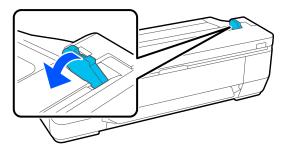

2. With the side to be scanned facing up, align the original with the document guide.

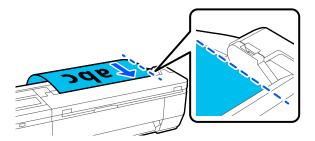


3. Support the original with both hands and insert the top edge into the scanner slot until it is automatically moved to the scanning position. You will hear a beep when loading is complete.

Note: When the automatic loading process begins, let go of the original and do not resist the loading process.

The original is loaded and ready to be scanned.

If necessary, attach the document support to the rear of the printer to prevent the original from falling. If you have routed the power cord through the cable holders, you will have to remove the cord to install the document support.

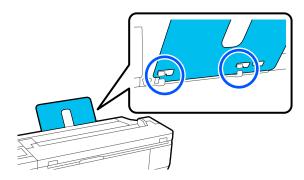

Parent topic: Using the Integrated Scanner

Related references


Supported Document Sizes and Types

Using a Carrier Sheet


You can load thin or fragile originals in the scanner using a carrier sheet (not included). Make sure the original meets the loading specifications before scanning it.

Note: If you are using a carrier sheet, the product cannot automatically detect the size of the original. If you are copying the original, set the **Original Size** setting to the size of your original. If you are scanning the original, set the **Scan Size** and **Top Offset** settings.


1. Insert the original into the carrier sheet with the printed side facing the transparent sheet. Align the top edge of the original with the top of the carrier sheet (A) and align the side of the original with the alignment mark (B).

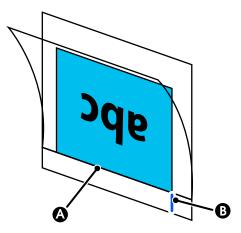

2. Remove the document guide and insert the carrier sheet against the right side of the scanner slot.

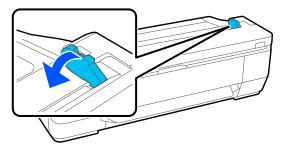

When you are done scanning, remember to re-install the document guide on the printer.

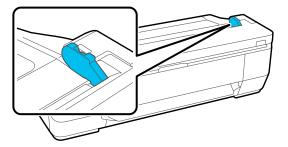


Parent topic: Using the Integrated Scanner

Copying Documents or Photos

You can copy documents or photos onto various sizes and types of paper, including Epson special papers.

- 1. Load the paper you want to print on in the product.
- 2. Load the original into the scanner slot.
- 3. Press the $\widehat{\mathbf{m}}$ home button, if necessary.
- 4. Select Copy.

You see this screen:

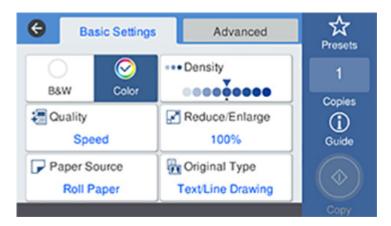

5. Select the basic and advanced copy settings as necessary.

Note: If you are using the optional carrier sheet, make sure you set the **Original Size** setting to the size of your original and set the **Top Offset** setting to 0.75 inch (19 mm).

6. To print more than one copy, select the number (up to 99).

7. When you are ready to copy, select **Copy**.

Note: To cancel copying, select **Cancel**.

Copy Settings

Parent topic: Using the Integrated Scanner

Related tasks

Using a Carrier Sheet

Copy Settings

Basic Settings

Setting	Options	Description
Copies	1 to 99	Specifies the number of copies to print
Color Mode	B&W	Selects the color mode to use when
	Color	printing
Quality	Speed	Selects the print quality
	Fine	
	Super Fine	
Density	-4 to 4	Choose the print density for the printed output. Positive values increase the density.
Paper Source	Roll Paper	Selects the paper source
	Auto Sheet Feeder	
	Cut Sheet (1 sheet)	
Reduce/Enlarge		

Setting	Options	Description
Auto Fit Page	On Off	Select On to fit the short edge of the image to the width of the paper
		Note: This setting is not available if paper is not loaded into the printer.
Custom Size	Various settings	Select Actual Size to print using the image size or select a different output size
Original Type	Text/ Line Drawing	Selects the type that corresponds to
	Tracing Paper	the loaded original
	Blueprint	

Advanced Settings

Setting	Options	Description
Original Size	Auto Detect	Determines the size of the scanned
	ISO A	original. In most cases, Auto Detect should be used. Tracing paper and
	US-ANSI	the optional carrier sheet are not
	US-ARCH	detected automatically.
	JIS-B	
	ISO B	
	User-Defined	
Top Offset	0.0 to 3.94 inches	Selects the amount of area at the
	0.0 to 100.0 mm	top of the scanned original that will not be scanned. If you are using the optional carrier sheet, the value should be 0.75 inch (19 mm).

Setting	Options	Description
Page Margins option	Clip by Margins	Subtracts the page margin value (B) from the output size selected in the Reduce/Enlarge settings (A).
		Any print object in the margin area is clipped and not printed.
	Oversize	Adds the page margin value (B) outside the output size selected in the Reduce/Enlarge settings (A).
Image Quality	Contrast	Adjusts the contrast of the image
	Sharpness	Adjusts the sharpness of the image
	Remove Background	Removes backgrounds from thin originals or images with unwanted backgrounds

Setting	Options	Description
Bidirectional		Select On to print in both directions,
		resulting in faster print speed but reduced accuracy

Parent topic: Copying Documents or Photos

Creating Scanning Contacts

You can create email, network folder, and FTP contacts to receive your scanned images.

Creating a Shared Network Folder

Registering Contacts for Email, Network, or FTP Scanning - Control Panel

Registering Contacts for Email, Network Folder, or FTP Scanning - Web Config

Parent topic: Using the Integrated Scanner

Creating a Shared Network Folder

You can create a shared network folder on your computer or an FTP site and register its location to your product's **Contacts** list.

Note: If you are creating a shared network folder on a Mac, see your Mac documentation for instructions on creating the folder. The instructions here are for Windows.

First make sure you connected your product and computer to the same network.

Note: If you are running a Home version of the Windows operating system, you cannot create a shared folder on your Windows desktop or in the Documents or Pictures folder unless you have created a Home Group Configuration for sharing. You can, however, create a shared folder in the root of the C: drive on your system.

If you want to scan to a folder on an FTP server, contact the FTP server administrator for the server address and authentication access to a shared folder on the server.

- 1. If you are scanning to a network folder on your computer, do one of the following to check the format of your computer name:
 - Windows 10 or Windows 8.x: Hold down the Windows key on your keyboard and press the X key. Select System from the list that appears. Check the Computer Name or Device Name listed for your computer on the System window.

• Windows 7: Click , right-click Computer, and select Properties. Check the Computer Name listed for your computer on the System window.

Note: The settings in these steps may vary, depending on your version of Windows. See Windows Help for details on your operating system.

- 2. If the computer's name uses any characters that are not alphanumeric (letters or numbers), do one of the following to change the computer's name:
 - Windows 10 or 8.x: Select Rename this PC and follow the on-screen prompts.
 - **Windows 7**: Select **Change Settings**, change the computer's name, and click **OK**. (See Windows Help for instructions, if necessary.)

Note: You need to be logged into Windows as an administrator to change the computer's name. After changing the name, restart your computer.

- 3. Start File Explorer or Windows Explorer.
- 4. Create a folder on the Windows desktop with a folder name of 12 characters or less; otherwise, your product may not be able to access the folder.

Note: You need to be logged into Windows as an administrator to access the desktop folder and the document folder under each User folder.

- 5. Right-click the folder you created and select **Properties**.
- 6. On the **General** tab, deselect the **Read-only** checkbox to allow users to access the folder over the network.
- 7. Select the **Sharing** tab and click the **Advanced Sharing** button.

Note: You need to be logged into Windows as an administrator to select the **Advanced Sharing** button.

- 8. On the Advanced Sharing screen, select the **Share this folder** checkbox.
- 9. Click the **Permissions** button and select the following on the Share Permissions tab:
 - Select **Everyone** under Group or user names.
 - Select the checkbox in the Allow column for the Change setting.
- 10. Click **OK** to save the settings, then click **OK** again to close the Advanced Sharing window.

- 11. Select the **Security** tab and check that the Group or user names list at the top includes the current computer user and the administrators who can now access the folder.
- 12. Select the **Sharing** tab again and write down the **Network Path** listed under Network File and Folder Sharing at the top. This is the path you will register to your product contacts list so you can select it for network scanning.
- 13. Click **OK** or **Close**.

Now you can register the folder path to your product contacts list.

Parent topic: Creating Scanning Contacts


Registering Contacts for Email, Network, or FTP Scanning - Control Panel

You can create a list of contacts for scanning to email or to a network folder or FTP.

Note: Contacts can be locked by an administrator. If you cannot access or change contacts, contact your administrator for assistance. You can create up to 200 contacts and contact groups combined.

- 1. Press the \(\hat{\alpha} \) home button, if necessary.
- 2. Select **Settings**.
- 3. Select Contacts Manager.
- 4. Select Register/Delete.

You see a screen like this:

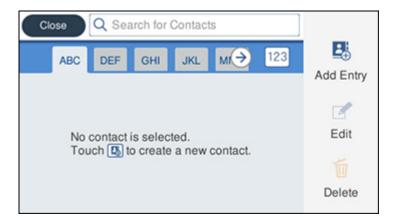

- 5. Select Add Entry.
- 6. Select Add Contact.
- 7. Do one of the following:
 - To create a contact for scanning to email, select **Email**.
 - To create a location for scanning to a network folder or FTP, select **Network Folder/FTP**.
- 8. Select the number you want to use for the contact you are adding.
- 9. Select the **Name** field. Use the on-screen keyboard to enter the contact name (up to 30 characters) and select **OK**.
- 10. Select the **Index Word** field. Use the on-screen keyboard to enter a word to use when searching for an entry (up to 30 characters) and select **OK**. (This field is optional.)
- 11. Do one of the following:
 - For an email contact, select the **Email Address** field. Use the on-screen keyboard to enter the address and select **OK**.
 - For a network folder or FTP location, select the Communication Mode field and select Network
 Folder (SMB) or FTP. Then select the Location field, use the on-screen keyboard to enter the
 location, and select OK. Enter other information if necessary.

Enter the folder path name for the **Location** setting in one of the following formats depending on the **Communication Mode** setting you selected:

- SMB: \\host name\folder
- FTP: ftp://host name/folder name

Enter additional connection information as needed.

- 12. To add the contact to the frequently used contacts list, select **Assign to Frequent Use**.
- 13. Select **OK**.

Parent topic: Creating Scanning Contacts

Registering Contacts for Email, Network Folder, or FTP Scanning - Web Config

You can register a list of contacts for scanning to email, a network folder or an FTP server using Web Config and your computer's internet browser. You can create a total of 200 contacts and groups combined.

Before you begin, print a network status sheet and locate the IP address for your product on the sheet.

Note: These instructions use Internet Explorer as an example browser.

- 1. Start Internet Explorer on a computer that is using the same network as your product.
- 2. Type your product's IP address into the address bar and press **Enter**.
- 3. Click Continue to this website (not recommended).
- 4. Click Scan/Copy > Contacts.
- 5. Select the number you want to use for the contact you are adding and click **Edit**.
- 6. Select **Email**, **Network Folder (SMB)**, or **FTP** as the **Type** setting.
- 7. Enter the following information for the contact:
 - Name: The name to display in your product's contact list.
 - **Index Word**: Enter a word to identify this entry when searching for it (up to 30 characters). This field is optional.
 - Assign to Frequent Use: If you want to identify the contact as a frequently used address, select
 On. This makes it quicker to select the contact when you scan.
 - Secure Connection: For FTP locations, choose whether to use FTP or FTPS when connecting
 - Email Address: For email contacts, enter the email address
 - Save to: The network path to the shared folder.

Enter the folder path name in one of the following formats depending on the **Type** setting you selected:

- SMB: host_name\folder
- FTP: host_name/folder_name
- User Name and Password: Enter only if you have set up a password on your computer.
- Connection Mode: For FTP locations, select Passive Mode if there is a firewall between the product and FTP server.
- Port Number: For FTP locations, enter the port number.
- Certification Validation: For FTP locations, select whether to require certification validation.
- 8. Click **Apply**.

After a moment, you see a message telling you that contact registration is complete.

9. Close your web browser.

Parent topic: Creating Scanning Contacts

Related tasks

Creating a Shared Network Folder

Scanning to a Network Folder or FTP Server

You can scan an image and save it to a network folder using your product's control panel. You can either enter the folder path directly on the product's control panel or select a folder from the **Contacts** list.

Note: Make sure the date and time are set correctly before using this feature.

1. Place your original on the product for scanning.

Note: To scan a double-sided or multi-page document, place your originals in the ADF.


- 2. Press the nhome button, if necessary.
- 3. Select Scan.

You see a screen like this:



4. Select Network Folder/FTP.

You see a screen like this:

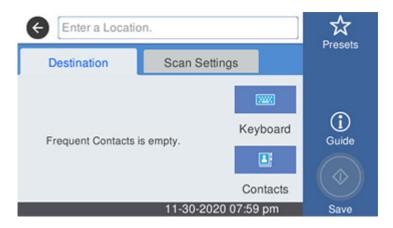

- 5. Do one of the following:
 - · Select from any displayed frequent contacts.
 - Select Keyboard, select the Communication Mode field, and select Network Folder (SMB) or FTP. Then select the Location field and enter the folder location, and press OK. Enter other information as necessary.

Enter the folder path name for the **Location** setting in one of the following formats depending on the **Communication Mode** setting you selected:

- SMB: \\host name\folder
- FTP: ftp://host name/folder name
- Select **Contacts** and choose a saved folder from the **Contacts** list.
- 6. Select Scan Settings.
- 7. Select **File Format** to choose the file format for your scan.
- 8. Scroll down and change the **File Name** setting, if necessary.
- 9. Select any additional scan settings as necessary.
- 10. Select **Presets** to save your scan settings.

Note: Presets can be locked by an administrator. If you cannot access or change this setting, contact your administrator for assistance.

11. Press the **Save** icon.

Your product scans your original and saves it in the selected location.

12. After scanning is complete, hold the original and select **OK** to remove the original.

Scan to Network Folder/FTP Settings

Parent topic: Using the Integrated Scanner

Scan to Network Folder/FTP Settings

Setting	Options	Description
Destination		Specifies the location where the scanned image will be saved. You can select from your existing contacts or edit the location directly.
Scan Settings		
Color Mode	Black/White	Selects the color mode to use when
	Color	printing
File Format	File Format	Selects the file format for the saved image
	Compression Ratio	Selects the compression ratio for the saved image
	PDF Settings	Sets the permissions and passwords for the saved PDF
Resolution	200 dpi	Select the scanning resolution
	300 dpi	
	400 dpi	
	600 dpi	

Setting	Options	Description
Scan Size	Auto Detect ISO A	Determines the size of the scanned original. In most cases, Auto Detect should be used. Tracing paper and the
	US-ANSI US-ARCH	optional carrier sheet are not detected automatically.
	JIS-B	,
	ISO B	
	User-Defined	
Top Offset	0.0 to 3.94 inches	Selects the amount of area at the top
	0.0 to 100.0 mm	of the scanned original that will not be scanned. If you are using the optional carrier sheet, the value should be 0.75 inch (19 mm).
Original Type	Text/Line Drawing	Selects the type that corresponds to
	Tracing Paper	the loaded original
	Blueprint	
Density	-4 to 4	Choose the print density for the printed output. Positive values increase the density.
Image Quality	Contrast	Adjusts the contrast of the image
	Sharpness	Adjusts the sharpness of the image
	Remove Background	Removes backgrounds from thin originals or images with unwanted backgrounds
File Name	Filename Prefix	Adds a prefix to the file name. The prefix is restricted to single-byte characters and symbols.
	Add Date	Adds the date to the file name
	Add Time	Adds the time to the file name

Parent topic: Scanning to a Network Folder or FTP Server

Scanning to Email

You can scan an original and email the scanned file using your product's control panel. You need to have a preconfigured email server before you can scan to email. You can either enter the email address directly on the product's control panel or select an address from the **Contacts** list. Make sure the date and time are set correctly so the time stamps on your emails are accurate.

Note: You can also use the Scan to Document Capture Pro function to scan and email the scanned file.


- 1. Load your original into the product for scanning.
- 2. Press the $\widehat{\mathbf{m}}$ home button, if necessary.
- 3. Select Scan.

You see a screen like this:



4. Select Email.

You see a screen like this:

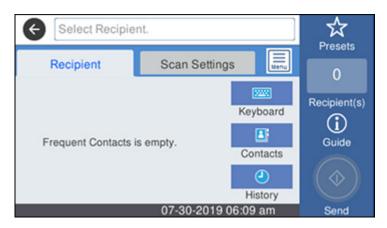

- 5. Do one of the following:
 - Select from any displayed frequent contacts.
 - Select **Keyboard** to use the displayed keyboard to enter the address for the recipient and press **OK**.
 - Select Contacts and choose an email address from the Contacts list.
 - Select **History** to choose an email address from your recent scan history.
- 6. Select Scan Settings.
- 7. Select **File Format** to choose the file format for your scan.
- 8. Scroll down and change the **Subject** and **File Name** settings, if necessary.
- 9. Select any additional scan settings as necessary.
- 10. Select **Presets** to save your scan settings.

Note: Presets can be locked by an administrator. If you cannot access or change this setting, contact your administrator for assistance.

11. Press the Save icon.

Your product scans your original and emails the scanned file.

12. While holding the original, select **OK** to remove the original from the product.

Scan to Email Settings

Parent topic: Using the Integrated Scanner

Scan to Email Settings

Setting	Options	Description
Destination		Specifies the recipient of the scanned image. You can select from your existing contacts or enter the recipient directly.
Scan Settings	•	•
Color Mode	Black/White	Selects the color mode to use when
	Color	printing
File Format	File Format	Selects the file format for the saved image
	Compression Ratio	Selects the compression ratio for the saved image
	PDF Settings	Sets the permissions and passwords for the saved PDF
Resolution	200 dpi	Select the scanning resolution
	300 dpi	
	400 dpi	
	600 dpi	
Scan Size	Auto Detect	Determines the size of the scanned
	ISO A	original. In most cases, Auto Detect should be used. Tracing paper and the
	US-ANSI	optional carrier sheet are not detected
	US-ARCH	automatically.
	JIS-B	
	ISO B	
	User-Defined	


Setting	Options	Description
Top Offset	0.0 to 3.94 inches 0.0 to 100.0 mm	Selects the amount of area at the top of the scanned original that will not be scanned. If you are using the optional carrier sheet, the value should be 0.75 inch (19 mm).
Original Type	Text/Line Drawing Tracing Paper Blueprint	Selects the type that corresponds to the loaded original
Density	-4 to 4	Choose the print density for the printed output. Positive values increase the density.
Image Quality	Contrast	Adjusts the contrast of the image
	Sharpness	Adjusts the sharpness of the image
	Remove Background	Removes backgrounds from thin originals or images with unwanted backgrounds
Subject	_	Specifies the contents of the subject of the email. The subject is restricted to single-byte characters and symbols.
Attached File Max Size	1MB 2MB 5MB 10MB 20MB 30MB	Limits the size of the file attached to the email.
File Name	Filename Prefix	Adds a prefix to the file name. The prefix is restricted to single-byte characters and symbols.
	Add Date	Adds the date to the file name
	Add Time	Adds the time to the file name

Parent topic: Scanning to Email

Scanning to a Memory Device


You can scan an original and save the scanned image to a memory card or external USB device.

1. Connect an external USB device to the port on the front of the product.

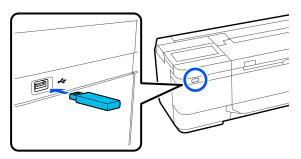


- 2. Place your original on the product for scanning.
- 3. Press the $\widehat{\mathbf{w}}$ home icon, if necessary.
- 4. Select Scan.

You see a screen like this:

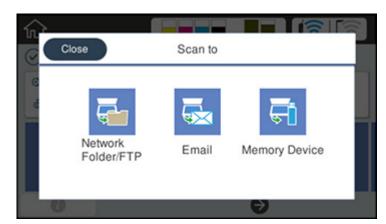

5. Select **Memory Device**.

You see a screen like this:

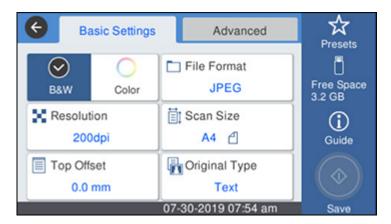

- 6. Change any of the displayed settings on the **Basic Settings** tab as necessary.
- 7. Select the **Advanced** tab to view and change additional scan settings, if necessary.
- 8. On the **Basic Settings** tab, press the **Save** icon to start scanning.

 Your product scans your original and saves the scanned file to the USB device.
- 9. While holding the original, select **OK** to remove the original.

Scan to Memory Device Settings

Parent topic: Using the Integrated Scanner

Scan to Memory Device Settings

Basic Settings

Setting	Options	Description
Color Mode	B&W	Selects the color mode to use when
	Color	printing

Setting	Options	Description
File Format	File Format	Selects the file format for the saved image
	Compression Ratio	Selects the compression ratio for the saved image
	PDF Settings	Sets the permissions and passwords for the saved PDF
Resolution	200 dpi	Select the scanning resolution
	300 dpi	
	400 dpi	
	600 dpi	
Scan Size	Auto Detect	Determines the size of the scanned
	ISO A	original. In most cases, Auto Detect should be used. Tracing paper and the
	US-ANSI	optional carrier sheet are not detected
	US-ARCH	automatically.
	JIS-B	
	ISO B	
	User-Defined	
Top Offset	0.0 to 3.94 inches	Selects the amount of area at the top
	0.0 to 100.0 mm	of the scanned original that will not be scanned. If you are using the optional carrier sheet, the value should be 0.75 inch (19 mm).
Original Type	Text/Line Drawing	Selects the type that corresponds to
	Tracing Paper	the loaded original
	Blueprint	

Advanced

Setting	Options	Description
Density	-4 to 4	Choose the print density for the printed output. Positive values increase the density.
Image Quality	Contrast	Adjusts the contrast of the image
	Sharpness	Adjusts the sharpness of the image
	Remove Background	Removes backgrounds from thin originals or images with unwanted backgrounds
File Name	Filename Prefix	Adds a prefix to the file name. The prefix is restricted to single-byte characters and symbols.
	Add Date	Adds the date to the file name
	Add Time	Adds the time to the file name

Parent topic: Scanning to a Memory Device

Using the Control Panel Menus

Follow the instructions in these sections to access the printer menu system and select settings.

Accessing the Printer's Menus

Paper Setting Menu

Basic Settings Menu

Printer Settings Menu

Scan Settings Menu

Network Settings Menu

System Administration Settings Menu

Maintenance Menu

Printer Status/Print Menu

Accessing the Printer's Menus

You can use the printer menus to adjust the settings that control how your printer works.

- 1. Press the \(\hat{\alpha} \) home button, if necessary.
- 2. Select **Settings** on the LCD screen.

You see this screen:



3. Press the up or down arrow to scroll through the menus, or swipe up or down on the LCD screen.

Note: To return to the previous screen, press the left arrow button.

- 4. Press the up or down arrow to move through the settings, or swipe up or down on the LCD screen.
- 5. To select a setting, select **OK** any time the **OK** option is displayed. You can also select a setting to toggle it on or off.
- 6. When you finish changing settings on a menu, press the left arrow button to go back or press the home button on the control panel to completely exit the menu.

Parent topic: Using the Control Panel Menus

Paper Setting Menu

Select **Paper Setting** to customize paper options.

Roll Paper menu

Setting	Options	Description
Remove	_	Rewinds the loaded roll paper until it is ejected from the paper feeder
Feed/Cut Paper	Backward	Moves the paper backward or forward, or cuts
	Forward	it using the built-in cutter
	Cut	
Media Adjust	Start	Prints an adjustment pattern to check and adjust print quality or custom paper settings; follow the on-screen instructions
Advanced Media Setting	Various options	See the Advanced Media Setting table below
Manage Remaining Amount	Setup	Select On to display and record the amount of remaining roll paper
	Remaining Amount	Select the amount increment to display (16.4 to 492 feet [5 to 150 m])
	Remaining Alert	Select the amount of remaining roll paper before a warning is displayed (3.3 to 49.2 feet [1 to 15 m])

Setting	Options	Description
Change Paper Type	Paper Type	Select Plain Paper, Coated Paper (Generic), or Premium Glossy Sheet. Select Others to choose another paper type.

Advanced Media Setting menu (in the Roll Paper menu)

Setting	Options	Description
Platen Gap	1.6 2.1 2.6	Adjusts the distance between the print head and the paper; displayed when Custom Paper is selected as the Paper Type setting
Top/Bottom Margins	Standard Top 3 mm/Bottom 3 mm Top 15 mm/Bottom 15 mm Top 45 mm/Bottom 15 mm	The Standard margins are as follows for the top and bottom: • CAD/line drawings: 3 mm • Other: 30 mm Select a different value as necessary. Note: Left and right margins are always 3 mm.
Back Tension	Auto Standard High Extra High	Select High or Extra High if paper wrinkles during printing
Drying Time	Drying Time per Pass	Select from 0 to 10 seconds for the amount of time the print head pauses to allow drying after each pass
	Drying Time per Page	Select from 0 to 60 minutes for the amount of time the printer pauses to allow drying after each page is printed
Auto Cut	On Off	Select On to automatically cut roll paper after each page is printed, or select Off to cut paper manually

Auto Sheet Feeder menu

Setting	Options	Description
Media Adjust	Start	Prints an adjustment pattern to check and adjust print quality or custom paper settings; follow the on-screen instructions
Change Paper Type/Paper Size	Paper Type	Select Plain Paper, Coated Paper (Generic), or Premium Glossy Sheet. Select Others to choose another paper type.
	Paper Size	Select a paper size or select User-Defined if your desired size is not listed

Cut Sheet (1 sheet) menu

Setting	Options	Description
Remove		Ejects the loaded cut sheet
Media Adjust	Start	Prints an adjustment pattern to check and adjust print quality or custom paper settings; follow the on-screen instructions
Change Paper Type/Paper Size	Paper Type	Select Plain Paper, Coated Paper (Generic), or Premium Glossy Sheet. Select Others to choose another paper type.
	Paper Size	Select a paper size or select User-Defined if your desired size is not listed

Parent topic: Using the Control Panel Menus

Related tasks Loading Roll Paper

Creating Custom Paper Configurations

Selecting the Paper Settings for Each Source - Control Panel

Related topics
Cutting Roll Paper

Basic Settings Menu

Select **Settings > General Settings > Basic Settings** to customize various display and power settings.

Setting	Options	Description
LCD Brightness	1 to 9	Adjusts LCD screen brightness
Sound	Mute	Select On to mute control panel sounds
	Button Press	Adjusts the volume of control panel sounds
	Error Notice	Adjusts the volume of error notifications
	Sound Type	Adjusts the type of control panel sounds
Sleep Timer	1 to 60 minutes	Selects the amount of time until the printer enters sleep mode
Power Off Timer	Various times	Selects the amount of time until the
	Off	printer turns off automatically
Circuit Breaker Interlock	On	Selects whether to turn the printer on
Startup	Off	or off when the circuit breaker switch is turned on
Date/Time Settings	Date/Time	Enters the date and time
	Time Difference	Sets the time difference for coordinated universal time (UTC)
Language	Various languages	Selects the language used on the LCD screen
Operation Time Out	On	Select On to return to the Home
	Off	screen after a few minutes of inactivity
Length Unit	m	Selects the unit of length displayed on
	ft/in	the LCD screen

Parent topic: Using the Control Panel Menus

Related tasks

Changing the LCD Screen Language Selecting the Date and Time

Printer Settings Menu

Select **Settings** > **General Settings** > **Printer Settings** to customize paper and printing options.

Setting	Options	Description
Paper Source Settings	Various options	See the Paper Source Settings table below
Custom Paper Settings	1 to 10	See the Custom Paper Settings table below
Printing Language*	USB Network	Select the printing language to use for each connection mode
		Auto: select for most printing situations
		HP-GL/2: select if HP-GL/2 or HP RTL print data sent from a CAD application does not automatically switch the printing mode
Universal Print Settings*	Various options	See the Universal Print Settings table below
HP-GL/2 Unique Settings	Various options	See the HP-GL/2 Unique Settings table below
Thick Paper	On Off	Select On to widen the platen gap to prevent scuffing if you are printing on thick paper
Bidrectional	On Off	Select On if you want the print head to move left and right during printing
		Select Off to decrease misalignment of ruled lines, but slow down printing
PC Connection via USB	Enable Disable	Select Enable to allow access to the printer from a USB-connected computer
USB I/F Timeout Setting	0.5 to 300 seconds	Specifies the length of time before ending communication from a USB-connected computer

*The **Printing Language** and **Universal Print Settings** menus can be locked by an administrator. If you cannot access or change these settings, contact your administrator for assistance.

Paper Source Settings

Setting	Options	Description
Error Notice	Paper Size Notice Paper Type Notice	Select On to display an error message when the output size or paper type settings are different between the driver and printer
Roll Paper Setup	Detect Paper Meandering	Select On to display an error message and stop printing if the printer detects the paper is skewed
	Print Cutting Guideline	Select On to print cut lines on roll paper (if Auto Cut is turned off)
After-Print Options	Hold Paper	Select to hold paper in the paper eject slot after printing; manually grasp the edge of the paper and remove it from the printer to prevent it falling on the floor
	Eject Paper	Select to fully eject cut sheets or automatically cut roll paper after printing

Custom Paper Setting

Setting	Options	Description
Change Name	_	Use the keyboard to enter a name for the custom paper setting (this name is displayed in the Paper Type list)
Change Reference Paper	Various options	Select the media type for the paper closest to the one you are using

Setting	Options	Description
Advanced Media Setting	Platen Gap	Select a larger value if print results are smudged by print head strikes
	Top/Bottom Margins	The Standard margins are as follows for the top and bottom:
		CAD/line drawings: 3 mm
		Other: 30 mm
		Select a different value as necessary.
		Note: Left and right margins are always 3 mm.
	Back Tension	Select High or Extra High if paper wrinkles during printing
	Drying Time	Drying Time per Pass : Select from 0 to 10 seconds for the amount of time the print head pauses to allow drying after each pass
		Drying Time per Page : Select from 0 to 60 minutes for the amount of time the printer pauses to allow drying after each page is printed
	Auto Cut	Select On to automatically cut roll paper after each page is printed, or select Off to cut paper manually
Restore Default	_	Restores the custom setting to the defaults

Universal Print Settings

Adjust these settings as necessary when printing in HP-GL/2 or HP RTL mode, or when using AirPrint.

Setting	Options	Description
Paper Source	Roll Paper	Select the paper source from which you want
	Auto Sheet Feeder	to print
	Cut Sheet (1 sheet)	

Setting	Options	Description
Quality	Standard	Select the print quality
	Speed	
	Fine	
	Super Fine	
Color Mode	Color	Select the color you want for printing
	Black/White	

Setting	Options	Description
Page Margins option	Clip By Margins	Adds the page margin value (B) inside the hard clip area of the PS command of the data, or the size selected for the Base Output Size (A). Any print object in the margin area is clipped and not printed.
	Oversize	Adds the page margin value (B) outside the hard clip area of the PS command of the data (when Auto is selected) (A)
		Adds the page margin value (B) outside the size selected for the Base Output Size (when set to a standard size) (A)

Setting	Options	Description
Page Margin	3 mm 5 mm	Select the top, bottom, left, and right margin values for roll paper Note: Margins are 3 mm for cut sheets regardless of the setting.
Smoothing	On Off	Select On to print at the maximum resolution for the selected paper type Note: This may result in longer printing time or insufficient memory errors.
Base Output Size	Various options	When Auto (the default setting) is selected, the hard clip area of the PS command of the data (A) becomes the base output size Select User-Defined when printing in a custom size
Resolution	Standard 300 dpi 600 dpi 1200 dpi	Selects the print resolution; when Standard (the default setting) is selected, available resolutions depend on the selected paper type

Setting	Options	Description
Color Mode (Common)	EPSON Standard (sRGB)	Optimize the sRGB space and correct the color
	Business Graphics	Perform color correction to optimize your images based on the sRGB space
	GIS	Perform color correction when printing topographical maps
	Line Drawing	Perform color correction when printing CAD drawings and other line drawings
	Off (No Color Management)	No color correction is performed

HP-GL/2 Unique Settings

Adjust these settings as necessary when printing in HP-GL/2 or HP RTL mode.

Setting	Options	Description
Rotate	0°	Rotate the coordinates of the drawn data
	90°	counterclockwise before printing
	180°	
	270°	
Origin Setup	Left Edge	Set the data coordinate origin
	Center	
Mirror Image	On	Select to horizontally flip the image using the center of the output size width as the basis line
	Off	Select to print without flipping the image
Line Merge	On	Select to merge the intersection of overlapping lines within the image according to the MC command of the data
	Off	Select to move lines to be printed later to the front at intersections

Setting	Options	Description
Color Mode (HP-GL/2)	EPSON Standard (sRGB)	Optimize the sRGB space and correct the color
	Business Graphics	Perform color correction to optimize your images based on the sRGB space
	GIS	Perform color correction when printing topographical maps
	Line Drawing	Perform color correction when printing CAD drawings and other line drawings
	Off (No Color Management)	No color correction is performed
Select Palette	Software	Print according to the pen configurations set in the application and ignore the built-in printer palette
	Default	Print according to the built-in printer palette settings (logical pen with a pen width of 0.35 mm and 256 colors)
	Palette A	Print according to the built-in printer palette
	Palette B	settings specified under Define Palette
Print Color Palette	Print	Print the colors of the palette selected in Select Palette . Load A3 or larger paper before printing the palette.
Define Palette	Palette A	Define a built-in palette by specifying the pen
	Palette B	width and color for the 16 types of logical pens
Restore Default HP-GL/2	No	Select Yes to restore all HP-GL/2 Unique
Unique Settings	Yes	Settings to their defaults

Parent topic: Using the Control Panel Menus

Related tasks

Creating Custom Paper Configurations

Selecting the Paper Settings for Each Source - Control Panel

Printing CAD Drawings in HP-GL/2 or HP RTL Mode

Scan Settings Menu

Select **Settings > General Settings > Scan Settings** to customize various scanning settings.

Setting	Options	Description
Confirm Recipient	On Off	Select On to check the recipients before scanning an original
Email Server	•	•
Server Settings	Off	No email server set
	POP before SMTP	Authenticates on a POP3 receiving email server before sending the email.
	SMTP-AUTH	Authenticates on the outgoing SMTP server when sending the email. The mail server must support SMTP authorization.
Connection Check	_	Checks the connection to the email server
Scan Options		
Confirm Before Ejecting Scanned Document	On Off	Selects whether to hold the ejected original and display a removal confirmation screen after scanning
Correct Skewed Image	On Off	Automatically corrects and saves scanned images that are skewed. Should only be enabled if the Original Size or Scan Size settings have been set to Auto Detect .
Document Feed Adjustment	-1.00 to 1.00	Adjusts the length of the printed image if it is different from the scanned original. Select - to reduce the length of the printout, or + to increase the length. Differences in length may occur due to the type of paper.

Setting	Options	Description
Image Stitching Smoother	On Off	Corrects color differences between stitched images. May cause blurred details on the border of stitched scan images. To correct blurriness, use the Image Stitching Adjustment setting and/or turn this setting off.
Image Stitching Adjustment	-5 to 5	Corrects misalignment in prints of scanned images

Parent topic: Using the Control Panel Menus

Network Settings Menu

Select **Settings** > **General Settings** > **Network Settings** to configure your printer's network settings.

Setting	Options	Description
Wi-Fi Setup	Router	See the link below for more information
	Wi-Fi Direct	
Wired LAN Setup	Start Setup	Select Start Setup to switch from a wireless network to a wired network.
Network Status	Wired LAN/Wi-Fi Status	Displays current communication status and connection settings
	Wi-Fi Direct Status	Displays the number of connected devices and connection settings
	Print Status Sheet	Prints the current network connection information
Connection Check	_	Confirms the network status. You can also print a connection check report.
Advanced	_	Displays advanced information, such as TCP/IP settings. You can enable or disable other network settings.

Parent topic: Using the Control Panel Menus

Related topics

Wi-Fi or Wired Networking

System Administration Settings Menu

Select **Settings > General Settings > System Administration Settings** to configure security settings and update firmware.

Setting	Options	Description	
Contacts Manager	Register/Delete	Lets you add or delete scanning email and network folder/FTP contacts	
	Frequent	Registers frequently used contacts for easy access	
	Print Contacts	Prints a list of all contacts, email contacts, or network folder/FTP contacts	
	View Options	Selects whether to display contacts in Tile View or List View	
	Search Options	Determines the criteria to use when searching for contacts	

Setting	Options	Description
Security Settings	Restrictions	See the Restrictions table below.
	Access Control	Allows administrators to grant access to functions to specific user accounts. Accounts must be set up in advance through the Web Config interface. See the <i>Administrator's Guide</i> for instructions on creating user accounts.
	Admin Settings Lets you add or change the administrator password	
		If you choose to add a password, set the Lock Setting to On to enable password entry for certain features and settings.
Restore Default Settings	Network Settings	Select Yes to restore all network settings to their defaults
	Copy Settings	Select Yes to restore all copy settings to their defaults
	Scan Settings	Select Yes to restore all scan settings to their defaults
	Clear All Data and Settings	Select Yes to restore all settings to their defaults (except date/time, length unit, and language settings)

Setting	Options	Description	
Firmware Update	Update	Select Start Checking to access the Epson website and search for a firmware update. The printer must be connected to the internet. Follow the prompts to update the firmware, which can take up to 5 minutes or more. Caution: Do not turn off or unplug the printer during a firmware update or you may damage the printer.	
	Notification	Select On to allow the printer to automatically check for new firmware; a message is displayed on the LCD screen if new firmware is found	

Restrictions

When **Lock Setting** is enabled, the following settings can be enabled or disabled individually.

Setting	Options
Job log access	Allow users to view the job log.
Access to Register/Delete Contacts	Allows users to register new contacts or edit and delete existing contacts.
Access to Recent of Scan to Email	Controls the display of the recent Scan to Email entries.
Access to Show Sent History of Scan to Email	Controls the display of the Scan to Email history list of entries.
Access to Language	Allows users to change the display language on the control panel.
Access to Thick Paper	Allows users to access the Thick Paper settings.

Setting	Options
	Controls the display of potentially sensitive contact information (such as IP addresses) for non-administrators. When enabled, displays hidden information as ****.

Parent topic: Using the Control Panel Menus

Related tasks

Setting a Password and Locking the Control Panel

Accessing the Web Config Utility

Maintenance Menu

Select **Settings** > **Maintenance** to run nozzle checks, cleaning cycles, and other maintenance operations.

Caution: Follow the instructions in the topic links below the table to use these menu settings correctly.

Setting	Description	
Print Quality Adjustment	Perform when there are streaks in printouts, ruled lines are duplicated, or text is blurred	
Print Head Nozzle Check	Prints a nozzle check pattern so you can check for clogged nozzles	
Head Cleaning	Perform if the nozzle check pattern has faint or missing areas	
Paper Guide Cleaning	Perform if printouts are smeared when printing from the auto sheet feeder	
Ink Cartridge(s) Replacement	Moves the print head to the correct position so you can replace ink cartridges. Displays the ink cartridge replacement procedure.	
Replace Maintenance Box	Displays the maintenance box replacement procedure	
Replace Cutter	Displays the cutter replacement procedure	
Powerful Cleaning*	Perform if the nozzle check pattern still has faint or missing areas after performing a head cleaning three times in a row	

Setting	Description
Discharging/Charging Ink*	Perform if you are transporting or storing the printer in 14°F (–10°C) or lower temperatures. Follow the prompts to eject the ink. The printer turns off automatically after the procedure.

^{*}The **Powerful Cleaning** and **Discharging/Charging Ink** settings can be locked by an administrator. If you cannot access or change these settings, contact your administrator for assistance.

Parent topic: Using the Control Panel Menus

Related tasks

Checking the Nozzles Using the Product Control Panel Cleaning the Print Head Using the Product Control Panel

Discharging Ink
Replacing the Cutter

Removing and Installing Ink Cartridges

Replacing the Maintenance Box

Using the Powerful Cleaning Utility

Printer Status/Print Menu

Select **Settings** > **Printer Status/Print** to view current printer and network settings.

Setting	Options	Description	
Print Status Sheet	Configuration Status Sheet	Configuration Status Sheet Prints a summary of current printer settings	
Network	Wired LAN/Wi-Fi Status	Displays current communication status and connection settings	
	Wi-Fi Direct Status	Displays the number of connected devices and connection settings	
	Email Server Status	Displays current authenticated accounts and method of authentication. You can modify the settings from this screen.	
	Print Status Sheet	Prints the current network connection information	

Parent topic: Using the Control Panel Menus

Replacing Ink Cartridges and Maintenance Boxes

If a message appears or the \(\begin{align*} \) icon appears above an ink color on the LCD screen, the cartridge is low or expended. When an ink cartridge is expended, printing stops and you need to replace the cartridge. You may also need to replace a cartridge that is more than six months old, or if your printouts do not look their best, even after cleaning and aligning the print head.

The maintenance box stores ink that gets flushed from the system during print head cleaning. If a message appears or the licon appears above the maintenance box icon on the LCD screen, the amount of available space in the maintenance box is low. When the maintenance box is full, you need to replace it.

Note: Please dispose of your used Epson branded ink cartridges responsibly and in accordance with local requirements. If you would like to return your used ink cartridges to Epson for proper disposal, please go to epson.com/recycle for more information.

Check Cartridge and Maintenance Box Status
Purchase Epson Ink Cartridges and Maintenance Box
Removing and Installing Ink Cartridges
Replacing the Maintenance Box

Check Cartridge and Maintenance Box Status

Your product and its software will let you know when an ink cartridge is low or expended, or when the maintenance box needs to be replaced.

Checking Ink Cartridge and Maintenance Box Status on the LCD Screen Checking Ink Cartridge and Maintenance Box Status with Windows Checking Cartridge and Maintenance Box Status - Mac

Parent topic: Replacing Ink Cartridges and Maintenance Boxes

Checking Ink Cartridge and Maintenance Box Status on the LCD Screen


When one of your ink cartridges is low or expended, or the maintenance box is almost full, you see a message on the LCD screen.

You can also check the status of the ink cartridges and maintenance box from the product control panel. If the 4 icon appears on an ink color or the maintenance box, you need to replace them soon.

1. Press the nhome button, if necessary.

- 2. Do one of the following:
 - Select the ink color icons at the top of the home screen.
 - Select Printer Status > Supply Status.

You see a screen like this:

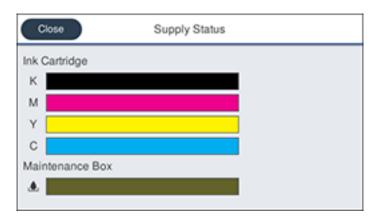

Note: The displayed ink and maintenance box levels are approximate.

Parent topic: Check Cartridge and Maintenance Box Status

Related tasks


Removing and Installing Ink Cartridges Replacing the Maintenance Box

Checking Ink Cartridge and Maintenance Box Status with Windows

You can check your ink cartridge or maintenance box status at any time using a utility on your Windows computer.

1. To check your status, access the Windows Desktop and click the icon for your product in the right side of the Windows taskbar, or click the up arrow and click. Then click your product name.

You see a screen like this:

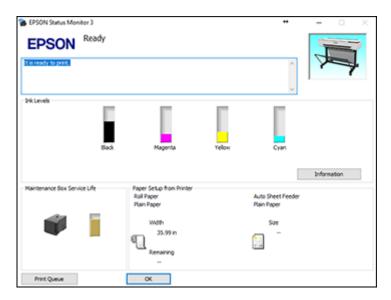

2. Replace or reinstall the ink cartridge or maintenance box as indicated on the screen.

Note: If any of the ink cartridges installed in the product is broken, incompatible with the product model, or improperly installed, Epson Status Monitor will not display an accurate ink status.

Parent topic: Check Cartridge and Maintenance Box Status

Related tasks

Removing and Installing Ink Cartridges

Replacing the Maintenance Box

Checking Cartridge and Maintenance Box Status - Mac

You can check the status of your ink cartridges and maintenance box using a utility on your Mac.

- 1. In the Apple menu or the Dock, select **System Preferences**. Select **Print & Fax**, **Print & Scan**, or **Printers & Scanners**, select your product, and select **Options & Supplies**. Select **Utility** and select **Open Printer Utility**.
- Select EPSON Status Monitor.

You see this window:



- 3. Do the following as necessary:
 - You can update the ink cartridge and maintenance box status by clicking **Update**.
 - Replace or reinstall the maintenance box or any ink cartridge as indicated on the screen.

Note: If any of the cartridges installed in the product is broken, incompatible with the product model, or improperly installed, Epson Status Monitor will not display an accurate cartridge status.

Parent topic: Check Cartridge and Maintenance Box Status

Related tasks

Removing and Installing Ink Cartridges

Replacing the Maintenance Box

Purchase Epson Ink Cartridges and Maintenance Box

U.S. and Canada:

You can purchase genuine Epson ink, maintenance boxes, and paper at epson.com (U.S. sales) or epson.ca (Canadian sales). You can also purchase supplies from an Epson authorized reseller. To find the nearest one, call 800-GO-EPSON (800-463-7766) in the U.S. or 800-807-7766 in Canada.

Latin America:

You can purchase genuine Epson ink, maintenance boxes, and paper from an Epson authorized reseller. To find the nearest reseller, visit latin.epson.com or call your nearest Epson sales office.

Note: This product is designed to work with genuine Epson inks. Non-Epson ink or any other ink not specified for this printer could cause damage not covered by Epson's warranties.

Ink Cartridge and Maintenance Box Part Numbers

Parent topic: Replacing Ink Cartridges and Maintenance Boxes

Related references

Where to Get Help (U.S. and Canada) Where to Get Help (Latin America)

Ink Cartridge and Maintenance Box Part Numbers

Use these part numbers when you order or purchase a new ink cartridge or maintenance box.

Note: For best printing results, use up a cartridge within 6 months of opening the package.

Maintenance box part number: C13S210057

Ink color	26 ml	50 ml	80 ml
Black	_	T40V120	T40W120
Cyan	T40V220	T40W220	_
Magenta	T40V320	T40W320	_
Yellow	T40V420	T40W420	_


Parent topic: Purchase Epson Ink Cartridges and Maintenance Box

Removing and Installing Ink Cartridges


Make sure you have your replacement cartridges handy before you begin. You must install new cartridges immediately after removing the old ones.

Note: Replace all expended ink cartridges. You cannot print if any of the ink cartridges are expended or any ink slots are empty.


- 1. Turn on your product.
- 2. Select Settings > Maintenance > Ink Cartridge(s) Replacement > Start.
- 3. Open the front cover.



4. Press the tab on the ink cartridge cover and lift to open the cover.

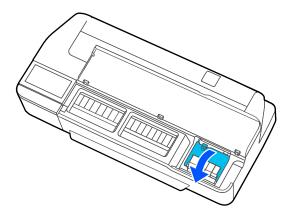


5. Push in the tab at the top of the ink cartridge and pull it out.

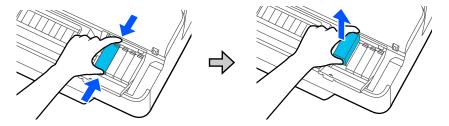

Note: Dispose of used cartridges carefully. Do not take the used cartridge apart or try to refill it.

Warning: If ink gets on your skin, wash it thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water. If ink gets into your mouth, spit it out and see a doctor right away. Keep ink cartridges out of the reach of children.

6. Gently shake the new ink cartridge for about 10 seconds.




7. Remove the cartridge from the package and peel off the yellow tape.



Caution: Do not remove any other labels or seals, or ink may leak. Do not touch the areas on the ink cartridge as shown below.



8. Insert the new cartridge and push it in firmly.

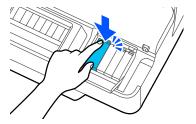

- 9. Repeat steps 6 to 8 as necessary to replace any other cartridges.
- 10. Close the ink cartridge cover and the front cover.

Your product begins charging the ink delivery system. A message appears on the LCD screen when ink replacement is complete.

Note: Do not open any covers or turn off the product during ink charging.

Caution: If you remove an ink cartridge for later use, protect the ink supply area from dirt and dust and store it in the same environment as the printer. The valve in the ink supply port is designed to contain any excess ink, but do not touch the ink supply port or surrounding area. Always store ink cartridges with the label facing up; do not store cartridges upside-down.

Parent topic: Replacing Ink Cartridges and Maintenance Boxes

Related concepts

Purchase Epson Ink Cartridges and Maintenance Box

Related references

Optional Equipment and Replacement Parts (US/Canada)


Optional Equipment and Replacement Parts (Latin America)

Replacing the Maintenance Box


Replace the maintenance box when a message is displayed on the LCD screen telling you that the maintenance box is near or at the end of its service life.

Note: You can view the replacement procedure on the LCD screen. Press the $\widehat{\mathbf{m}}$ home button if necessary and select **Settings > Maintenance > Replace Maintenance Box > See Guide**.

1. Open the maintenance box cover on the back of the product.



2. Pull out the maintenance box carefully without tilting it.




Warning: If ink gets on your skin, wash it thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water. If ink gets into your mouth, spit it out and see a doctor right away.


3. Remove the new maintenance box from the package.

Caution: Do not touch the chip on the side of the maintenance box or you may damage the product.

4. Align the groove on the maintenance box with the rails inside the product and insert it fully.

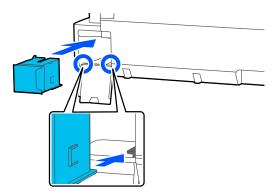

5. Place the used maintenance box in the bag supplied with the new box and seal the bag.



Note: Dispose of the used maintenance box carefully.

6. Close the maintenance box cover.

Parent topic: Replacing Ink Cartridges and Maintenance Boxes

Related concepts

Purchase Epson Ink Cartridges and Maintenance Box

Related references

Optional Equipment and Replacement Parts (US/Canada)
Optional Equipment and Replacement Parts (Latin America)

Adjusting Print Quality

If your print quality declines, you may need to run a utility to clean or align the print head.

Note: If you are using your Epson product with the Windows 10 S operating system, you cannot use the software described in this section. You also cannot download and install any Epson product software from the Epson website for use with Windows 10 S; you must obtain software only from the Windows Store.

If running these utilities does not solve the problem, you may need to replace the ink cartridges.

Note: Your product may differ from the images in this guide, but the instructions are the same unless otherwise noted.

Print Head Maintenance
Adjusting Print Quality Using the Product Control Panel
Cleaning the Auto Sheet Feeder
Cleaning the Roll Paper Feeder

Print Head Maintenance

If your printouts become too light, or you see dark or light bands across them, you may need to clean the print head nozzles. Cleaning uses ink, so clean the nozzles only if print quality declines.

You can check for clogged nozzles before you clean them so you don't clean them unnecessarily.

Note: You cannot clean the print head if an ink cartridge is expended, and may not be able to clean it when a cartridge is low. You must replace the cartridge first.

Print Head Nozzle Check Print Head Cleaning

Parent topic: Adjusting Print Quality

Related tasks

Removing and Installing Ink Cartridges

Print Head Nozzle Check

You can print a nozzle check pattern to check for clogged nozzles.

Checking the Nozzles Using the Product Control Panel Checking the Nozzles Using a Computer Utility


Parent topic: Print Head Maintenance

Checking the Nozzles Using the Product Control Panel

You can check the print head nozzles using the control panel on your product.

- 1. Make sure roll paper or cut sheet paper is loaded in the printer.
- 2. Press the \(\hat{\psi} \) home button, if necessary.
- 3. Select Settings > Maintenance > Print Head Nozzle Check.

You see a screen like this:

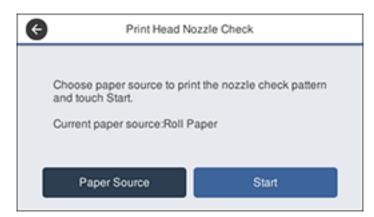

4. If you want to change the paper source that the nozzle check pattern prints on, select **Paper Source**. Otherwise, select **Start** to print the nozzle check pattern.

The nozzle check pattern prints.

5. Check the printed pattern to see if there are gaps in the lines.

Print head is clean



Print head needs cleaning



- 6. Do one of the following:
 - If there are no gaps in the pattern, select the icon.
 - If there are gaps or the pattern is faint, select the select the to clean the print head.

If you don't see any improvement after cleaning the print head three times, perform a **Powerful Cleaning**.

Parent topic: Print Head Nozzle Check

Related tasks

Checking the Nozzles Using a Computer Utility
Cleaning the Print Head Using the Product Control Panel
Using the Powerful Cleaning Utility


Checking the Nozzles Using a Computer Utility

You can check the print head nozzles using a utility on your Windows or Mac computer.

- 1. Make sure roll paper or cut sheet paper is loaded in the printer.
- 2. Do one of the following:
 - **Windows:** Access the Windows Desktop and click the icon for your product in the right side of the Windows taskbar, or click the up arrow and click.

- Mac: In the Apple menu or the Dock, select System Preferences. Select Print & Fax, Print & Scan, or Printers & Scanners, select your product, and select Options & Supplies. Select Utility and select Open Printer Utility.
- 3. Select Nozzle Check.

You see a window like this:

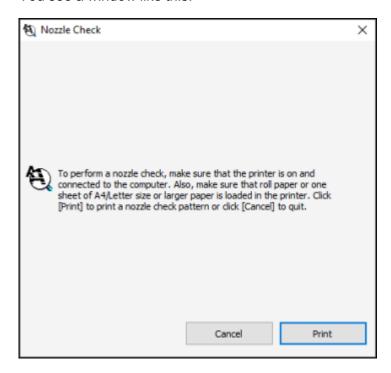

4. Click Print.

The nozzle pattern prints.

5. Check the printed pattern to see if there are gaps in the lines.

Print head is clean



Print head needs cleaning



6. If there are no gaps in the pattern, click **Finish**.

If there are gaps or the pattern is faint, click **Clean**.

If you don't see any improvement after cleaning the print head three times, perform a **Powerful Cleaning**.

Parent topic: Print Head Nozzle Check

Related tasks

Checking the Nozzles Using the Product Control Panel Cleaning the Print Head Using a Computer Utility Using the Powerful Cleaning Utility

Print Head Cleaning

If print quality has declined and the nozzle check pattern indicates clogged nozzles, you can clean the print head.

Note: You cannot clean the print head if an ink cartridge is expended, and may not be able to clean it when a cartridge is low. You must replace the cartridge first.

Cleaning the Print Head Using the Product Control Panel Cleaning the Print Head Using a Computer Utility Using the Powerful Cleaning Utility

Parent topic: Print Head Maintenance

Cleaning the Print Head Using the Product Control Panel

You can clean the print head using the control panel on your product.

- 1. Make sure roll paper or cut sheet paper is loaded in the printer.
- 2. Press the \(\hat{\alpha} \) home button, if necessary.
- 3. Select **Settings > Maintenance > Head Cleaning**.

You see a screen like this:



4. Select **Start** to begin the cleaning cycle.

When the cleaning cycle is finished, the \circlearrowleft power light stops flashing and a confirmation screen appears.

Caution: Never open any covers or turn off the product during a cleaning cycle or you may damage it.

5. Select **Yes** to print a nozzle check pattern.

The nozzle pattern prints.

6. Check the printed pattern to see if there are gaps in the lines.

Print head is clean



Print head needs cleaning



7. Follow the instructions on the screen to clean the print head, check the nozzles, and repeat the process as necessary.

If you don't see any improvement after cleaning the print head three times, perform a **Powerful Cleaning**.

Parent topic: Print Head Cleaning

Related tasks

Cleaning the Print Head Using a Computer Utility
Checking the Nozzles Using the Product Control Panel
Using the Powerful Cleaning Utility

Cleaning the Print Head Using a Computer Utility

You can clean the print head using a utility on your Windows computer or Mac.

- 1. Make sure roll paper or cut sheet paper is loaded in the printer.
- 2. Do one of the following:
 - Windows: Access the Windows Desktop and click the solicon for your product in the right side of the Windows taskbar, or click the up arrow and click sol.
 - In the Apple menu or the Dock, select System Preferences. Select Print & Fax, Print & Scan, or Printers & Scanners, select your product, and select Options & Supplies. Select Utility and select Open Printer Utility.
- 3. Select **Head Cleaning**.

You see a window like this:



4. Click **Start** to begin the cleaning cycle.

When the cleaning cycle is finished, the \circlearrowleft power light stops flashing and a confirmation screen appears.

Caution: Never open any covers or turn off the product during a cleaning cycle or you may damage it.

5. Click Print Nozzle Check Pattern.

The nozzle pattern prints.

6. Check the printed pattern to see if there are gaps in the lines.

Print head is clean



Print head needs cleaning



If you don't see any improvement after cleaning the print head three times, perform a **Powerful Cleaning**.

Parent topic: Print Head Cleaning

Related tasks

Cleaning the Print Head Using the Product Control Panel Checking the Nozzles Using the Product Control Panel Using the Powerful Cleaning Utility

Using the Powerful Cleaning Utility

If print head nozzles are still clogged after cleaning the print head three times, run the **Powerful Cleaning** utility from the product control panel. This process consumes a lot of ink to clean the clogged nozzles.

- 1. Press the nh home button, if necessary.
- 2. Select Settings > Maintenance > Powerful Cleaning.

You see a screen like this:



3. Select **Start** to begin the cleaning cycle.

When the cleaning cycle is finished, the \circlearrowleft power light stops flashing and a confirmation screen appears.

Caution: Never open any covers or turn off the product during a cleaning cycle or you may damage it.

4. Select **Yes** > **Start** to print a nozzle check pattern.

The nozzle pattern prints.

5. Check the printed pattern to see if there are gaps in the lines.

Print head is clean



Print head needs cleaning



If nozzles are still clogged, turn off the printer and leave it off overnight. If nozzles are still clogged, contact Epson for support.

Parent topic: Print Head Cleaning

Related tasks

Checking the Nozzles Using a Computer Utility
Cleaning the Print Head Using a Computer Utility
Checking the Nozzles Using the Product Control Panel

Cleaning the Print Head Using the Product Control Panel

Adjusting Print Quality Using the Product Control Panel

If your printouts become grainy or blurry, you notice misalignment of vertical lines, or you see dark or light horizontal bands, you may need to adjust print quality using the product control panel.

- 1. Make sure roll paper or cut sheet paper is loaded in the printer. You need at least this much paper to print the adjustment pattern:
 - Roll paper: 16.5 inches (420 mm)
 - Auto sheet feeder: 2 sheets of paper sized A3 (11.7 × 16.5 inches [297 × 420 mm]) or A4 (8.3 × 11.7 inches [210 × 297 mm])
 - Cut sheet feeder: 1 sheet of paper sized A2 (16.5 × 23.4 inches [420 × 594 mm]) or larger, or 2 sheets of paper smaller than A2 (16.5 × 23.4 inches [420 × 594 mm]), loaded one at a time
- 2. Press the $\widehat{\mathbf{m}}$ home button, if necessary.

- 3. Make sure the correct paper type is selected on the product control panel.
- 4. Select Settings > Maintenance > Print Quality Adjustment.

You see a screen like this:



5. If you want to change the paper source that the adjustment pattern prints on, select **Paper Source**. Otherwise, select **Start** to print the adjustment pattern.

The first set of adjustment patterns prints.

Note: If you are printing on cut sheets in A2 (16.5×23.4 inches [420×594 mm]) size or larger, or on roll paper with **Auto Cut** turned off, do not remove or pull out the paper until the second set of alignment patterns prints.

6. Follow the instructions on the LCD screen to select the best patterns for the first set of adjustment patterns, and select **OK**.

The second set of adjustment patterns prints.

Note: If you are printing on cut sheets smaller than A2 (16.5×23.4 inches [420×594 mm]) size, load the second sheet of paper.

7. Follow the instructions on the LCD screen to select the best patterns for the second set of adjustment patterns, and select **OK**.

The screen displays a confirmation message and returns to the home screen.

Parent topic: Adjusting Print Quality

Related references

Paper Setting Menu

Related tasks

Creating Custom Paper Configurations Loading Roll Paper Loading Single Cut Sheets


Cleaning the Auto Sheet Feeder

If ink smears on a printout when printing from the auto sheet feeder (especially on glossy paper), you can clean the auto sheet feeder roller to remove excess ink.

Note: If ink smears when printing on glossy paper, we recommend printing individual cut sheets one at a time instead of using the auto sheet feeder.

- 1. Load a few sheets of plain paper in the auto sheet feeder.
- 2. Press the nhome button, if necessary.
- 3. Select Settings > Maintenance > Paper Guide Cleaning.

You see a screen like this:

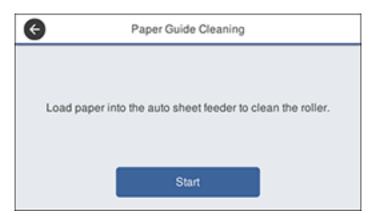

4. Select **Start** to clean the paper guide.

The paper is ejected.

- 5. Check the ejected paper to see if it is clean.
 - If you see ink smears, press and hold **Run Again**. Repeat until there is no more ink on the ejected paper.
 - If there is no ink visible, select **Done**.

Parent topic: Adjusting Print Quality

Related tasks

Loading Paper in the Auto Sheet Feeder

Cleaning the Roll Paper Feeder

If ink smears on a printout when printing on roll paper or cut sheets, you can clean the roll paper feeder to remove excess ink.

- 1. Make sure roll paper is loaded in the printer.
- 2. Press the nhome button, if necessary.
- 3. Select Paper Setting > Roll Paper > Feed/Cut Paper.
- 4. Press and hold **Forward** until there are no ink smears on the ejected roll paper.
- 5. Select \ll **Cut** to cut the roll paper.

Parent topic: Adjusting Print Quality

Related tasks
Loading Roll Paper

Maintenance and Transportation

See the instructions in these sections to maintain your printer for optimum results, or to move or transport your printer.


Replacing the Cutter
Cleaning the Integrated Scanner
Moving or Transporting Your Product

Replacing the Cutter


If you notice that your paper does not cut cleanly, you may need to replace the cutter. You will need a Phillips-head screwdriver.

Caution: Store the replacement cutter out of the reach of children. Do not remove the protective material from the new cutter until instructed to do so. Do not drop the cutter or knock it against anything or you may chip the blade.

- 1. Press the $\widehat{\mathbf{m}}$ home button, if necessary.
- 2. Select Settings > Maintenance > Replace Cutter > Start.
- 3. Open the cutter cover.

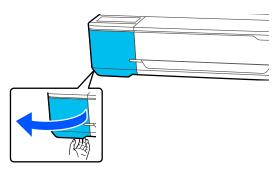


4. Use a Phillips-head screwdriver to loosen the screw holding the cutter in place and carefully remove the cutter. Place the cutter in a plastic bag and dispose of it properly.

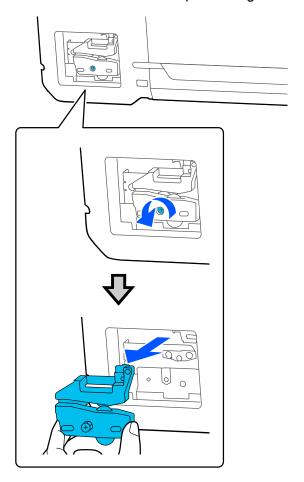


Warning: Keep the cutter out of the reach of children. The blade is sharp and can cause injury.

5. Align the pins on the new cutter with the holes in the product and insert the cutter. Tighten the cutter screw securely.

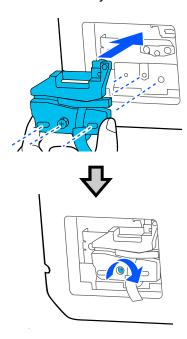

Note: Make sure the screw is tightened securely, otherwise the cut position may be slightly shifted or skewed.

6. Remove only the protective material from the cutter shown here.

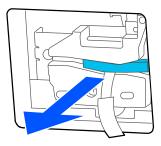

Note: Do not remove the protective piece shown here.



7. Select OK.

The cutter moves into position and cuts off the protective piece. Remove the protective piece from the printer.

8. Close the cutter cover.

Parent topic: Maintenance and Transportation

Related references

Optional Equipment and Replacement Parts (US/Canada)
Optional Equipment and Replacement Parts (Latin America)

Cleaning the Integrated Scanner


Carefully follow the steps here to clean the inside of the integrated scanner.

If the rollers or the scanner's glass surface are very dirty, use the optional cleaning kit.


Follow the instructions below when cleaning the scanner:

- Do not use volatile chemicals, such as alcohol or paint thinners.
- Do not apply excessive force to glass surfaces.
- Do not use brushes or hard objects; they may scratch the glass surface and affect scan quality.
- Do not spray liquids directly on the scanner or glass surfaces.


1. Open the scanner cover.

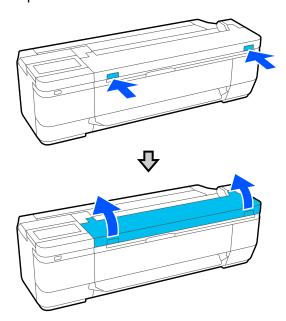

2. Using a soft cloth, wipe off any dust, dirt, or paper particles from the areas highlighted below.

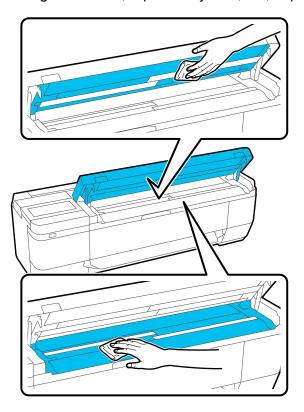


3. Using the cleaning kit or the clean side of the soft cloth, thoroughly wipe the areas shown below:

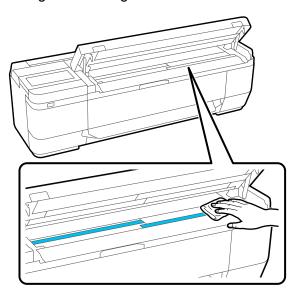

Note: The SureColor T5170M has three areas to clean instead of two.

4. Using the cleaning kit or the clean side of the soft cloth, thoroughly wipe the glass surfaces shown below:

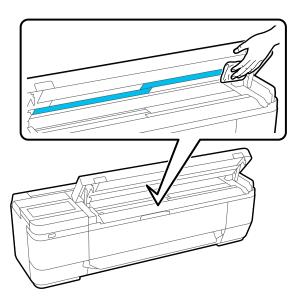

Caution: Do not apply excessive force to the glass surfaces. Do not use brushes or hard objects; they may scratch the glass and affect the scan quality. Do not spray glass cleaner directly onto the glass surface.

Note: The SureColor T5170M has three glass surfaces to clean instead of two.

5. Close the scanner cover immediately after you have finished cleaning.

Parent topic: Maintenance and Transportation

Moving or Transporting Your Product

If you need to move or transport your product, prepare it as described here.


Caution: During transportation and storage, follow these guidelines:

- Avoid tilting the product, placing it vertically, or turning it upside down; otherwise ink may leak.
- Leave the ink cartridges installed. Removing the cartridges can dry out the print head and may prevent the product from printing, or ink may leak.

- Remove any paper from the product. Leaving paper in the printer for an extended period of time may cause the roller to leave an impression on the paper, and can also cause wavy or curled paper that may scratch the print head.
- Make sure the print head is capped (the print head is positioned at the far left) before storing the printer. If the print head is left uncapped for a long period of time, the print quality may decline. If the print head is not capped, turn the printer on, and then turn it off again.
- Close all covers before storing the printer. If the printer will not be used for an extended period of time, cover it with an anti-static cloth.

Note: Before storing your product for a long period, replace low, expended, or expired ink to help prevent the print head from drying out. Store your product in a cool, dry place.

- 1. Remove all the paper from the product.
- 2. Turn off the product.
- 3. Unplug the power cable.
- 4. Disconnect any connected cables.
- 5. Remove the output tray, if necessary.
- 6. Close all covers on the product.
- 7. For a product without a stand, have at least two people lift the product using the indented areas as shown.



Warning: The product is heavy and requires two or more people to move it.

- 8. For a product with a stand, do the following:
 - · Close the paper basket.
 - · Release the caster locks.

- Move the product on an even floor surface.
- · Lock the casters after the product has been moved.

Caution: Do not move the product with locked casters. Avoid areas with steps or uneven flooring.

Note: If you are transporting or storing the product below 14°F (–10°C), you must discharge the ink. See the link below for instructions.

- 9. Place the product in its original packing materials, if possible, or use equivalent materials with cushioning around the product.
- 10. After the printer is moved, connect the power cable and turn on the printer.
- 11. Run a print head nozzle check and clean the print head, if necessary.

Discharging Ink

Parent topic: Maintenance and Transportation

Related concepts

Print Head Nozzle Check Print Head Cleaning

Discharging Ink


If you need to move or transport your product when the temperature is $14^{\circ}F$ ($-10^{\circ}C$) or lower, you must first discharge the ink to keep the print head in optimum condition.

Note: The maintenance box needs enough capacity to discharge the ink. Replace the maintenance box first if the remaining capacity is low.


- 1. Turn on the product.
- 2. Remove all the paper from the product.
- 3. Press the nhome button, if necessary.
- 4. Select Settings > Maintenance > Discharging/Charging Ink > Start.

The ink cartridges move to the replacement position.

5. Raise the scanner unit.



6. Open the ink cartridge cover, remove all the ink cartridges, and set them aside.




7. Close the ink cartridge cover and lower the scanner unit.

The ink begins to discharge.

Caution: Do not open the cover or turn off the product while ink is discharging.

- 8. When a message appears on the LCD screen, raise the scanner unit and open the ink cartridge cover again.
- 9. Reinsert all the ink cartridges.



10. Close the ink cartridge cover and lower the scanner unit.

The product automatically turns off.

Note: If you see a note that a new cartridge will be needed to start using the printer again, make sure you have a new cartridge ready when you begin using the printer again.

Parent topic: Moving or Transporting Your Product

Related tasks

Checking Ink Cartridge and Maintenance Box Status on the LCD Screen

Solving Problems

Check these sections for solutions to problems you may have using your product.

Checking for Software Updates

Product Status Messages

Resetting Control Panel Defaults

Solving Printer Problems

Solving Network Problems

Solving Printing Problems

Solving Paper Problems

Solving Print Quality Problems

Solving Scanning Problems

Uninstall Your Product Software

Where to Get Help (U.S. and Canada)

Where to Get Help (Latin America)

Checking for Software Updates

Periodically, it's a good idea to check Epson's support website for free updates to your product software. Visit epson.com/support (U.S.), epson.ca/support (Canada), or latin.epson.com/support (Caribbean) and select your product.

- **Windows**: Your printer software automatically checks for updates. You can also manually update the software by selecting **Software Update** here:
 - Access the Windows Desktop and right-clicking the icon for your product in the right side of the Windows taskbar, or clicking the up arrow and right-clicking.
 - On the Maintenance tab in the printer settings window

You can also update the software by selecting **EPSON Software Updater** in the **EPSON** or **EPSON Software** program group, accessible by the **Start** button, or on the **Start** or **Apps** screens, depending on your version of Windows.

- OS X: You can manually update the software by opening the Applications > Epson Software folder and selecting EPSON Software Updater.
- macOS 10.12.x to 11.x: You can manually update the software by opening the App Store, selecting Updates, searching for a software update option for Epson Software, and selecting Update.

Parent topic: Solving Problems

Product Status Messages

You can often diagnose problems with your product by checking the messages on the LCD screen.

LCD screen message	Condition/solution
Cannot recognize ink cartridges.	Remove and reinsert the ink cartridge. If the message persists, insert a new ink cartridge. Make sure the ink cartridges are at room temperature.
Try installing again.	
Ink is low.	The ink is low. Make sure you have a replacement ink cartridge handy.
The maintenance box is not recognized. Install it correctly.	Remove and reinsert the maintenance box. If the message persists, insert a new maintenance box.
The Maintenance Box is nearing the end of its service life. You can continue printing until replacement is required.	The maintenance box does not have enough capacity to store ink discharged in print head cleaning. Do not perform head cleaning until you replace the maintenance box with a new one. The used maintenance box may be reinstalled after cleaning is completed.
Command Error	Select Cancel to stop printing. Make sure that the printer driver you are using supports your product.
Check the printer driver setting.	
Recovery Mode	The printer restarted in recovery mode because the firmware update failed. Make sure the computer and printer are connected via USB and try updating the firmware again.
Maintenance Request	A part used in the printer is nearing or at the end of its service life. Contact Epson for support and provide them with the displayed maintenance request code. The error persists until you replace the requested part.
Replace Parts Soon/End of Parts Service Life	
(maintenance request code)	

LCD screen message	Condition/solution
Printer Error	Turn off the printer, disconnect the power cable from the outlet and from the
Printer error. Turn the power off and on again. If the problem persists, contact Epson Support.	printer, and reconnect it. Turn on the printer again. If the message persists, contact Epson for support and provide them with the displayed printer error code.
(printer error code)	

Parent topic: Solving Problems

Related references

Where to Get Help (U.S. and Canada) Where to Get Help (Latin America)

Related tasks

Removing and Installing Ink Cartridges
Replacing the Maintenance Box

Resetting Control Panel Defaults

If you have a problem with settings on the product control panel, you can reset them to their factory defaults. You can choose which settings to reset or reset them all.

Note: This setting can be locked by an administrator. If you cannot access or change this setting, contact your administrator for assistance.

- 1. Press the nhome button, if necessary.
- 2. Select Settings > General Settings > System Administration > Restore Default Settings.
- 3. Select one of these options:
 - Network Settings: Resets all network settings.
 - · Copy Settings: Resets all copy settings.
 - · Scan Settings: Resets all scan settings.
 - Clear All Data and Settings: Resets all control panel settings except date and time, length unit, and language settings.

You see a confirmation screen.

4. Select **Yes** to reset the selected settings. (Select **No** if you want to cancel the operation.)

Parent topic: Solving Problems

Solving Printer Problems

Check these sections if you have problems operating your product.

Printer Does Not Turn On LCD Screen Shuts Off

Parent topic: Solving Problems

Printer Does Not Turn On

If the printer does not turn on, try these solutions:

• Make sure the power cable is securely connected.

• Make sure the power outlet works by connecting the power cable for another electronic device.

Parent topic: Solving Printer Problems

LCD Screen Shuts Off

If the LCD screen shuts off intermittently, the printer may be in sleep mode. Try these solutions:

- Press the touchscreen or any of the buttons on the control panel to exit sleep mode.
- You can adjust the delay time before the product enters sleep mode in the Basic Settings menu.

Parent topic: Solving Printer Problems

Related references
Basic Settings Menu

Solving Network Problems

Check these solutions if you have problems setting up or using your product on a network.

Note: Breakdown or repair of this product may cause loss of network data and settings. Epson is not responsible for backing up or recovering data and settings during or after the warranty period. We recommend that you make your own backup or print out your network data and settings.

Product Cannot Connect to a Wireless Router or Access Point Network Software Cannot Find Product on a Network

Parent topic: Solving Problems

Product Cannot Connect to a Wireless Router or Access Point

If your product has trouble finding or connecting to a wireless router or access point, try these solutions:

- If you are connecting the product via Wi-Fi Protected Setup (WPS) and the Wi-Fi icon on your
 product's LCD screen is not lit or does not appear, make sure you select one of the WPS options from
 the product control panel within 2 minutes of pressing the WPS button on your router.
- Make sure to place your product within contact range of your 2.4 GHz router or access point. Avoid
 placing your product near a microwave oven, 2.4 GHz cordless phone, or large metal object, such as a
 filing cabinet.

Note: If you are using a 5 GHz wireless router, set the router to operate in dual band (2.4 GHz and 5 GHz) mode. If your router uses a single network name (SSID) for both the 2.4 GHz and 5 GHz band, give each band its own network name (SSID) instead, such as Home Network 2.4 GHz and Home Network 5 GHz. See your router documentation or contact your internet service provider for instructions.

- Verify that your router or access point is operating correctly by connecting to it from your computer or another device.
- Print a network connection report and check the codes and messages on the report to help determine the cause of the problem.
- You may need to disable the firewall and any anti-virus software on your wireless router or access point.
- Try restarting your router following the instructions in your router documentation.

Note: If you are reading these instructions online, you will lose your Internet connection when you restart your router.

- Check to see if access restrictions, such as MAC address filtering, are set on the router or access
 point. If access restrictions are set, add your product's MAC address to your router's address list. To
 obtain your product's MAC address, print a network status sheet. Then follow the instructions in your
 router or access point documentation to add the address to the list.
- If your router or access point does not broadcast its network name (SSID), follow the instructions that came with your product to enter your wireless network name manually.

- If your router or access point has security enabled, determine the kind of security it is using and any
 required password or passphrase for connection. Then make sure to enter the exact WEP key or WPA
 passphrase correctly.
- Check if your computer is restricting the available wireless channels. If so, verify that your wireless access point is using one of the usable channels and change to a usable channel, if necessary.
- If you cannot connect your product to a device using Wi-Fi Direct, you may have exceeded the
 maximum number of devices connected to your product (4). Print a network status sheet or access
 Web Config on the browser for your device and check the number of connected devices. If 4 devices
 are already connected, disconnect a device by deleting the product's SSID from the Wi-Fi screen of
 that device. If fewer than 4 devices are connected, check the accuracy of your other network settings,
 move your device closer to your product, and try connecting again.
- If you are using a Wi-Fi Direct connection that suddenly disconnects, the Wi-Fi direct password on
 your device may have been changed. If necessary, delete the existing DIRECT-xxxxxxxx connection
 settings from your device and enter a new password. See your device documentation for instructions.
- If you connected your product to a Windows computer using Wi-Fi Direct and it automatically selected Access Point Mode, you may have trouble accessing a low-priority Internet connection. Check the network connection or adapter settings in the Windows Control Panel and set the Internet metric setting to 100 for your version of the Internet Protocol.

Parent topic: Solving Network Problems

Network Software Cannot Find Product on a Network

If EpsonNet Setup cannot find your product on a network, try these solutions:

- Make sure your product is turned on and connected to your network. Verify the connection using your product control panel.
- Check if your network name (SSID) contains non-ASCII characters. Your product cannot display non-ASCII characters.
- Print a network connection report and check the codes and messages on the report to help determine the cause of the problem.
- Make sure your product is not connected to a guest network.
- If necessary, reinstall your product software and try running EpsonNet Setup again:
 - 1. Reset your product's network settings to their factory defaults.
 - 2. Windows only: Uninstall your product software.
 - 3. Restart your router following the instructions in your router documentation.

Note: If you are reading these instructions online, you will lose your Internet connection when you restart your router, so note the next step before restarting it.

- 4. Download your product software from the Epson website using the instructions on the *Start Here* sheet.
- If you have replaced your router, reinstall your product software to connect to the new router.

Note: If you are using a 5 GHz wireless router, set the router to operate in dual band (2.4 GHz and 5 GHz) mode. If your router uses a single network name (SSID) for both the 2.4 GHz and 5 GHz band, give each band its own network name (SSID) instead, such as Home Network 2.4 GHz and Home Network 5 GHz. See your router documentation or contact your internet service provider for instructions.

Check to see if your wireless router or access point has an enabled Privacy Separator function that is
preventing detection of your device over the network. See your router or access point documentation
for instructions on disabling the Privacy Separator function.

Parent topic: Solving Network Problems

Related concepts

Uninstall Your Product Software

Related tasks

Resetting Control Panel Defaults

Product Does Not Appear in Mac Printer Window

If your product does not appear in the Mac printer window, try these solutions:

- Turn your product off, wait 30 seconds, then turn it back on again.
- If you are connecting the product via Wi-Fi Protected Setup (WPS) and the Wi-Fi icon on your product's LCD screen is not lit, make sure you select one of the WPS options from the product control panel within 2 minutes of pressing the WPS button on your router.
- If you are connecting the product wirelessly via EpsonNet Setup and the Wi-Fi icon does not appear lit
 on your LCD screen, make sure your product software was installed correctly. If necessary, reinstall
 your software.

Note: If you are using a 5 GHz wireless router, set the router to operate in dual band (2.4 GHz and 5 GHz) mode. If your router uses a single network name (SSID) for both the 2.4 GHz and 5 GHz band, give each band its own network name (SSID) instead, such as Home Network 2.4 GHz and Home Network 5 GHz. See your router documentation or contact your internet service provider for instructions.

Parent topic: Solving Network Problems

Cannot Print Over a Network

If you cannot print over a network, try these solutions:

- Make sure that your product is turned on.
- Make sure you install your product's network software as described in your product documentation.
- Print a network status sheet and verify that the network settings are correct. If the network status is **Disconnected**, check any cable connections and turn your product off and then on again.
- Print a network connection report and check the codes and messages on the report to help determine the cause of the problem.
- If you are using TCP/IP, make sure the product's IP address is set correctly for your network. If your network does not assign IP addresses using DHCP, set the IP address manually.
- Make sure your computer and product are both using the same wireless network.
- If network printing is slow, print a network status sheet and check the signal strength. If it is poor, place your product closer to your router or access point. Avoid placing your product near a microwave oven, cordless phone, or large metal object, such as a filing cabinet.

Note: If you are using a 5 GHz wireless router, set the router to operate in dual band (2.4 GHz and 5 GHz) mode. If your router uses a single network name (SSID) for both the 2.4 GHz and 5 GHz band, give each band its own network name (SSID) instead, such as Home Network 2.4 GHz and Home Network 5 GHz. See your router documentation or contact your internet service provider for instructions.

• Try restarting your router following the instructions in your router documentation.

Note: If you are reading these instructions online, you will lose your Internet connection when you restart your router.

- · Check if there are any paused print jobs.
- Make sure your printer is selected as the default printer.
- Check if the selected printer port is correct.
- Check to see if your wireless router or access point has an enabled Privacy Separator function that is
 preventing printing from a device over the network. See your router or access point documentation for
 instructions on disabling the Privacy Separator function.

- If you are connecting the product via Wi-Fi Protected Setup (WPS) and the Wi-Fi icon on your
 product's LCD screen is not lit, make sure you select one of the WPS options from the product control
 panel within 2 minutes of pressing the WPS button on your router.
- Check your wired LAN router or access point to see if the LED for the port to which your product is connected is on or flashing. If the link LED is off, try the following:
 - Make sure the Ethernet cable is securely connected to your product and to your router, access point, switch, or hub.
 - Try connecting your product to a different port or a different router, access point, switch, or hub.
 - · Try connecting with a different Ethernet cable.
 - Try printing to your product from another computer on the network.

Note: If you are using a 5 GHz wireless router, set the router to operate in dual band (2.4 GHz and 5 GHz) mode. If your router uses a single network name (SSID) for both the 2.4 GHz and 5 GHz band, give each band its own network name (SSID) instead, such as Home Network 2.4 GHz and Home Network 5 GHz. See your router documentation or contact your internet service provider for instructions.

 If you are connecting the product via EpsonNet Setup and the Wi-Fi icon does not appear lit on the LCD screen, make sure your product software was installed correctly. If necessary, reinstall your software.

Parent topic: Solving Network Problems

Related tasks

Printing a Network Status Sheet

Solving Printing Problems

Check these sections if you have problems printing with your product.

Nothing Prints

Print Head Moves But Nothing Prints

Parent topic: Solving Problems

Nothing Prints

If you have sent a print job and nothing prints, try these solutions:

· Make sure your printer is turned on.

- Make sure there are no error messages on the product's LCD screen.
- If you have **Print Preview** enabled in your printer driver, the preview appears after you click Print but before printing starts. Disable this setting if you want printing to start immediately.
- Make sure any interface cables are connected securely at both ends. If you have a spare cable, try connecting with the spare cable.
- Check the model and specifications of the interface cable to see if the cable is appropriate for your computer and printer.
- If you connected your printer to a USB hub, make sure it is a first-tier hub. If it still does not print, connect your printer directly to your computer instead of the hub.
- Make sure the USB hub is recognized correctly on the computer. Disconnect all USB hubs from the computer and connect the printer directly to the computer's USB port.
- Make sure the USB cable length does not exceed 10 feet (3 m).

Parent topic: Solving Printing Problems

Related references
Interface Specifications

Print Head Moves But Nothing Prints

If the print head is moving and nothing prints, try these solutions:

 If you see a message about motor self adjustment on the product's LCD screen, the printer is adjusting its internal motor. Wait a few moments for the message to disappear and do not turn off the printer.

Parent topic: Solving Printing Problems

Related concepts
Print Head Nozzle Check
Print Head Cleaning

Solving Paper Problems

Check these sections if you have problems using paper with your product.

Paper Feeding Problems
Printout Quality Problems
Paper Does Not Collect in the Basket or is Creased
Roll Paper Jam Problems

Cut Sheet Paper Jam Problems

Parent topic: Solving Problems

Paper Feeding Problems

If you have problems feeding paper, try these solutions:

- Make sure paper is loaded in the correct orientation. Load cut sheets vertically (short edge first).
- For best results, follow these guidelines:
 - Use new, smooth, high-quality paper that is not damp, curled, creased, old, too thin, or too thick.
 - Follow any special loading instructions that came with the paper.
- If roll paper does not feed, cut the end straight across and uncurl it by rolling it backward, if necessary. Then reload the paper.
- Make sure there are no gaps between the roll paper and the paper stops on the spindle.
- Make sure there are no paper particles on the roll paper adapters. Clean the adapters if necessary.
- If wrinkles appear on roll paper, adjust the Back Tension setting.
- If you cannot insert paper easily into the paper feed slot, make sure the paper is perfectly flat and not curled.
- Do not load more than one piece of cut sheet paper.
- Make sure your paper meets the specifications for your product.
- Make sure you selected the Media Type setting in the printer driver that matches the paper you loaded in the product.
- Make sure that paper is not jammed inside the product.
- Make sure you are using the product at the proper room temperature.

Parent topic: Solving Paper Problems

Related references
Paper Setting Menu
Paper Specifications

Related tasks

Selecting Basic Print Settings - Windows Selecting Basic Print Settings - Mac

Related topics

Roll Paper Handling
Cut Sheet Handling

Printout Quality Problems

If your printout does not cut cleanly or does not eject into the optional paper basket, try these solutions:

Replace the cutter.

- Manually cut the paper after the image is printed. Make sure the **Auto Cut** setting is turned off.
- Use your hands to lightly press the paper into the paper basket as it is ejected from the printer.
- If the paper creases as it ejects into the paper basket, close the paper basket and support the printout with your hands before it touches the floor.

Parent topic: Solving Paper Problems

Related tasks

Cutting Roll Paper Manually Replacing the Cutter

Paper Does Not Collect in the Basket or is Creased

If paper does not collect correctly in the paper basket, try these solutions:


- If paper does not collect in the basket, gently press on the paper basket as paper is ejected from the printer. This prevents the paper from catching on the basket.
- If the paper folds after cutting, set the **Auto Cut** setting to **Off**. Cut the paper manually while supporting the print.
- If the paper creases and does not collect in the basket, close the basket and resume printing. Before the paper reaches floor, hold the paper with both hands and continue to support it until printing is complete. Do not load more than one piece of cut sheet paper at a time.
- Make sure you are printing at normal room temperatures (59 to 77° F [15 to 25° C]) and humidity

Parent topic: Solving Paper Problems


Roll Paper Jam Problems

If roll paper has jammed in the printer, follow the steps here to clear the jam.


1. Open the cut sheet cover.

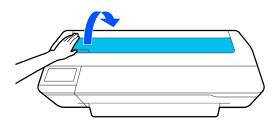

2. Release the central lock and open the roll paper cover.

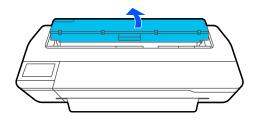


3. Cut the paper above the paper feed slot.

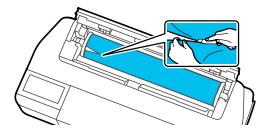

4. Close the roll paper cover and the cut sheet cover.

5. Remove the jammed paper from the front of the product.

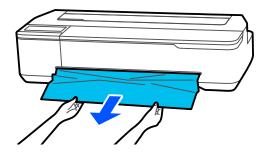

6. Open the front cover and remove any other jammed paper as necessary.



Note: Do not touch the print head.

- 7. Close the front cover.
- 8. Turn the printer off and on.
- 9. Cut the edge of the roll paper straight horizontally, and reload the roll paper.

Note: Make sure to cut off any jagged or folded sections of paper.


Parent topic: Solving Paper Problems

Related tasks
Loading Roll Paper
Cutting Roll Paper Manually


Cut Sheet Paper Jam Problems

If cut sheet paper has jammed in the product, follow the steps here to clear the jam.


1. Remove any jammed paper from the front of the product.

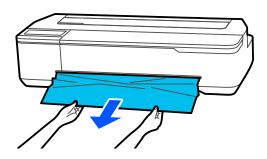

2. Raise the scanner unit.



3. Remove any other jammed paper as necessary.



Note: Do not touch the print head.

- 4. Lower the scanner unit.
- 5. Turn the printer off and on.

Reload a cut sheet.

Parent topic: Solving Paper Problems

Related tasks

Loading Single Cut Sheets

Loading Paper in the Auto Sheet Feeder

Solving Print Quality Problems

Check these sections if you have problems with print quality.

Overall Print Quality is Poor
Lines Are Misaligned
Prints are Scuffed or Smeared

Prints are Not Positioned Properly

Parent topic: Solving Problems

Overall Print Quality is Poor

If you notice that your print quality is uneven, too light, too dark, or there are lines in the print (banding), try these solutions:

- Run a nozzle check to see if any of the print head nozzles are clogged. Then clean the print head, if necessary. If nozzles are still clogged after cleaning three times, perform a Powerful Cleaning.
- · Perform a print quality adjustment.
- Make sure your paper meets the specifications for your product.
- Make sure the paper is not wrinkled, folded, or bent.
- Make sure your ink cartridges have not expired. For best results, use ink cartridges before the
 expiration date printed on the package (within six months of installation in the printer). Replace expired
 cartridges with new ones.
- Shake the cartridges before installing them in the printer.
- Make sure you selected the correct Media Type setting in the printer driver that matches the paper loaded in the printer.
- Compare the print result with the image on your computer screen. Since monitors and printers produce colors differently, printed colors and screen colors do not always look the same.
- Make sure that all printer covers are closed during printing.

- Keep all printer covers closed unless you are loading or unloading media to prevent dust from accumulating inside the printer.
- Check the ink levels on the LCD screen. Replace any cartridges that are low on ink.
- Enable color management in the software application or in the printer driver.
- If you are using non-Epson media, make sure you create a custom paper configuration for the media.
- Check the quality setting that you selected in the printer driver. Using a faster printing method may decrease the overall print quality.

Parent topic: Solving Print Quality Problems

Related concepts

Print Head Nozzle Check

Print Head Cleaning

Related references

Paper Specifications

Color Mode Options - Windows

Level Options - Windows

Color Mode Options - Mac

Level Options - Mac

Related tasks

Adjusting Print Quality Using the Product Control Panel

Selecting Basic Print Settings - Windows

Selecting Basic Print Settings - Mac

Lines Are Misaligned

You may see vertical lines in the (bi-directional) print output. If this occurs, try these solutions:

- Perform a print quality adjustment.
- Make sure you selected the correct Media Type setting in the printer driver that matches the paper loaded in the printer.

Parent topic: Solving Print Quality Problems

Prints are Scuffed or Smeared

If your prints are scuffed or smeared, try these solutions:

• Make sure your paper meets the specifications for your product.

- Make sure you selected the correct Media Type setting in the printer driver that matches the paper loaded in the printer.
- Do not use paper with folds or creases and always use new media.
- If you are using cut sheet paper, check that changes in humidity and temperature have not made the paper wavy or curled up on the edges. Flatten the paper before loading it or use new paper.
- If the surface of the paper is scuffed, select a wider **Platen Gap** setting.
- If you are printing on thick paper, make sure the Thick Paper setting is enabled in the Printer Settings menu.
- If the bottom edge is scuffed, try widening the bottom margin.
- If ink is smeared on your prints, clean the rollers. Load blank paper and perform a paper guide cleaning.
- If you are using non-Epson media, make sure you create a custom paper configuration for the media.
- Depending on the print density and type of paper you are using, the ink may take a while to dry. Do not stack the prints until the ink is completely dry. You can adjust the drying time in the **Printer Settings** menu.
- Adjust the ink density in the printer driver settings and on the control panel for custom paper configuration settings.

Parent topic: Solving Print Quality Problems

Related references Paper Setting Menu

Printer Settings Menu
Paper Specifications

Related tasks

Creating Custom Paper Configurations

Cleaning the Auto Sheet Feeder

Cleaning the Roll Paper Feeder

Selecting Basic Print Settings - Windows

Selecting Basic Print Settings - Mac

Prints are Not Positioned Properly

If your prints are not positioned properly on the media, try these solutions:

• Make sure your print settings in the control panel and the printer driver match.

- Make sure the **Document Size** or **Paper Size** setting in the printer driver matches the paper loaded in the product.
- Check for paper skew errors on the LCD screen. Make sure the **Detect Paper Meandering** setting in **Printer Settings** is set to **On**.
- Margin settings made in the printer driver have priority over margin settings made in the control panel.

Parent topic: Solving Print Quality Problems

Related references
Printer Settings Menu

Related tasks

Selecting Basic Print Settings - Windows Selecting Basic Print Settings - Mac

Solving Scanning Problems

Check these sections if you have problems scanning with the integrated scanner in your product.

Cannot Feed Originals Correctly

Removing a Jammed Original

Scanned Image is Misaligned

Lines Appear on Scanned or Copied Documents


Scanned Image Size Does Not Match Print Size

Parent topic: Solving Problems

Cannot Feed Originals Correctly

If you cannot feed originals into the scanner successfully, try these solutions:

Make sure the document guide is placed correctly.

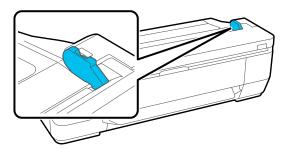

Note: Remove the document guide if you are using the carrier sheet.

- Make sure the loaded original is not skewed. Reload the original if it is skewed.
- If the original is folded, unfold it. Folded originals may cause the **Auto Detect** setting to misread the size of the original.
- · Clean inside the scanner.
- Make sure the document type can be loaded.


Parent topic: Solving Scanning Problems

Related tasks Loading Originals


Removing a Jammed Original

To remove a jammed original from the integrated scanner, follow the steps below.


1. Open the scanner cover.

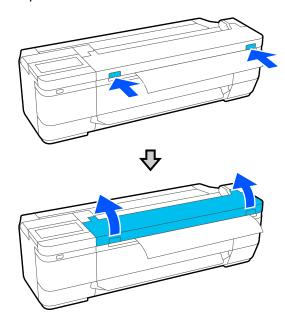

2. Remove the jammed original.

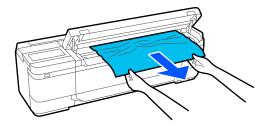

3. Close the scanner cover.

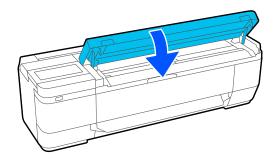

Parent topic: Solving Scanning Problems

Scanned Image is Misaligned

If the scanned image is not aligned correctly, try these solutions:

- · Change the direction of the original.
- If the original is curled, try to correct the curl before loading the original.
- Perform Image Stitching Adjustment.
- Use the optional carrier sheet.

Adjusting Scanned Image Stitching


Parent topic: Solving Scanning Problems

Related tasks

Using a Carrier Sheet


Adjusting Scanned Image Stitching

If your scanned images are not aligned correctly, you can adjust the way the image is stitched together. In the image below, the scanned image is misaligned in the center. The arrow shows the feed direction of the original.




- 1. Press the nhome button, if necessary.
- 2. Select Settings > General Settings > Scan Settings > Scan Options > Image Stitching Adjustment.

You see a screen like this:

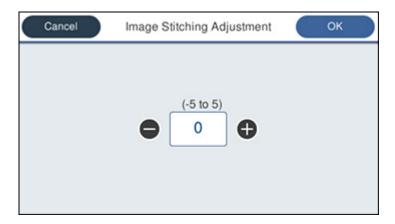


- 3. Tap the adjustment value area to adjust the value directly, or use the +/- buttons to change the value.
 - Shifting the value of the adjustment by 1 will correct the misalignment by approximately 0.1 mm.

Increase the value to correct alignment like this:



Decrease the value to correct alignment like this:



4. Select **OK** to finish entering the value.

Parent topic: Scanned Image is Misaligned

Lines Appear on Scanned or Copied Documents

If lines appear on copy results or scanned images, clean the inside of the scanner.

Parent topic: Solving Scanning Problems

Related tasks


Cleaning the Integrated Scanner

Scanned Image Size Does Not Match Print Size

If your roll paper printouts need to match the length of your scanned or copied files exactly, you can adjust the document feed.

- 1. Press the nhome button, if necessary.
- 2. Select Settings > General Settings > Scan Settings > Scan Options > Document Feed Adjustment.

You see a screen like this:

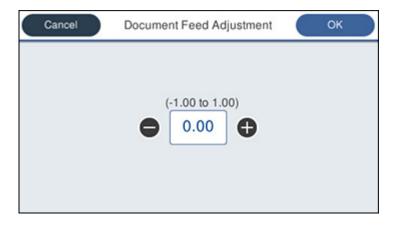

3. Tap the adjustment value area to adjust the value directly, or use the +/- buttons to change the value.

The adjustment value is calculated using the following formula:

[Length of Original]/[Length of Print Result]×100-100 with the result rounded at the second decimal.

For example, if the length of the original is 50 cm, and the print result is 50.1 cm, the formula would look like:

 $50 / 50.1 \times 100 - 100 = -0.1996$ rounded to -0.2

You would enter -0.2 as the adjustment value.

4. Select **OK** to enter the value.

Parent topic: Solving Scanning Problems

Uninstall Your Product Software

If you have a problem that requires you to uninstall and re-install your software, follow the instructions for your operating system.

Uninstalling Product Software - Windows Uninstalling Product Software - Mac

Parent topic: Solving Problems

Uninstalling Product Software - Windows

You can uninstall and then re-install your printer software to solve certain problems.

- 1. Turn off the product.
- 2. Disconnect any interface cables.
- 3. Do one of the following:
 - Windows 10: Right-click and select Control Panel > Programs > Programs and Features. Select the uninstall option for your Epson product, then select Uninstall/Change.

Note: If you see a User Account Control window, click Yes or Continue.

Select your product again, if necessary, then select **OK**, and click **Yes** to confirm the uninstallation.

Windows 8.x: Navigate to the Apps screen and select Control Panel > Programs > Programs and Features. Select the uninstall option for your Epson product, then select Uninstall/Change.

Note: If you see a User Account Control window, click Yes or Continue.

Select your product again, if necessary, then select **OK**, and click **Yes** to confirm the uninstallation.

• Windows (other versions): Click or Start, and select All Programs or Programs. Select Epson, select your product, then click EPSON Printer Software Uninstall.

Note: If you see a User Account Control window, click Yes or Continue.

In the next window, select your product and click **OK**. Then follow any on-screen instructions.

4. Restart your computer, then re-install your software.

Note: If re-installing your product software does not solve a problem, contact Epson support.

Parent topic: Uninstall Your Product Software

Uninstalling Product Software - Mac

In most cases, you do not need to uninstall your product software before re-installing it. However, you can download the Uninstaller utility from the Epson support website to uninstall your product software as described here.

Note: If re-installing your product software does not solve a problem, contact Epson support.

- 1. To download the Uninstaller utility, visit epson.com/support (U.S.), epson.ca/support (Canada), or latin.epson.com/support (Caribbean) and select your product.
- 2. Click Downloads.
- 3. Select your operating system, click **Utilities**, locate the Uninstaller utility, and click **Download**. (If you do not see an Uninstaller utility, search for "Uninstaller" using the site search field.)
- 4. Run the file you downloaded.
- 5. Double-click the **Uninstaller** icon.
- 6. In the Epson Uninstaller screen, select the checkbox for each software program you want to uninstall.
- 7. Click Uninstall.
- 8. Follow the on-screen instructions to uninstall the software.
- 9. Reinstall your product software.

Note: If you uninstall the printer driver and your product name remains in the **Print & Fax**, **Print & Scan**, or **Printers & Scanners** window, select your product name and click the – (remove) icon to remove it.

Parent topic: Uninstall Your Product Software

Where to Get Help (U.S. and Canada)

Epson provides technical support and information on the installation, configuration, and operation of professional printing products through the Epson Preferred Limited Warranty Plan. Dial (888) 377-6611, 6 AM to 6 PM, Pacific Time, Monday through Friday. Days and hours of support are subject to change without notice.

Note: If you experience difficulty with the toll-free number, call (562) 276-1305 (U.S.).

Before you call, make sure you have your printer serial number and proof of purchase.

Visit epson.com/support (U.S.) or epson.ca/support (Canada) and select your product for solutions to common problems. You can download drivers, firmware, and documentation, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

Note: For help using any other software on your system, see the documentation for that software for technical support information.

Purchase Supplies and Accessories

You can purchase genuine Epson ink, paper, and accessories from an Epson authorized reseller. To find the nearest reseller, visit proimaging.epson.com (U.S.) or proimaging.epson.ca (Canada), select your product series and product, and click the **Where to Buy** button. Or call 800-GO-EPSON (800-463-7766) in the U.S. or 800-807-7766 in Canada.

Parent topic: Solving Problems

Where to Get Help (Latin America)

If you need additional help with your Epson product, contact Epson.

Epson provides these technical support services:

Internet Support

Visit Epson's support website at latin.epson.com/support and select your product for solutions to common problems. You can download drivers, firmware, and documentation, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

Note: For help using any other software on your system, see the documentation for that software for technical support information.

Speak to a Support Representative

Before you call Epson for support, please have the following information ready:

- Product name
- Product serial number (located on a label on the product)
- Proof of purchase (such as a store receipt) and date of purchase
- · Computer configuration
- Description of the problem

Then call:

Country	Telephone
Argentina	(54 11) 5167-0300
	0800-288-37766
Bolivia*	800-100-116
Brazil	SureColor T3170M:
	State capitals and metropolitan areas: 3004-6627
	Other areas: 0800-377-6627 / 0800-EPSONBR
	SureColor T5170M: 0800-007-5000
Chile	(56 2) 2484-3400
Colombia	Bogota: (57 1) 592-2200
	Other cities: 018000-915235
Costa Rica	800-377-6627
Ecuador*	1-800-000-044
El Salvador*	800-6570
Guatemala*	1-800-835-0358
Mexico	Mexico City: (52 55) 1323-2052
	Other cities: 01-800-087-1080
Nicaragua*	00-1-800-226-0368
Panama*	00-800-052-1376
Paraguay	009-800-521-0019
Peru	Lima: (51 1) 418-0210
	Other cities: 0800-10-126
Uruguay	00040-5210067
Venezuela	(58 212) 240-1111

^{*} Contact your local phone company to call this toll-free number from a mobile phone.

If your country does not appear in the list, contact the sales office in the nearest country. Toll or long distance charges may apply.

Purchase Supplies and Accessories

You can purchase genuine Epson ink, paper, and accessories from an Epson authorized reseller. To find the nearest reseller, visit latin.epson.com or call your nearest Epson sales office

Parent topic: Solving Problems

Technical Specifications

These sections list the technical specifications for your product.

Note: Epson offers a recycling program for end of life Epson products. Please go to this site (U.S) or this site (Canada) for information on how to return your Epson products for proper disposal.

Windows System Requirements

Mac System Requirements

Paper Specifications

Printable Area Specifications

Ink Cartridge Specifications

Dimension Specifications

Electrical Specifications

Environmental Specifications

Interface Specifications

Network Interface Specifications

Scanning Specifications

Safety and Approvals Specifications

Windows System Requirements

To use your product and its software, your computer should meet these requirements.

Microsoft Windows OS version (32- and 64-bit compatible)	Windows 10, Windows 8.x, Windows 7, Windows Server 2019, Windows Server 2016, Windows Server 2012 R2, Windows Server 2012, Windows Server 2008 R2, Windows Server 2008, Windows Server 2003 R2, Windows Server 2003 SP2 or later
CPU	Core 2 Duo 3.05 GHz or better
Memory	1GB or more
Hard disk space available	32GB or more
Display resolution	WXGA (1280 × 800) or higher

Note: For the latest product software available for your operating system, visit the Epson support site at epson.com/support (U.S.), epson.ca/support (Canada), or latin.epson.com/support (Latin America), select your product, and select **Downloads**.

Parent topic: Technical Specifications

Mac System Requirements

To use your product and its software, your Mac should meet these requirements.

OS X version	Mac OS X 10.7 through macOS 11.x
CPU	Core 2 Duo 3.05 GHz or better
Memory	4GB or more
Hard disk space available	32GB or more
Display resolution	WXGA+ (1440 × 900) or higher

Note: For the latest product software available for your operating system, visit the Epson support site at epson.com/support (U.S.), epson.ca/support (Canada), or latin.epson.com/support (Latin America), select your product, and select **Downloads**.

Parent topic: Technical Specifications

Paper Specifications

Note: Since the quality of any particular brand or type of paper may be changed by the manufacturer at any time, Epson cannot guarantee the quality of any non-Epson brand or type of paper. Always test a sample of paper stock before purchasing large quantities or printing large jobs.

Roll paper

Core size 2 inches (51 mm)

Outer diameter Up to 4.33 inches (110 mm)

Width SureColor T3170M: 13 to 24 inches (329 to 610 mm)

SureColor T5170M: 13 to 36 inches (329 to 914 mm)

Thickness 0.002 to 0.008 inch (0.05 to 0.21 mm)

Weight Up to 6.61 lbs (3 kg)

Cut sheet paper (auto sheet feeder)

Size A4 (8.3 × 11.7 inches [210 × 297 mm])

A3 (11.7 × 16.5 inches [297 × 420 mm]) Letter (8.5 × 11 inches [216 × 279 mm]) Legal (8.5 × 14 inches [216 × 356 mm])

Thickness 0.005 to 0.01 inch (0.12 to 0.27 mm)

Loading capacity Plain paper: 50 sheets

Other paper types: 5 sheets

Cut sheet paper (1 sheet)

Width SureColor T3170M: 8.23 to 24 inches (210 to 610 mm)

SureColor T5170M: 8.23 to 36 inches (210 to 914 mm)


Length 11 to 46.8 inches (279.4 to 1189 mm)

Thickness 0.005 to 0.01 inch (0.12 to 0.27 mm)

Parent topic: Technical Specifications

Printable Area Specifications

Roll paper

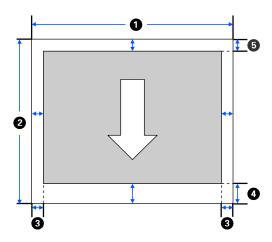

Note: Margins may change depending on the **Top/Bottom Margins** setting that you select. The numbers below are the standard settings. If you select **Print Banner** on the printer driver's Layout tab, the top and bottom margins are set to 0.

1 Media width:

SureColor T3170M: 12.95 to 24 inches (329 to 610 mm)


SureColor T5170M: 12.95 to 36 inches (329 to 914 mm)

2 Media length: 11 to 3582.67 inches (279.4 to 91000 mm)

Note: Actual maximum print length depends on print application, paper size, printer driver settings, and the computer environment.


- 3 Left/right margin: 0.12 inch (3 mm) minimum
- 4 Bottom margin: 0.12 to 1.77 inches (3 to 45 mm)
- 5 Top margin: 0.12 to 1.18 inches (3 to 30 mm)

Cut sheet (auto sheet feeder)

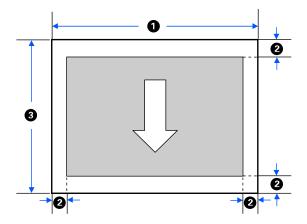

- 1 Media width: 8.27 to 11.69 inches (210 to 297 mm)
- 2 Left/right/top/bottom margin: 0.12 inch (3 mm)
- 3 Media length: 10.98 to 16.54 inches (279 to 420 mm)

Cut sheet (1 sheet)

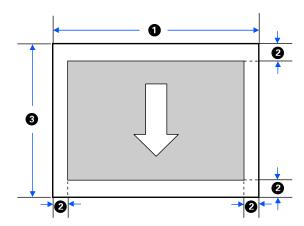

1 Media width:

SureColor T3170M: 8.27 to 24 inches (210 to 610 mm) **SureColor T5170M**: 8.27 to 36 inches (210 to 914 mm)

2 Left/right/top/bottom margin: 0.12 inch (3 mm)

3 Media length: 11 to 50.87 inches (279.4 to 1292 mm)

Parent topic: Technical Specifications

Ink Cartridge Specifications

Note: We recommend that you use genuine Epson cartridges and do not refill them. The use of other products may affect your print quality and could result in printer damage.

The cartridges included with the printer are designed for printer setup and not for resale. After some ink is used for charging, the rest is available for printing. Yields vary considerably based on images printed, print settings, paper type, frequency of use, and temperature. For print quality, a variable amount of ink remains in the cartridge after the "replace cartridge" indicator comes on.

Type Epson ink cartridges

Pigment ink Cyan, Magenta, Yellow, Black

Cartridge life See the expiration date on the package or cartridge

Print quality guarantee 6 months after unpacking

Temperature Transportation (in package): –4 to 140 °F (–20 to 60°C)

Storage (in package and after installation): -4 to 104 °F (-20 to

40°C)

1 month at 104°F (40°C) Ink freezes at 9°F (–13°C)

Ink thaws and is usable after 3 hours at 77°F (25°C)

Cartridge dimensions 80 ml:

Width: 1.61 inches (41 mm)
Depth: 3.82 inches (97 mm)
Height: 1.95 inches (49.5 mm)

50 ml/26 ml:

Width: 1.06 inches (27 mm)
Depth: 3.82 inches (97 mm)
Height: 1.95 inches (49.5 mm)

Parent topic: Technical Specifications

Related references

Ink Cartridge and Maintenance Box Part Numbers

Dimension Specifications

Dimensions include the open paper basket, output tray, and document support.

SureColor T3170M

 Height
 13.15 inches (334 mm)

 Width
 38.19 inches (970 mm)

 Depth
 37.32 inches (948 mm)

 Weight
 Approx. 75 lbs (34 kg)

(without ink cartridges or output

tray)

SureColor T5170M

 Height
 40.04 inches (1017 mm)

 Width
 49.92 inches (1268 mm)

 Depth
 38.67 inches (982 mm)

Weight Approximately 121 lb (55 kg)

(without ink cartridges or output tray)

Parent topic: Technical Specifications

Electrical Specifications

Power supply rating100 to 240 VRated frequency range50/60 Hz

Rated current 1.4 A

Power consumption SureColor T3170M:

Printing: approximately 24 W

Ready mode: approximately 11 W Sleep mode: approximately 2.0 W Power off mode: approximately 0.2 W

SureColor T5170M:

Printing: approximately 26 W

Ready mode: approximately 12 W Sleep mode: approximately 2.0 W Power off mode: approximately 0.2 W

Parent topic: Technical Specifications

Environmental Specifications

Temperature Operating: 50 to 95 °F (10 to 35 °C)

Operating (recommended): 59 to 77 °F (15 to 25 °C) Storage (before unpacking): –4 to 140 °F (–20 to 60 °C)

1 month at 104 °F (40 °C)

Storage (after unpacking): 14 to 104 °F (-10 to 40 °C)

1 month at 104 °F (40 °C)

Humidity Operating: 20 to 80% RH

(non-condensing) Operating (recommended): 40 to 60% RH

Storage: 5 to 85% RH

Parent topic: Technical Specifications

Interface Specifications

Interface type High-Speed USB port compatible with USB 2.0 specification (for

connection of USB drive for printing/scanning)

SuperSpeed USB port compatible with USB 3.0 specification (USB

port)

Parent topic: Technical Specifications

Network Interface Specifications

Wi-Fi

Standards IEEE802.11b/g/n; IEEE802.11n is only available for the HT20

Securities WEP (64/128bit)

WPA-PSK (TKIP)

WPA2-PSK (AES) (complies with WPA2 standards with support for

WPA/WPA2 Personal)

Frequency range 2.4 GHz

Communication mode Infrastructure

Wi-Fi Direct (Simple AP) (not supported for IEEE802.11b)

Security Protocols

• SSL/TLS (HTTPS Server/Client, IPPS)

• IEEE802.1X

IPsec/IP Filtering

• SMTPS (STARTTLS, SSL/TLS

• SNMPv3

• SMB3.1.1

• FTPS (Explicit mode)

Ethernet

Standards IEEE802.3i (10BASE-T)

IEEE802.3u (100BASE-TX) IEEE802.3ab (1000BASE-T)

IEEE802.3az (Energy Efficient Ethernet); connected device should

comply with IEEE802.3az standards

Note: Use a category 5 or higher shielded twisted pair cable for all interfaces.

Parent topic: Technical Specifications

Scanning Specifications

Scanner type Color Simplex Sheet-Fed Scanner

Photoelectric device CIS

Built-in memory 1.0 GB (standard) + 8.0 GB (for processing scanner data)

Effective pixels SureColor T3170M:14400 pixels (600 dpi) (main scanning direction) SureColor T5170M: 21600 pixels (600 dpi)

Document size Maximum:

SureColor T3170M: 24 × 107 inches* (606.9 × 2720 mm) **SureColor T5170M**: 36 × 107 inches* (914.4 × 2720 mm)

Minimum: 5.8×5.8 inches (148 × 148 mm)

Document thickness 0.002 to 0.02 inches (0.06 to 0.5 mm)

Scanning resolution 600 dpi (main scan)

600 dpi (sub scan)

Output resolution 200, 300, 400, 600 dpi

Image data Color:

30-bit input (10 bits per pixel per color internal) 24-bit output (8 bits per pixel per color internal)

Grayscale: 10-bit input 8-bit output

Black and white: 10 bits input 1 bit output

Light source RGB 3-color LED

Parent topic: Technical Specifications

Safety and Approvals Specifications

United States Safety: UL62368-1

EMC: FCC part 15 Subpart B class B

Canada Safety: CAN/CSA C22.2 No. 62368-1

EMC: ICES-003 Class B

^{*} Maximum length when scanning at 600 dpi or copying at Fine or Super Fine quality: 105.2 inches (2672 mm)

This equipment contains the following wireless module:

· Manufacturer: Epson

• Type: J26H006

This product conforms to Part 15 of FCC Rules and RSS-210 of the IC Rules. Epson cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

To prevent radio interference to the licensed service, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated so that the radiator is kept at least 7.9 inches (20 cm) or more away from a person's body (excluding extremities: hands, wrists, feet and ankles).

Parent topic: Technical Specifications

Notices

Check these sections for important notices about your product.

Note: Epson offers a recycling program for end of life Epson products. Please go to this site (U.S) or this site (Canada) for information on how to return your Epson products for proper disposal.

Important Safety Instructions
FCC Compliance Statement
Binding Arbitration and Class Waiver
Trademarks
Copyright Notice

Important Safety Instructions

Before using your Epson product, read and follow these safety instructions.

General Product Safety Instructions
Ink Cartridge Safety Instructions
LCD Screen Safety Instructions
Wireless Connection Safety Instructions

Parent topic: Notices

General Product Safety Instructions

- Be sure to follow all warnings and instructions marked on the product.
- Use only the type of power source indicated on the product's label.
- Use only the power cord that comes with the product. Use of another cord may cause fires or shock.
 Do not use the cord with any other equipment.
- Place the product near a wall outlet where the plug can be easily unplugged.
- Connect your product to a properly grounded power outlet. Avoid plugging the product into an outlet on the same circuit as a photo copier or air control system that regularly switches on and off, or on an outlet controlled by a wall switch or timer.
- · Make sure the plug is fully inserted into the outlet.

- Do not let the power cord become damaged or frayed. Place it to avoid abrasions, cuts, fraying, crimping, and kinking. Do not place objects on top of it and do not allow it to be stepped on or run over. Be careful to keep the cord straight at each end.
- If you use an extension cord with the product, make sure the total ampere rating of the devices
 plugged into the extension cord does not exceed the cord's ampere rating. Also, make sure the total
 ampere rating of all devices plugged into the wall outlet does not exceed the wall outlet's ampere
 rating.
- If damage occurs to the plug, replace the cord set or consult a qualified electrician. If there are fuses in the plug, make sure you replace them with fuses of the correct size and rating.
- Always turn off the product using the power button, and wait until the power light stops flashing before
 unplugging the product or cutting off power to the electrical outlet.
- If you will not be using the product for a long period, unplug the power cord from the electrical outlet.
- Unplug the plug regularly and clean between the blades and around the base of the blades. If the plug
 is plugged in for an extended period of time, dust collects around the base of the blades and a short
 circuit or fire could occur.
- Place the product on a flat, stable surface that extends beyond its base in all directions. It will not
 operate properly if it is tilted or at an angle.
- Do not tilt the product more than 10 degrees in any direction while moving it. Doing so may cause the product to fall and cause damage or personal injury.
- Do not attempt to move the product alone; two people are required to move the product.
- When lifting the product, place your hands as shown in the *User's Guide*.
- · Use correct posture when lifting the product.
- Make sure to remove all packing materials from the product and installation area.
- Do not attempt to move the product while the casters on the stand or ink unit are secured or the feet on the stand are lowered.
- When moving the product, make sure it is turned off, the power cables are unplugged from the outlets, and all connecting cables have been removed. Avoid steps and uneven surfaces.
- Avoid locations that are subject to rapid changes in heat or humidity, shocks or vibrations, or dust.
- · Do not place or store the product outdoors.
- Do not place the product near excessive heat sources or in direct sunlight.
- Leave enough room around the product for sufficient ventilation. Do not block or cover openings in the cabinet or insert objects through the slots.

- Keep the product away from potential sources of electromagnetic interference, such as loudspeakers or the base units of cordless telephones.
- When connecting the product to a computer or other device with a cable, ensure the correct
 orientation of the connectors. Each connector has only one correct orientation. Inserting a connector
 in the wrong orientation may damage both devices connected by the cable.
- Do not put your hands inside the product and be careful not to trap your hands or fingers when opening or closing the printer covers or maintenance cover. Do not put your hands on the movable base.
- Do not sit on the product or place heavy objects on top of it.
- Do not move the print head by hand; this may damage the product.
- Do not insert or drop metallic or flammable items into the openings on the product.
- Do not spill liquid on the product or use the product with wet hands.
- Do not insert or unplug the plug with wet hands.
- When loading roll paper, hold it by the flange. Otherwise, an injury may occur.
- Do not use aerosol products that contain flammable gases inside or around the product. Doing so may cause fire.
- Except as specifically explained in your documentation, do not attempt to service the product yourself.
- Unplug the product and refer servicing to qualified service personnel under the following conditions: if
 the power cord or plug is damaged; if liquid has entered the product; if the product has been dropped
 or the cabinet damaged; if the product does not operate normally or exhibits a distinct change in
 performance. Adjust only those controls that are covered by the operating instructions.
- Leave the ink cartridges installed. Removing the cartridges can dehydrate the print head and may prevent the product from printing.
- Before storing the product, make sure the print head is positioned at the far right.
- When storing or transporting the product, do not tilt it, stand it on its side, or turn it upside down; otherwise ink may leak.
- Do not use the printer in locations with volatile substances such as alcohol or thinner, or near naked flames. An electric shock or fire could occur.
- Do not use the product if it is giving off smoke or if you notice any abnormal odors or noises. An electric shock or fire could occur. If any abnormalities occur, turn off the power and unplug the power cable immediately, then contact your dealer or Epson Support.
- When opening or closing the scanner cover, keep your hands away from the joints between the cover and the body of the product.

Keep your fingers away from the paper ejection rollers when the power is on and during printing. If
your fingers get caught in the paper ejection rollers, they could be injured. Make sure the paper has
been completely ejected before you pick it up.

Note: The lithium batteries in this product contain Perchlorate Material - special handling may apply. Click here for details.

Parent topic: Important Safety Instructions

Ink Cartridge Safety Instructions

- Keep ink cartridges out of the reach of children and do not drink the ink.
- Be careful when you handle used ink cartridges; there may be ink remaining around the ink supply port.
- If ink gets on your skin, wash it off with soap and water. If it gets in your eyes, flush them immediately with water. Failure to observe this precaution could result in bloodshot eyes or mild inflammation. If problems persist, consult a physician. If ink enters your mouth, consult a physician immediately.
- Do not put your hand inside the product or touch any cartridges during printing.
- Install a new ink cartridge immediately after removing an expended one. Leaving cartridges uninstalled can dry out the print head and may prevent the product from printing.
- Install ink cartridges in all the ink cartridge slots. You cannot print if any of the slots are empty.
- Dried ink on the supply port may cause ink leaks when the cartridge is reinserted and used. Wipe off any excess ink before reinserting.
- · Do not insert or remove replacement cartridges during printing.
- Do not remove the transparent seal from the ink supply port. This may cause the cartridge to become unusable.
- The green IC chip on this ink cartridge retains a variety of cartridge-related information, such as the ink
 cartridge status, so that the cartridge may be removed and reinserted freely. Do not touch the green IC
 chip on the side of the cartridge. This may prevent normal operation and printing.
- If you remove an ink cartridge for later use, protect the ink supply area from dirt and dust and store it in
 the same environment as the product. Note that there is a valve in the ink supply port, making covers
 or plugs unnecessary, but care is needed to prevent the ink from staining items that the cartridge
 touches. Do not touch the ink cartridge ink supply port or surrounding area.
- To ensure print quality, use an ink cartridge before the date printed on its package.

- Do not dismantle or alter an ink cartridge. This could damage the print head and may prevent the product from printing.
- Do not drop cartridges or bump them against hard objects; otherwise, the ink may leak.
- Store ink cartridges at room temperature in a location that is not exposed to direct sunlight.
- After bringing an ink cartridge inside from a cold storage site, allow it to warm up at room temperature for at least three hours before using it.

Parent topic: Important Safety Instructions

LCD Screen Safety Instructions

- Use only a dry, soft cloth to clean the LCD screen. Do not use liquid or chemical cleansers.
- If the LCD screen is damaged, contact Epson. If the liquid crystal solution gets on your hands, wash them thoroughly with soap and water. If the liquid crystal solution gets into your eyes, flush them immediately with water. If discomfort or vision problems remain after a thorough flushing, see a doctor immediately. If liquid enters your mouth, see a doctor immediately.
- Do not press too hard on the LCD screen or subject it to heavy impacts.
- Do not use a pointy or sharp object, such as a pen or your fingernail, to operate the LCD screen.
- If the LCD screen chips or cracks, do not touch or attempt to remove the broken pieces; contact Epson for support.
- Do not subject your product to sudden changes in temperature or humidity; this may cause condensation to develop inside the LCD screen and degrade its performance.

Parent topic: Important Safety Instructions

Wireless Connection Safety Instructions

Radio waves from this product may adversely affect the operation of medical equipment or automatically controlled devices, such as pacemakers, automatic doors or fire alarms. When using this product near such devices or inside a medical facility, follow the directions from authorized staff members at the facility, and follow all posted warnings and directions on the device to avoid causing an accident.

Parent topic: Important Safety Instructions

FCC Compliance Statement

For United States Users

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful

interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification or Declaration of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

For Canadian Users

CAN ICES-3(B)/NMB-3(B)

Parent topic: Notices

Binding Arbitration and Class Waiver

1. DISPUTES, BINDING INDIVIDUAL ARBITRATION, AND WAIVER OF CLASS ACTIONS AND CLASS ARBITRATIONS

1.1 **Disputes**. The terms of this Section 1 shall apply to all Disputes between you and Epson. The term "Dispute" is meant to have the broadest meaning permissible under law and includes any dispute, claim, controversy or action between you and Epson arising out of or relating to this Agreement, Epson branded products (hardware and including any related software), or other transaction involving you and Epson, whether in contract, warranty, misrepresentation, fraud, tort, intentional tort, statute, regulation, ordinance, or any other legal or equitable basis. "DISPUTE" DOES NOT INCLUDE IP CLAIMS, or more specifically, a claim or cause of action for (a) trademark infringement or dilution, (b) patent infringement, (c) copyright infringement or misuse, or (d) trade secret misappropriation (an "IP Claim"). You and Epson also agree, notwithstanding Section 1.6, that a court, not an arbitrator, may decide if a claim or cause of action is for an IP Claim.

- 1.2 Binding Arbitration. You and Epson agree that all Disputes shall be resolved by binding arbitration according to this Agreement. ARBITRATION MEANS THAT YOU WAIVE YOUR RIGHT TO A JUDGE OR JURY IN A COURT PROCEEDING AND YOUR GROUNDS FOR APPEAL ARE LIMITED. Pursuant to this Agreement, binding arbitration shall be administered by JAMS, a nationally recognized arbitration authority, pursuant to its code of procedures then in effect for consumer related disputes, but excluding any rules that permit joinder or class actions in arbitration (for more detail on procedure, see Section 1.6 below). You and Epson understand and agree that (a) the Federal Arbitration Act (9 U.S.C. §1, et seq.) governs the interpretation and enforcement of this Section 1, (b) this Agreement memorializes a transaction in interstate commerce, and (c) this Section 1 shall survive termination of this Agreement.
- 1.3 **Pre-Arbitration Steps and Notice**. Before submitting a claim for arbitration, you and Epson agree to try, for sixty (60) days, to resolve any Dispute informally. If Epson and you do not reach an agreement to resolve the Dispute within the sixty (60) days), you or Epson may commence an arbitration. Notice to Epson must be addressed to: Epson America, Inc., ATTN: Legal Department, 3131 Katella Ave., Los Alamitos, CA 90720 (the "Epson Address"). The Dispute Notice to you will be sent to the most recent address Epson has in its records for you. For this reason, it is important to notify us if your address changes by emailing us at EAILegal@ea.epson.com or writing us at the Epson Address above. Notice of the Dispute shall include the sender's name, address and contact information, the facts giving rise to the Dispute, and the relief requested (the "Dispute Notice"). Following receipt of the Dispute Notice, Epson and you agree to act in good faith to resolve the Dispute before commencing arbitration.
- 1.4 **Small Claims Court**. Notwithstanding the foregoing, you may bring an individual action in the small claims court of your state or municipality if the action is within that court's jurisdiction and is pending only in that court.
- 1.5 WAIVER OF CLASS ACTIONS AND CLASS ARBITRATIONS. YOU AND EPSON AGREE THAT EACH PARTY MAY BRING DISPUTES AGAINST THE OTHER PARTY ONLY IN AN INDIVIDUAL CAPACITY, AND NOT AS A PLAINTIFF OR CLASS MEMBER IN ANY CLASS OR REPRESENTATIVE PROCEEDING, INCLUDING WITHOUT LIMITATION FEDERAL OR STATE CLASS ACTIONS, OR CLASS ARBITRATIONS. CLASS ACTION LAWSUITS, CLASS-WIDE ARBITRATIONS, PRIVATE ATTORNEY-GENERAL ACTIONS, AND ANY OTHER PROCEEDING WHERE SOMEONE ACTS IN A REPRESENTATIVE CAPACITY ARE NOT ALLOWED. ACCORDINGLY, UNDER THE ARBITRATION PROCEDURES OUTLINED IN THIS SECTION, AN ARBITRATOR SHALL NOT COMBINE OR CONSOLIDATE MORE THAN ONE PARTY'S CLAIMS WITHOUT THE WRITTEN CONSENT OF ALL AFFECTED PARTIES TO AN ARBITRATION PROCEEDING.
- 1.6 **Arbitration Procedure**. If you or Epson commences arbitration, the arbitration shall be governed by the rules of JAMS that are in effect when the arbitration is filed, excluding any rules that permit arbitration on a class or representative basis (the "JAMS Rules"), available at http://www.jamsadr.com or by calling 1-800-352-5267, and under the rules set forth in this Agreement. All Disputes shall be resolved by a single neutral arbitrator, and both parties shall have a reasonable opportunity to participate in the

selection of the arbitrator. The arbitrator is bound by the terms of this Agreement. The arbitrator, and not any federal, state or local court or agency, shall have exclusive authority to resolve all disputes arising out of or relating to the interpretation, applicability, enforceability or formation of this Agreement, including any claim that all or any part of this Agreement is void or voidable. Notwithstanding this broad delegation of authority to the arbitrator, a court may determine the limited question of whether a claim or cause of action is for an IP Claim, which is excluded from the definition of "Disputes" in Section 1.1 above. The arbitrator shall be empowered to grant whatever relief would be available in a court under law or in equity. The arbitrator may award you the same damages as a court could, and may award declaratory or injunctive relief only in favor of the individual party seeking relief and only to the extent necessary to provide relief warranted by that party's individual claim. In some instances, the costs of arbitration can exceed the costs of litigation and the right to discovery may be more limited in arbitration than in court. The arbitrator's award is binding and may be entered as a judgment in any court of competent jurisdiction.

You may choose to engage in arbitration hearings by telephone. Arbitration hearings not conducted by telephone shall take place in a location reasonably accessible from your primary residence, or in Orange County, California, at your option.

- a) Initiation of Arbitration Proceeding. If either you or Epson decides to arbitrate a Dispute, both parties agree to the following procedure:
- (i) Write a Demand for Arbitration. The demand must include a description of the Dispute and the amount of damages sought to be recovered. You can find a copy of a Demand for Arbitration at http://www.jamsadr.com ("Demand for Arbitration").
- (ii) Send three copies of the Demand for Arbitration, plus the appropriate filing fee, to: JAMS, 500 North State College Blvd., Suite 600 Orange, CA 92868, U.S.A.
- (iii) Send one copy of the Demand for Arbitration to the other party (same address as the Dispute Notice), or as otherwise agreed by the parties.
- b) Hearing Format. During the arbitration, the amount of any settlement offer made shall not be disclosed to the arbitrator until after the arbitrator determines the amount, if any, to which you or Epson is entitled. The discovery or exchange of non-privileged information relevant to the Dispute may be allowed during the arbitration.
- c) Arbitration Fees. Epson shall pay, or (if applicable) reimburse you for, all JAMS filings and arbitrator fees for any arbitration commenced (by you or Epson) pursuant to provisions of this Agreement.
- d) Award in Your Favor. For Disputes in which you or Epson seeks \$75,000 or less in damages exclusive of attorney's fees and costs, if the arbitrator's decision results in an award to you in an amount greater than Epson's last written offer, if any, to settle the Dispute, Epson will: (i) pay you \$1,000 or the amount of the award, whichever is greater; (ii) pay you twice the amount of your reasonable attorney's fees, if any; and (iii) reimburse you for any expenses (including expert witness fees and costs) that your attorney reasonably accrues for investigating, preparing, and pursuing the Dispute in arbitration. Except as

agreed upon by you and Epson in writing, the arbitrator shall determine the amount of fees, costs, and expenses to be paid by Epson pursuant to this Section 1.6d).

- e) Attorney's Fees. Epson will not seek its attorney's fees and expenses for any arbitration commenced involving a Dispute under this Agreement. Your right to attorney's fees and expenses under Section 1.6d) above does not limit your rights to attorney's fees and expenses under applicable law; notwithstanding the foregoing, the arbitrator may not award duplicative awards of attorney's fees and expenses.
- 1.7 Opt-out. You may elect to opt-out (exclude yourself) from the final, binding, individual arbitration procedure and waiver of class and representative proceedings specified in this Agreement by sending a written letter to the Epson Address within thirty (30) days of your assent to this Agreement (including without limitation the purchase, download, installation of the Software or other applicable use of Epson Hardware, products and services) that specifies (i) your name, (ii) your mailing address, and (iii) your request to be excluded from the final, binding individual arbitration procedure and waiver of class and representative proceedings specified in this Section 1. In the event that you opt-out consistent with the procedure set forth above, all other terms shall continue to apply, including the requirement to provide notice prior to litigation.
- 1.8 **Amendments to Section 1**. Notwithstanding any provision in this Agreement to the contrary, you and Epson agree that if Epson makes any future amendments to the dispute resolution procedure and class action waiver provisions (other than a change to Epson's address) in this Agreement, Epson will obtain your affirmative assent to the applicable amendment. If you do not affirmatively assent to the applicable amendment, you are agreeing that you will arbitrate any Dispute between the parties in accordance with the language of this Section 1 (or resolve disputes as provided for in Section 1.7, if you timely elected to opt-out when you first assented to this Agreement).
- 1.9 Severability. If any provision in this Section 1 is found to be unenforceable, that provision shall be severed with the remainder of this Agreement remaining in full force and effect. The foregoing shall not apply to the prohibition against class or representative actions as provided in Section 1.5. This means that if Section 1.5 is found to be unenforceable, the entire Section 1 (but only Section 1) shall be null and void.

Parent topic: Notices

Trademarks

EPSON®, SureColor®, and PrecisionCore® are registered trademarks and EPSON Exceed Your Vision is a registered logomark of Seiko Epson Corporation.

Windows is a registered trademark of Microsoft Corporation in the United States and/or other countries.

Apple, App Store, AirPrint, AirPrint logo, iPad, iPhone, iPod touch, Mac, and OS X are trademarks of Apple Inc., registered in the U.S. and other countries.

Wi-Fi Direct® is a registered trademark of Wi-Fi Alliance®.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.



Parent topic: Notices

Copyright Notice

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. The information contained herein is designed only for use with this Epson product. Epson is not responsible for any use of this information as applied to other products.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

Seiko Epson Corporation shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as Epson approved Products by Seiko Epson Corporation.

This information is subject to change without notice.

A Note Concerning Responsible Use of Copyrighted Materials Default Delay Times for Power Management for Epson Products Copyright Attribution

Parent topic: Notices

A Note Concerning Responsible Use of Copyrighted Materials

Epson encourages each user to be responsible and respectful of the copyright laws when using any Epson product. While some countries' laws permit limited copying or reuse of copyrighted material in certain circumstances, those circumstances may not be as broad as some people assume. Contact your legal advisor for any questions regarding copyright law.

Parent topic: Copyright Notice

Default Delay Times for Power Management for Epson Products

This product will enter sleep mode after a period of nonuse. This is to ensure that the product meets Energy Star standards of energy efficiency. More energy savings can be achieved by setting the time to sleep to a shorter interval.

Parent topic: Copyright Notice

Copyright Attribution

© 2021 Epson America, Inc.

4/21

CPD-60355R2

Parent topic: Copyright Notice

